



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on SCR system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>5</b>
2.1 Engine number/engine data	5
<b>3 Repair instructions</b>	<b>8</b>
3.1 Rules for cleanliness	8
3.2 Foreign bodies in engine	8
3.3 Contact corrosion	8
3.4 Routing and attachment of lines	9
3.5 Fitting radiator and condensers	9
<b>4 Technical data</b>	<b>11</b>
4.1 Coolant	12
<b>10 - Removing and installing engine</b>	<b>14</b>
<b>1 Removing and installing engine</b>	<b>14</b>
1.1 Removing engine	14
1.2 Separating engine and gearbox	27
1.3 Securing engine on engine and gearbox support	31
1.4 Installing engine	33
<b>2 Assembly mountings</b>	<b>39</b>
2.1 Assembly overview - assembly mountings	39
2.2 Removing and installing engine mounting	41
2.3 Removing and installing gearbox mounting	42
2.4 Removing and installing pendulum support	44
2.5 Supporting engine in installation position	46
2.6 Adjusting assembly mountings	56
2.7 Checking adjustment of assembly mountings	58
<b>3 Engine cover panel</b>	<b>59</b>
3.1 Removing and installing engine cover	59
<b>13 - Crankshaft group</b>	<b>60</b>
<b>1 Cylinder block (pulley end)</b>	<b>60</b>
1.1 Assembly overview - cylinder block (pulley end)	60
1.2 Assembly overview - sealing flange, belt pulley end	62
1.3 Removing and installing poly-V belt	64
1.4 Removing and installing tensioner for poly V-belt	65
1.5 Removing and installing vibration damper	66
1.6 Removing and installing bracket for ancillaries	67
1.7 Removing and installing engine support	69
1.8 Removing and installing sealing flange on pulley end	70
1.9 Renewing caps in cylinder block (pulley end)	73
<b>2 Cylinder block, gearbox end</b>	<b>75</b>
2.1 Assembly overview - cylinder block, gearbox end	75
2.2 Removing and installing flywheel	76
2.3 Removing and installing sealing flange on gearbox side	79
2.4 Renewing caps in cylinder block (gearbox end)	99



<b>3</b>	<b>Crankshaft</b>	<b>101</b>
3.1	Assembly overview - crankshaft	101
3.2	Crankshaft dimensions	103
3.3	Renewing needle bearing in crankshaft	103
3.4	Measuring axial clearance of crankshaft	106
<b>4</b>	<b>Pistons and conrods</b>	<b>108</b>
4.1	Assembly overview - pistons and conrods	108
4.2	Removing and installing pistons	112
4.3	Measuring piston projection at TDC	113
4.4	Checking pistons and cylinder bores	116
4.5	Separating new conrod	118
4.6	Checking radial clearance of conrods	119
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>120</b>
<b>1</b>	<b>Cylinder head</b>	<b>120</b>
1.1	Assembly overview - cylinder head	120
1.2	Assembly overview - cylinder head cover	124
1.3	Removing and installing cylinder head	126
1.4	Removing and installing cylinder head cover	137
1.5	Removing and installing injector seals	139
1.6	Removing and installing camshaft housing	140
1.7	Checking compression	146
<b>2</b>	<b>Toothed belt drive</b>	<b>149</b>
2.1	Assembly overview - toothed belt cover	149
2.2	Assembly overview - toothed belt	149
2.3	Removing and installing toothed belt guard	151
2.4	Removing and installing toothed belt	158
2.5	Removing toothed belt from camshaft	172
<b>3</b>	<b>Valve gear</b>	<b>177</b>
3.1	Assembly overview - valve gear	177
3.2	Measuring axial play of camshaft	181
3.3	Removing and installing camshaft oil seal	182
3.4	Removing and installing camshaft adjuster	184
3.5	Removing and installing camshaft control valve 1 N205	191
3.6	Checking hydraulic compensation elements	191
3.7	Removing and installing valve stem oil seals	192
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>203</b>
4.1	Checking valve guides	203
4.2	Checking valves	204
4.3	Valve dimensions	204
<b>17</b>	<b>- Lubrication</b>	<b>205</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>205</b>
1.1	Assembly overview - sump/oil pump	205
1.2	Engine oil:	212
1.3	Removing and installing oil sump	213
1.4	Removing and installing lower part of sump	217
1.5	Removing and installing upper part of sump	221
1.6	Removing and installing oil pump	225
1.7	Removing and installing oil level and oil temperature sender G266	226
<b>2</b>	<b>Engine oil cooler</b>	<b>229</b>
<b>3</b>	<b>Oil filter, oil pressure switch</b>	<b>230</b>
3.1	Assembly overview - oil filter housing, oil pressure switch	230
3.2	Removing and installing oil pressure switch F1	232
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	234



3.4	Checking oil pressure	236
3.5	Removing and installing oil filter housing	236
3.6	Removing and installing oil pressure regulating valve N428	240
<b>4</b>	<b>Oil circuit</b>	<b>241</b>
4.1	Removing and installing oil supply line	241
4.2	Removing and installing oil return line for turbocharger	242
<b>19</b>	<b>Cooling</b>	<b>244</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>244</b>
1.1	Connection diagram - coolant hoses	244
1.2	Checking cooling system for leaks	251
1.3	Draining coolant	254
1.4	Filling with coolant	257
1.5	Checking filling quality of cooling system	270
1.6	Checking electric vacuum pump VAS 6096/2	272
1.7	Flushing cooling system	273
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>297</b>
2.1	Assembly overview - coolant pump, thermostat	297
2.2	Assembly overview - electric coolant pump	301
2.3	Assembly overview - coolant temperature sender	307
2.4	Removing and installing electric coolant pump	309
2.5	Removing and installing coolant pump	327
2.6	Removing and installing thermostat	328
2.7	Checking thermostat	332
2.8	Removing and installing coolant valve for cylinder head N489	332
2.9	Removing and installing coolant temperature sender G62	333
<b>3</b>	<b>Coolant pipes</b>	<b>335</b>
3.1	Assembly overview - coolant pipes	335
3.2	Removing and installing coolant pipes	337
<b>4</b>	<b>Radiator, radiator fan</b>	<b>353</b>
4.1	Assembly overview - radiator/radiator fan	353
4.2	Assembly overview - radiator cowl and radiator fan	357
4.3	Assembly overview - radiator blind	359
4.4	Removing and installing radiator	362
4.5	Removing and installing water radiator for charge air cooling circuit	365
4.6	Removing and installing radiator cowl	369
4.7	Removing and installing radiator fan	372
4.8	Removing and installing radiator blind	373
4.9	Removing and installing radiator blind control motor V544	375
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>381</b>
<b>1</b>	<b>Turbocharger</b>	<b>381</b>
1.1	Assembly overview - turbocharger	381
1.2	Removing and installing turbocharger	389
1.3	Renewing vacuum unit for turbocharger	406
1.4	Removing and installing connection for turbocharger	419
<b>2</b>	<b>Charge air system</b>	<b>422</b>
2.1	Assembly overview - charge air system	422
2.2	Removing and installing charge pressure sender G31	425
2.3	Checking charge air system for leaks	425
2.4	Checking charge air cooler for leaks	428
2.5	Removing and installing air intake pipe	433
<b>23</b>	<b>Mixture preparation - injection</b>	<b>436</b>
<b>1</b>	<b>Injection system</b>	<b>436</b>



1.1	Schematic overview - fuel system	436
1.2	Overview of fitting locations - injection system	438
1.3	Filling/bleeding fuel system	450
1.4	Checking fuel system for leaks	451
<b>2</b>	<b>Vacuum system</b>	<b>452</b>
2.1	Connection diagram – vacuum system	452
2.2	Checking vacuum system	453
<b>3</b>	<b>Injectors/high-pressure accumulator (rail)</b>	<b>454</b>
3.1	Assembly overview - injectors	454
3.2	Assembly overview - fuel rail	456
3.3	Adapting correction values for injectors	457
3.4	Testing injectors	458
3.5	Checking return flow rate of injectors with engine running	459
3.6	Checking return flow rate of injectors at starter speed	461
3.7	Checking open injectors	463
3.8	Removing and installing injectors	464
3.9	Removing and installing high-pressure lines	468
3.10	Removing and installing fuel rail	471
<b>4</b>	<b>Air filter</b>	<b>473</b>
4.1	Assembly overview - air filter housing	473
4.2	Removing and installing air filter housing	476
<b>5</b>	<b>Intake manifold</b>	<b>478</b>
5.1	Assembly overview – intake manifold	478
5.2	Removing and installing intake manifold	482
5.3	Removing and installing throttle valve module J338	487
<b>6</b>	<b>Senders and sensors</b>	<b>491</b>
6.1	Removing and installing fuel pressure regulating valve N276	491
6.2	Checking fuel pressure regulating valve N276	496
6.3	Removing and installing fuel pressure sender G247	497
6.4	Removing and installing air mass meter G70	499
6.5	Removing and installing pressure differential sender G505	501
6.6	Removing and installing exhaust gas pressure sensor 1 G450	504
6.7	Removing and installing NOx sender 2 G687	505
6.8	Removing and installing charge air temperature sender ahead of charge air cooler G810	507
6.9	Removing and installing charge air temperature sender after charge air cooler G811	508
6.10	Removing and installing fuel temperature sender G81	508
6.11	Removing and installing control unit for NOx sender GX30	510
6.12	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	518
<b>7</b>	<b>Engine/motor control unit</b>	<b>520</b>
7.1	Removing and installing engine control unit J623	520
<b>8</b>	<b>High-pressure pump</b>	<b>527</b>
8.1	Assembly overview - high-pressure pump	527
8.2	Removing and installing high-pressure pump	528
<b>9</b>	<b>Lambda probe</b>	<b>532</b>
9.1	Assembly overview - Lambda probe	532
9.2	Removing and installing lambda probe	535
<b>26</b>	<b>Exhaust system</b>	<b>539</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>539</b>
1.1	Assembly overview – silencers	539
1.2	Assembly overview - front exhaust pipe	545
1.3	Removing and installing front exhaust pipe	547
1.4	Separating exhaust pipes from silencers	548
1.5	Removing and installing rear silencer	550



1.6	Aligning exhaust system free of stress	552
1.7	Checking exhaust system for leaks	553
1.8	Installation position of clamp	553
<b>2</b>	<b>Emission control</b>	<b>556</b>
2.1	Assembly overview – emission control	556
2.2	Removing and installing catalytic converter	561
2.3	Removing and installing particulate filter	563
2.4	Removing and installing emission control module	563
2.5	Removing and installing exhaust flap control unit J883	575
<b>3</b>	<b>SCR system (selective catalytic reduction)</b>	<b>577</b>
3.1	Assembly overview – reducing agent tank	577
3.2	Assembly overview - reducing agent supply line	579
3.3	Assembly overview - delivery module for reducing agent	580
3.4	Removing and installing reducing agent tank	580
3.5	Removing and installing front section of reducing agent supply line	583
3.6	Removing and installing delivery module for reducing agent	592
3.7	Removing and installing injector for reduction agent N474	595
3.8	Removing and installing control unit for reducing-agent heater J891	598
3.9	Assembly overview - injector for reducing agent	601
3.10	Draining reducing agent tank	603
3.11	Removing and installing rear section of reducing agent supply line	606
3.12	Removing and installing filler pipe for reducing agent tank	607
3.13	Disconnecting reducing agent supply line	609
3.14	SCR - resetting learnt values	612
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>614</b>
4.1	Assembly overview – exhaust gas temperature regulation	614
4.2	Removing and installing exhaust gas temperature sender 1 G235	618
4.3	Removing and installing exhaust gas temperature sender 2 G448	624
4.4	Removing and installing exhaust gas temperature sender 3 G495	632
4.5	Removing and installing exhaust gas temperature sender 4 G648	635
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>638</b>
5.1	Assembly overview – exhaust gas recirculation	638
5.2	Assembly overview - exhaust gas recirculation valve 1 GX5	642
5.3	Removing and installing exhaust gas recirculation cooler	643
5.4	Removing and installing exhaust gas recirculation valve 1 GX5	650
5.5	Removing and installing exhaust gas recirculation valve 2 GX6	652
5.6	Removing and installing exhaust gas recirculation temperature sensor G98	653
5.7	Checking exhaust gas recirculation cooler for leaks	656
<b>28</b>	<b>Glow plug system</b>	<b>657</b>
<b>1</b>	<b>Glow plug system</b>	<b>657</b>
1.1	Assembly overview – glow plug system	657
1.2	Removing and installing glow plug	659
1.3	Removing and installing automatic glow period control unit J179	662
1.4	Removing and installing Hall sender G40	662
1.5	Removing and installing engine speed sender G28	663