



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety regulations for working on fuel supply | 1 |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 1.3 Safety measures when working on vehicles with a start/stop system | 2 |
| 1.4 Safety notes and safety precautions when working on vehicles with a high-voltage system | 2 |
| 1.5 Safety precautions when working in the vicinity of high-voltage components | 4 |
| 2 Identification | 5 |
| 2.1 Engine number/engine data | 5 |
| 3 General information | 6 |
| 3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system | 6 |
| 4 Repair instructions | 7 |
| 4.1 Routing and attachment of lines | 7 |
| 4.2 General repair notes | 7 |
| 20 - Fuel supply system | 8 |
| 1 Fuel | 8 |
| 1.1 Assembly overview - fuel tank | 8 |
| 1.2 Removing and installing fuel tank | 13 |
| 1.3 Emptying fuel tank | 18 |
| 2 Fuel delivery unit, fuel gauge sender | 26 |
| 2.1 Assembly overview - fuel delivery unit/fuel gauge sender | 26 |
| 2.2 Removing and installing fuel delivery unit, fuel gauge sender | 28 |
| 2.3 Removing and installing fuel gauge sender G | 35 |
| 2.4 Removing and installing assembly opening cover | 36 |
| 3 Plug-in connectors | 38 |
| 3.1 Separating plug-in connectors | 38 |
| 4 Activated charcoal filter system | 45 |
| 4.1 Connection diagram - activated charcoal filter system | 45 |
| 4.2 Assembly overview – activated charcoal filter system | 46 |
| 4.3 Removing and installing activated charcoal filter | 48 |
| 4.4 Checking fuel tank breather | 49 |
| 4.5 Assembly overview - fuel tank shut-off valve N288 | 55 |
| 4.6 Removing and installing tank shut-off valve N288 | 57 |
| 5 Accelerator pedal | 58 |
| 5.1 Assembly overview - accelerator module | 58 |
| 5.2 Removing and installing accelerator pedal module GX2 | 58 |
| 6 Fuel pump | 60 |
| 6.1 Checking fuel system pressurisation pump G6 | 60 |
| 6.2 Removing and installing fuel pump control unit J538 | 74 |
| 7 Senders and sensors | 76 |
| 7.1 Removing and installing tank pressure sensor G400 | 76 |