

001 - Basic equipment	1-23
1. Basic equipment	1
2. Horn relay, Onboard supply control unit, Fuse holder B, Fuse holder C	2
3. Reversing light switch, Heated rear window relay, Onboard supply control unit, Fuse holder C	3
4. Brake fluid level warning contact, Bonnet contact switch, Front right brake pad wear sender, Treble horn, Bass horn, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb	4
5. Onboard supply control unit, Right fog light bulb, Right daytime running light bulb	5
6. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	6
7. Onboard supply control unit, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	7
8. Rotary light switch, Headlight range control regulator, Onboard supply control unit	8
9. Hazard warning light switch, Centre switch module in dash panel, Front reading light button, Onboard supply control unit, Front interior light	9
10. Interior mirror, Rear reading light button, Anti-dazzle interior mirror button, Onboard supply control unit, Rear interior light, Automatic anti-dazzle interior mirror	10
11. Glove compartment light switch, Onboard supply control unit, Luggage compartment light, Glove compartment light, Analogue clock	11
12. Ignition/starter switch, Intermittent wiper switch, Multifunction display call-up button, Selector lever, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Ignition key withdrawal lock solenoid	12
13. Turn signal switch, Cruise control system switch, Cruise control system (CCS) SET button, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side	13
14. Heater and air conditioning controls, Fresh air blower control unit, Heater control unit, Onboard supply control unit, Fresh air blower, Air recirculation flap control motor	14
15. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Heater control unit, Onboard supply control unit, Temperature flap control motor, Air distribution flap control motor	15
16. Onboard supply control unit, Rear left fog light bulb, Left tail light cluster, Left tail light bulb, Left tail light cluster 2, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Left brake and tail light bulb	16
17. Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster, Right tail light cluster 2, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	17
18. Onboard supply control unit, High-level brake light bulb	18
19. Rear lid handle release button, Onboard supply control unit, Heated rear window	19
20. Onboard supply control unit	20
21. Fuel tank filler flap central locking actuator, Onboard supply control unit, Left number plate light, Right number plate light	21
22. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	22
23. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	23
002 - Convenience system, left-hand drive , (LOL)	24-58
1. Convenience system, left-hand drive , (LOL)	24
2. Fuse holder C	25
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	26
4. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	27
5. Exterior mirror adjuster, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	28
6. Operating unit for window regulator in driver door, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	29
7. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Left window regulator motor, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	30
8. Driver door control unit	31
9. Coupling point for front left door, Coupling point for front right door	32
10. Front passenger door control unit, Right window regulator motor	33
11. Window regulator switch in front passenger door, Front passenger door control unit, Front passenger door lock unit, Front passenger side door warning lamp	34
12. Front passenger door control unit. Passenger side exterior mirror. Front passenger side fold-in	35

mirror motor	
13. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	36
14. Rear driver side door control unit, Rear left window regulator motor	37
15. Rear driver side door control unit, Rear left door lock unit, Rear left window regulator motor	38
16. Rear left window regulator switch, in door, Rear driver side door control unit, Rear passenger side door control unit, Rear left door warning lamp	39
17. Rear passenger side door control unit, Rear right window regulator motor	40
18. Rear right door contact switch, Rear passenger side door control unit, Rear right door lock unit	41
19. Rear right window regulator switch, in door, Rear passenger side door control unit, Rear right window regulator motor, Rear right door warning lamp	42
20. Interior mirror, Rain and light sensor, Main beam assist control unit	43
21. Front interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	44
22. Rear lid handle release button, Control unit for overhead view camera	45
23. Button to close rear lid in luggage compartment	46
24. Rear lid lock unit	47
25. Anti-trapping sender, Anti-trapping sender 2, Rear lid control unit	48
26. Sensor in motor 1 for rear lid, Rear lid control unit, Motor 1 for rear lid	49
27. Sensor in motor 2 for rear lid, Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	50
28. Sensor in motor 2 for rear lid, Rear lid control unit, Motor 2 for rear lid	51
29. Rear lid control unit, Power latching for rear lid	52
30. Rear lid warning buzzer, Rear lid control unit	53
31. Rear lid control unit	54
32. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Rear lid control unit	55
33. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	56
34. Onboard supply control unit	57
35. Onboard supply control unit, Motor 1 for luggage compartment cover, Motor 2 for luggage compartment cover	58
003 - Convenience system, right-hand drive , (L0R)	59-93
1. Convenience system, right-hand drive , (L0R)	59
2. Fuse holder C	60
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	61
4. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	62
5. Exterior mirror adjuster, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	63
6. Operating unit for window regulator in driver door, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	64
7. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Right window regulator motor, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	65
8. Driver door control unit	66
9. Coupling point for front left door, Coupling point for front right door	67
10. Front passenger door control unit, Left window regulator motor	68
11. Window regulator switch in front passenger door, Front passenger door control unit, Front passenger door lock unit, Front passenger side door warning lamp	69
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side fold-in mirror motor	70
13. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	71
14. Rear driver side door control unit, Rear left window regulator motor	72
15. Rear driver side door control unit, Rear left door lock unit, Rear left window regulator motor	73
16. Rear left window regulator switch, in door, Rear driver side door control unit, Rear passenger side door control unit, Rear left door warning lamp	74
17. Rear passenger side door control unit, Rear right window regulator motor	75
18. Rear right door contact switch, Rear passenger side door control unit, Rear right door lock unit	76
19. Rear right window regulator switch, in door, Rear passenger side door control unit, Rear right window regulator motor. Rear right door warning lamp	77

20. Interior mirror, Rain and light sensor, Main beam assist control unit	78
21. Front interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	79
22. Rear lid handle release button, Control unit for overhead view camera	80
23. Button to close rear lid in luggage compartment	81
24. Rear lid lock unit	82
25. Anti-trapping sender, Anti-trapping sender 2, Rear lid control unit	83
26. Sensor in motor 1 for rear lid, Rear lid control unit, Motor 1 for rear lid	84
27. Sensor in motor 2 for rear lid, Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	85
28. Sensor in motor 2 for rear lid, Rear lid control unit, Motor 2 for rear lid	86
29. Rear lid control unit, Power latching for rear lid	87
30. Rear lid warning buzzer, Rear lid control unit	88
31. Rear lid control unit	89
32. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Rear lid control unit	90
33. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	91
34. Onboard supply control unit	92
35. Onboard supply control unit, Motor 1 for luggage compartment cover, Motor 2 for luggage compartment cover	93
004 - Fuse assignment	94-136
1. Fuse assignment	94
2. Battery, Fuse holder A	95
3. Fuse holder A	96
4. Fuse holder B	97
5. Starter relay 1, Starter relay 2, Fuse holder B	98
6. High heat output relay, Horn relay, Fuse holder B	99
7. Main relay, Terminal 30 voltage supply relay, Fuse holder B	100
8. Fuse holder B	101
9. Fuse holder B	102
10. Fuse holder B	103
11. Heated windscreen relay, Engine component current supply relay, Fuse holder B	104
12. Automatic glow period control unit, Low heat output relay, Fuse holder B	105
13. Fuse holder B	106
14. Engine/motor control unit	107
15. Coupling point in engine compartment, left	108
16. Coupling point in engine compartment, left	109
17. Coupling point in engine compartment, left	110
18. Coupling point in engine compartment, left	111
19. Coupling point on engine, top right	112
20. Onboard supply control unit	113
21. Fuse holder C	114
22. Fuse holder C	115
23. Fuse holder C	116
24. Fuse holder C	117
25. Fuse holder C	118
26. Fuse holder C	119
27. Fuse holder C	120
28. Heated rear window relay, Fuse holder C	121
29. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	122
30. Fuse holder C	123
31. Fuse holder C	124
32. Fuse holder C	125
33. Fuse holder C	126
34. Fuse holder C	127
35. Relay for reducing agent metering system, Fuse holder C	128
36. Fuse holder C	129
37. Fuse holder C	130
38. Fuse holder C	131
39. Fuse holder C	132
40. Fuse holder C	133
41. Fuse holder C	134
42. Front passenger seat adjustment thermal fuse 1, Fuse holder H	135
43. Battery isolation igniter, Fuse holder D	136
005 - Earthing concept	137-163

1. Earthing concept	137
2. Earth point, on left in engine compartment, Earth point, on left in luggage compartment, Earth point, engine and gearbox earth, Earth point 2, on front of left longitudinal member, Earth point on alternator	138
3. Earth point, on cylinder head, Earth point on ignition coil 1, Earth point on ignition coil 2, Earth point on ignition coil 3, Earth point on ignition coil 4	139
4. Earth point, on right headlight, Earth point 1, on front of left longitudinal member	140
5. Earth connection 2, in engine compartment wiring harness, Earth point 3, on front of left longitudinal member	141
6. Particulate sensor, Earth connection 2, in engine compartment wiring harness	142
7. Control unit for NOx sender, Control unit 2 for NOx sender, Earth connection 2, in engine compartment wiring harness	143
8. Bonnet contact switch 2, Earth connection 2, in engine compartment wiring harness	144
9. Earth point 1, on front of right longitudinal member	145
10. Earth connection 1, in interior wiring harness	146
11. Earth point, lower part of left A-pillar, Earth connection 1, in interior wiring harness	147
12. Earth connection 1, in seat adjustment wiring harness	148
13. Earth point on left B-pillar, Earth connection 1, in seat adjustment wiring harness, Earth point under seat on front left	149
14. Earth connection 4, in interior wiring harness, Earth point on central tube for dash panel, centre left, Earth point on central tube for dash panel, centre right	150
15. Earth connection 4, in interior wiring harness, Earth point, at front, central in roof	151
16. Earth connection 2, in interior wiring harness, Earth point, on right A-pillar	152
17. Earth connection 2, in interior wiring harness	153
18. Earth point, lower part of right A-pillar	154
19. Earth point on right B-pillar	155
20. Earth connection 5, in rear wiring harness, Earth point 1, on right rear wheel housing	156
21. Earth connection 5, in rear wiring harness	157
22. Earth connection 1, in rear lid wiring harness, Earth connection 5, in rear wiring harness	158
23. Earth connection 1, in rear lid wiring harness	159
24. Earth connection 3, in rear lid wiring harness, Earth point, on left rear wheel housing	160
25. Earth connection 3, in rear lid wiring harness	161
26. Earth point in centre of engine compartment, Earth point 4, on front of left longitudinal member	162
27. Earth point 1, on high-voltage battery, Earth point, on rear right of underbody, Earth point 1, in high-voltage battery, Earth point 2, in high-voltage battery	163
006 - Airbag systems , (L0L)	164-173
1. Airbag systems , (L0L)	164
2. Centre switch module in dash panel, Airbag control unit, Fuse holder C	165
3. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner	166
4. Crash sensor for front airbag, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	167
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	168
6. Driver side belt switch, Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	169
7. Front passenger side belt switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Seat occupied sensor, front passenger side, Airbag control unit	170
8. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	171
9. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit	172
10. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp, Diagnostic connection	173
007 - Airbag systems , (L0R)	174-183
1. Airbag systems , (L0R)	174
2. Centre switch module in dash panel, Airbag control unit, Fuse holder C	175
3. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner	176
4. Crash sensor for front airbag, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	177
5. Side airbag crash sensor on driver side. Side airbag crash sensor on front passenger side. Airbag	178

control unit	
6. Driver side belt switch, Airbag coil connector and return ring with slip ring, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	179
7. Front passenger side belt switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Seat occupied sensor on front passenger side, Airbag control unit	180
8. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	181
9. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	182
10. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp, Diagnostic connection	183
008 - Entry and start authorisation , (4F2),(4I3),(4I6),(4I7)	184-193
1. Entry and start authorisation , (4F2),(4I3),(4I6),(4I7)	184
2. Starter button, Onboard supply control unit, Interface for entry and start system, Fuse holder C	185
3. Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	186
4. Driver exterior door handle, Contact sensor for driver exterior door handle, Interface for entry and start system, Driver side aerial for entry and start system	187
5. Interface for entry and start system	188
6. Front passenger exterior door handle, Contact sensor for front passenger exterior door handle, Interface for entry and start system, Passenger side aerial for entry and start system	189
7. Rear left exterior door handle, Contact sensor for rear left exterior door handle, Interface for entry and start system, Rear left aerial for entry and start authorisation	190
8. Rear right exterior door handle, Contact sensor for rear right exterior door handle, Interface for entry and start system, Rear right aerial for entry and start authorisation	191
9. Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	192
10. Rear lid power opening control unit, Interface for entry and start system	193
009 - Window wash/wipe system, headlight washer system , (8N4),(8N6),(8N8),(9T1),(8X1)	194-198
1. Window wash/wipe system, headlight washer system , (8N4),(8N6),(8N8),(9T1),(8X1)	194
2. Windscreen washer fluid level sender, Onboard supply control unit, Washer pump	195
3. Onboard supply control unit, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	196
4. Wiper motor control unit, Onboard supply control unit, Fuse holder B	197
5. Onboard supply control unit, Fuse holder C, Rear window wiper motor	198
010 - Adaptive cruise control , (QK1),(8T7),(8T8)	199-201
1. Adaptive cruise control , (QK1),(8T7),(8T8)	199
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	200
3. Adaptive cruise control unit	201
011 - Anti-theft alarm system , (7AL)	202-204
1. Anti-theft alarm system , (7AL)	202
2. Button for deactivating interior monitoring and vehicle inclination sensor, Alarm horn, Onboard supply control unit, Fuse holder B, Front interior light	203
3. Anti-theft alarm sensor, Onboard supply control unit, Fuse holder C	204
012 - 12 V sockets , (7B2),(7B3),(7B6),(9JC)	205-206
1. 12 V sockets , (7B2),(7B3),(7B6),(9JC)	205
2. Onboard supply control unit, Fuse holder C, 12 V socket, 12 V socket 2, 12 V socket 3	206
013 - Dual clutch gearbox 0D9 , (0ES)	207-211
1. Dual clutch gearbox 0D9 , (0ES)	207
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	208
3. Mechatronic unit for dual clutch gearbox	209
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Selector lever sensors control unit, Fuse holder C	210
5. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	211
014 - Dual clutch gearbox 0CW , (0EG)	212-216
1. Dual clutch gearbox 0CW , (0EG)	212
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	213
3. Mechatronic unit for dual clutch gearbox	214
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Selector lever sensors control unit, Fuse holder C	215
5. Selector lever. Selector lever locked in position P switch. Selector lever lock solenoid.	216

Selector lever position display	
015 - Dual clutch gearbox 0DL , (0EX)	217-221
1. Dual clutch gearbox 0DL , (0EX)	217
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	218
3. Mechatronic unit for dual clutch gearbox	219
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Selector lever sensors control unit, Fuse holder C	220
5. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	221
016 - Front camera for driver assist systems , (QK1)	222-223
1. Front camera for driver assist systems , (QK1)	222
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	223
017 - Dynamic Chassis Control , (2H4)	224-227
1. Dynamic Chassis Control , (2H4)	224
2. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve, Fuse holder C	225
3. Front left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	226
4. Front left body acceleration sender, Front right body acceleration sender, Electronically controlled damping control unit, Data bus diagnostic interface	227
018 - Electromechanical steering , (1N3),(1N7)	228-230
1. Electromechanical steering , (1N3),(1N7)	228
2. Steering angle sender, Power steering control unit, Fuse holder A, Electromechanical power steering motor	229
3. Steering moment sender, Power steering control unit, Data bus diagnostic interface	230
019 - Parking aid (PDC) , (7X2),(7X5),(8A8),(8A9)	231-236
1. Parking aid (PDC) , (7X2),(7X5),(8A8),(8A9)	231
2. Centre switch module in dash panel, Parking aid button, Park assist steering button, Parking aid control unit, Onboard supply control unit, Park assist steering control unit	232
3. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Data bus diagnostic interface, Park assist steering control unit	233
4. Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit, Park assist steering control unit	234
5. Rear left parking aid sender, Front right parking aid sender, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Parking aid control unit, Park assist steering control unit	235
6. Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit, Park assist steering control unit	236
020 - Trailer coupling , (1M6)	237-241
1. Trailer coupling , (1M6)	237
2. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	238
3. Electric hinged tow coupling attachment button, Trailer coupling motor Hall sender, Trailer detector control unit, Trailer towing coupling, Hinged tow attachment ball head motor	239
4. Trailer detector control unit, Trailer socket	240
5. Trailer detector control unit, Trailer socket	241
021 - Air conditioning system , (KH6)	242-247
1. Air conditioning system , (KH6)	242
2. Magnetic clutch relay, Fresh air blower control unit, Fuse holder C, Fresh air blower	243
3. Heater and air conditioning controls, Air conditioning system control unit	244
4. Heater and air conditioning controls, Air conditioner compressor regulating valve, Magnetic clutch for supercharger	245
5. Heater and air conditioning controls, Evaporator temperature sensor, Pressure sender for refrigerant circuit, Data bus diagnostic interface, Air recirculation flap control motor	246
6. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Temperature flap control motor, Air distribution flap control motor	247
022 - Climatronic , (KH0),(KH7)	248-257
1. Climatronic , (KH0),(KH7)	248
2. Magnetic clutch relay, Fresh air blower control unit, Fuse holder C, Fresh air blower	249
3. Heater and air conditioning controls. Operating and display unit for rear air conditioning system	250

4. Heater and air conditioning controls, Pressure sender for refrigerant circuit, External air quality and air humidity sensor	251
5. Heater and air conditioning controls, Air conditioner compressor regulating valve	252
6. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Data bus diagnostic interface	253
7. Heater and air conditioning controls, Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Left temperature flap control motor, Right temperature flap control motor	254
8. Heater and air conditioning controls, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	255
9. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Potentiometer for rear temperature flap motor, Defroster flap control motor, Rear temperature flap control motor	256
10. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor	257
023 - Radiator fan	258-260
1. Radiator fan	258
2. Radiator fan control unit, Engine/motor control unit	259
3. Radiator fan control unit, Radiator fan control unit 2, Radiator fan, Radiator fan 2	260
024 - Auxiliary coolant heater , (9M9)	261-263
1. Auxiliary coolant heater , (9M9)	261
2. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Data bus diagnostic interface, Glow plug with flame monitor, Fuse holder B, Metering pump	262
3. Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary heater, Auxiliary heater aerial, Fuse holder C, Combustion air blower, Circulation pump	263
025 - Adjustable seat , (3L4),(3L7)	264-270
1. Adjustable seat , (3L4),(3L7)	264
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C, Driver seat backrest adjustment motor	265
3. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit	266
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Driver seat rake adjustment motor, Driver seat height adjustment motor	267
5. Driver seat adjustment control unit, Lumbar support for driver seat, Driver seat longitudinal adjustment motor	268
6. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	269
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	270
026 - Seat backrest and electric lumbar support, driver seat , (8I0),(8I2)	271-274
1. Seat backrest and electric lumbar support, driver seat , (8I0),(8I2)	271
2. Driver seat lumbar support adjustment switch, Massage function button, Massage control unit, Fuse holder C	272
3. Massage control unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	273
4. Massage control unit	274
027 - Seat heating , (4A3),(4A4)	275-280
1. Seat heating , (4A3),(4A4)	275
2. Heater and air conditioning controls, Button for left seat heating, Button for right seat heating, Onboard supply control unit, Data bus diagnostic interface, Seat heating (driver side)	276
3. Onboard supply control unit, Seat heating (driver side)	277
4. Onboard supply control unit, Seat heating (front passenger side)	278
5. Seat heating (front passenger side)	279
6. Operating and display unit for rear air conditioning system, Button for rear left seat heating, Button for rear right seat heating, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	280
028 - Data bus network	281-300
1. Data bus network	281
2. Fuse holder C, Diagnostic connection	282
3. Data bus diagnostic interface, Fuse holder B	283
4. Digital sound package control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system, TV tuner	284
5. Pressure sender for refrigerant circuit. Auxiliary heater control unit. Data bus diagnostic	285

interface, Control unit 1 for information electronics, Remote control receiver for auxiliary heater, Reversing camera	
6. Electronically controlled damping control unit, Parking aid control unit, All-wheel drive control unit, Data bus diagnostic interface, Control unit for overhead view camera	286
7. ABS control unit, Power steering control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	287
8. Selector lever, NOx sender, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, DC/AC converter with socket, 12 V - 230 V	288
9. Adaptive cruise control unit, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	289
10. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Interior mirror, Data bus diagnostic interface, Output module for left headlight, Output module for right headlight, Lane change assist control unit, Lane change assist control unit 2, Main beam assist control unit, Control unit for left daytime running light and side light, Control unit for right daytime running light and side light, Front left headlight, Front right headlight, Front camera for driver assist systems	290
11. Alternator with voltage regulator, Battery monitor control unit, Data bus diagnostic interface, Front right seat backrest fan 1, Front right seat cushion fan 1	291
12. Data bus diagnostic interface, Driver seat adjustment control unit, Front left seat backrest fan 1, Front left seat cushion fan 1	292
13. Data bus diagnostic interface, Control unit for head-up display, Rear lid power opening control unit, Interface for entry and start system, Light for front right door contour lighting	293
14. Sliding sunroof adjustment control unit, Front passenger door control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Data bus diagnostic interface, Coupling point in interior, Analogue clock	294
15. Driver door control unit, Light for front left door contour lighting	295
16. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Fresh air blower control unit, Trailer detector control unit, Rear lid control unit, Control unit for electronic steering column lock	296
17. Rear left door control unit, Rear right door control unit, Light 1 for rear left door background lighting, Rear left window regulator motor, Rear right window regulator motor	297
18. Control unit in dash panel insert, Dash panel insert	298
19. Rotary light switch, Rain and light sensor, Anti-theft alarm sensor, Alarm horn, Wiper motor control unit, Onboard supply control unit, Front interior light	299
20. Onboard supply control unit, Light for left dashboard background lighting, Light for right dashboard background lighting	300
029 - Sliding/tilting sunroof , (3FB),(3FU)	301-304
1. Sliding/tilting sunroof , (3FB),(3FU)	301
2. Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Data bus diagnostic interface, Fuse holder C	302
3. Sliding sunroof adjustment control unit, Sliding sunroof motor	303
4. Sunroof button, Sliding sunroof adjustment control unit, Sunroof roller blind motor	304
030 - Radio navigation system	305-321
1. Radio navigation system	305
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	306
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Connection for external audio sources	307
4. Control unit 1 for information electronics, USB connection 1	308
5. Control unit 1 for information electronics, USB connection 1	309
6. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	310
7. Control unit 1 for information electronics, CD player, USB hub	311
8. Toll collection sender, Chip card reader control unit, Control unit 1 for information electronics, CD player, Traffic data aerial	312
9. Chip card reader control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	313
10. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	314
11. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker	315
12. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker	316
13. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert, TV tuner, Telephone microphone	317
14. Control unit 1 for information electronics. TV tuner. TV aerial 1. TV aerial 2. TV aerial 3.	318

Aerial amplifier 1 for TV, Aerial amplifier 2 for TV, Aerial amplifier 3 for TV, Radio aerial, LTE aerial 1	
15. Control unit 1 for information electronics, Radio aerial 2, Left aerial module, Digital radio aerial	319
16. Control unit 1 for information electronics, Roof aerial, GPS aerial, Right aerial module, GSM aerial, Radio aerial	320
17. Heated rear window relay, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Heated rear window	321
031 - Reversing camera (Rear Assist) , (KA2),(8A8),(8A9)	322-324
1. Reversing camera (Rear Assist) , (KA2),(8A8),(8A9)	322
2. Data bus diagnostic interface, Reversing camera, Fuse holder C	323
3. Rear lid handle release button, Control unit 1 for information electronics, Reversing camera	324
032 - Mobile telephone systems , (9IE),(9IF),(9IM),(9ZE),(9ZK),(9ZX)	325-326
1. Mobile telephone systems , (9IE),(9IF),(9IM),(9ZE),(9ZK),(9ZX)	325
2. Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services, GSM aerial, Storage compartment with interface for mobile telephone, Fuse holder C	326
033 - Anti-lock brake system (ABS) , (L0L)	327-333
1. Anti-lock brake system (ABS) , (L0L)	327
2. ABS control unit, Fuse holder B, Left parking brake motor	328
3. Front right speed sensor, Vacuum sender, ABS control unit	329
4. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	330
5. Front left speed sensor, Clutch position sender, ABS control unit	331
6. Data bus diagnostic interface, Dash panel insert, Fuse holder C	332
7. Switch module 1 in centre console, Button for TCS and electronic stabilisation program, Electromechanical parking brake button, Onboard supply control unit	333
034 - Anti-lock brake system (ABS) , (L0R)	334-339
1. Anti-lock brake system (ABS) , (L0R)	334
2. ABS control unit, Fuse holder B, Left parking brake motor	335
3. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	336
4. Front right speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit, Onboard supply control unit	337
5. Data bus diagnostic interface, Dash panel insert, Fuse holder C	338
6. Switch module 1 in centre console, Button for TCS and electronic stabilisation program, Electromechanical parking brake button	339
035 - Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZA),(7ZD),(2ZH),(2ZW)	340-342
1. Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZA),(7ZD),(2ZH),(2ZW)	340
2. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Fuse holder C	341
3. Selector lever, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Heated steering wheel sender, Multifunction steering wheel control unit, Steering column electronics control unit, Engine/motor control unit	342
036 - 1.4l petrol engine , CZEA	343-360
1. 1.4l petrol engine , CZEA	343
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	344
3. Main relay, Fuse holder B	345
4. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit	346
5. Engine/motor control unit	347
6. Accelerator pedal module, Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit	348
7. Brake light switch, Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Radiator fan	349
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	350
9. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Vacuum pump for brakes	351
10. Data bus diagnostic interface, Engine/motor control unit	352
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	353
12. Intake manifold sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	354
13. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	355
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	356
15. Knock sensor 1. Engine/motor control unit. Activated charcoal filter solenoid valve 1. Camshaft	357

control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	
16. Engine/motor control unit, Fuel pressure regulating valve, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Charge air cooling pump	358
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	359
18. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	360
037 - 1.4l petrol engine , CZCA,CZDA	361-378
1. 1.4l petrol engine , CZCA,CZDA	361
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	362
3. Main relay, Fuse holder B	363
4. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit	364
5. Engine/motor control unit	365
6. Accelerator pedal module, Clutch position sender, ABS control unit, Engine/motor control unit	366
7. Brake light switch, Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Radiator fan	367
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Gearbox neutral position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	368
9. Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit	369
10. Data bus diagnostic interface, Engine/motor control unit	370
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	371
12. Intake manifold sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	372
13. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	373
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	374
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	375
16. Engine/motor control unit, Fuel pressure regulating valve, Charge air cooling pump	376
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	377
18. Fuel delivery unit, Fuel pump control unit, Dash panel insert	378
038 - 1.6l diesel engine , DCXA,DCZA	379-404
1. 1.6l diesel engine , DCXA,DCZA	379
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	380
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	381
4. Automatic glow period control unit, Fuse holder B	382
5. Low heat output relay, Relay for reducing agent metering system, Fuse holder B, Fuse holder C	383
6. Switch module 1 in centre console, Start/stop operation button, Driving mode selection button, Onboard supply control unit	384
7. Engine/motor control unit	385
8. Air mass meter, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Gearbox neutral position sender, Engine/motor control unit	386
9. Water separator sender, Engine/motor control unit, Control unit for reducing agent heater	387
10. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	388
11. Accelerator pedal module, Delivery unit for reducing agent metering system, Engine/motor control unit, Injector for reducing agent	389
12. Engine/motor control unit, Exhaust flap control unit	390
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Exhaust flap control unit	391
14. Control unit for NOx sender, Control unit 2 for NOx sender, Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	392
15. Brake light switch, Oil level and oil temperature sender, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	393
16. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Heater element for crankcase breather	394
17. Alternator with voltage regulator, Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	395
18. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	396
19. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve	397
20. Engine speed sender. Exhaust gas temperature sender 1. Engine/motor control unit. Fuel pressure	398

regulating valve, Fuel metering valve	
21. Charge pressure sender, Hall sender, Fuel pressure sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	399
22. Coolant temperature sender, Fuel temperature sender, Exhaust gas pressure sensor 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Engine/motor control unit	400
23. Throttle valve module, Position sender for charge pressure positioner, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	401
24. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	402
25. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	403
26. Fuel delivery unit, Fuel pump control unit, Dash panel insert	404
039 - 2.0l diesel engine , CRLB,CRLD,CUPA,DBGA,DBGB,DDAA,DFCA,DFEA,DFGA,DFGB,DFHA	405-436
1. 2.0l diesel engine , CRLB,CRLD,CUPA,DBGA,DBGB,DDAA,DFCA,DFEA,DFGA,DFGB,DFHA	405
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder B	406
3. High heat output relay, Battery monitor control unit, Fuse holder B, Auxiliary air heater element	407
4. Terminal 30 voltage supply relay, Fuse holder B	408
5. Automatic glow period control unit, Low heat output relay, Fuse holder B	409
6. Relay for reducing agent metering system, Fuse holder C	410
7. Switch module 1 in centre console, Onboard supply control unit	411
8. Engine/motor control unit	412
9. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 3, Gearbox neutral position sender, Engine/motor control unit	413
10. Water separator sender, Engine/motor control unit	414
11. Engine/motor control unit, Exhaust flap control unit	415
12. Air mass meter, Engine/motor control unit, Exhaust flap control unit, Control unit for reducing agent heater, Heater element for crankcase breather	416
13. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	417
14. Delivery unit for reducing agent metering system, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	418
15. Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	419
16. Alternator with voltage regulator, Brake light switch, Engine/motor control unit, Charge air cooling pump	420
17. Lambda probe 1 before catalytic converter, Engine/motor control unit	421
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	422
19. Accelerator pedal module, Engine/motor control unit, Injector for reducing agent, Radiator fan	423
20. Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	424
21. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 4, Engine/motor control unit	425
22. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	426
23. Exhaust gas temperature sender 1, Engine/motor control unit, Charge pressure control solenoid valve	427
24. Hall sender, Fuel temperature sender, Fuel pressure sender for low pressure, Position sender for charge pressure positioner, Engine/motor control unit	428
25. Throttle valve module, Exhaust gas pressure sensor 1, Engine/motor control unit	429
26. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	430
27. Engine speed sender, Fuel pressure sender, Pressure differential sender, Engine/motor control unit	431
28. Charge pressure sender, Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	432
29. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	433
30. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	434
31. Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	435
32. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	436
040 - Sound system DYNAUDIO , (9VC),(9VW)	437-445
1. Sound system DYNAUDIO , (9VC),(9VW)	437
2. Digital sound package control unit, Control unit 1 for information electronics, Dash panel insert, TV tuner, Fuse holder C	438
3. Digital sound package control unit. Front left treble loudspeaker. Front left mid-range	439

loudspeaker	
4. Digital sound package control unit, Front left bass loudspeaker	440
5. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker	441
6. Digital sound package control unit, Front right treble loudspeaker, Front right mid-range loudspeaker	442
7. Digital sound package control unit, Front right bass loudspeaker	443
8. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker	444
9. Digital sound package control unit, Centre loudspeaker, Subwoofer	445
041 - Heated windscreen , (4GW)	446-447
1. Heated windscreen , (4GW)	446
2. Heated windscreen relay, Onboard supply control unit, Fuse holder B, Heated windscreen	447
042 - 2.0l diesel engine , CUAA	448-474
1. 2.0l diesel engine , CUAA	448
2. Starter, Starter relay 1, Starter relay 2, Fuse holder B, Jump start connection	449
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	450
4. Automatic glow period control unit, Fuse holder B	451
5. Low heat output relay, Relay for reducing agent metering system, Fuse holder B, Fuse holder C	452
6. Battery, Switch module 1 in centre console, Start/stop operation button, Driving mode selection button, Battery monitor control unit, Onboard supply control unit, Battery isolation igniter, Fuse holder D	453
7. Engine/motor control unit	454
8. Engine/motor control unit, Control unit for reducing agent heater, Actuator for engine temperature regulation, Radiator fan	455
9. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	456
10. Delivery unit for reducing agent metering system, Engine/motor control unit, Exhaust flap control unit	457
11. Brake light switch, Engine/motor control unit, Exhaust flap control unit	458
12. Alternator with voltage regulator, Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	459
13. Air mass meter, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Injector for reducing agent	460
14. Lambda probe 1 before catalytic converter, Engine/motor control unit	461
15. Accelerator pedal module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Heater element for crankcase breather	462
16. Engine speed sender, Hall sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	463
17. Charge pressure sender, Exhaust gas temperature sender 1, Charge pressure sender 2, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	464
18. Fuel pressure sender, Regulating flap potentiometer, Engine/motor control unit, Turbocharger 1 control unit	465
19. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Fuel temperature sender, Engine/motor control unit	466
20. Throttle valve module, Temperature sensor, Coolant temperature sender, Engine/motor control unit	467
21. Engine/motor control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	468
22. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	469
23. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 4, Engine/motor control unit, Turbine changeover valve	470
24. Data bus diagnostic interface, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	471
25. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	472
26. Fuel delivery unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	473
27. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	474
043 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	475-477
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	475
2. Selector lever, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	476
3. Switch module 2 in centre console, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Heated steering wheel	477
044 - Lane change assist , (7Y1),(7Y5),(79B),(79D)	478-481
1. Lane change assist . (7Y1).(7Y5).(79B).(79D)	478

2. Lane change assist control unit, Lane change assist warning lamp in right exterior mirror	479
3. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2, Fuse holder C	480
4. Lane change assist control unit 2, Lane change assist warning lamp in left exterior mirror	481
045 - Overhead view camera , (KA6),(KA7)	482-486
1. Overhead view camera , (KA6),(KA7)	482
2. Rear lid handle release button, Data bus diagnostic interface, Control unit for overhead view camera	483
3. Centre switch module in dash panel, Parking aid control unit, Control unit 1 for information electronics, Control unit for overhead view camera, Front overhead view camera	484
4. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	485
5. Control unit for overhead view camera, Rear overhead view camera	486
046 - LED headlights , (8Q3),(8IT)	487-491
1. LED headlights , (8Q3),(8IT)	487
2. Onboard supply control unit, Control unit for cornering light and headlight range control, Front left headlight	488
3. Onboard supply control unit, Control unit for cornering light and headlight range control	489
4. Onboard supply control unit, Control unit for cornering light and headlight range control, Front right headlight	490
5. Rear left vehicle level sender, Data bus diagnostic interface	491
047 - DC/AC converter with socket , (9Z3)	492-493
1. DC/AC converter with socket , (9Z3)	492
2. Data bus diagnostic interface, Fuse holder C, DC/AC converter with socket, 12 V - 230 V	493
048 - Background lighting , (QQ8),(QQ9)	494-507
1. Background lighting , (QQ8),(QQ9)	494
2. Interior mirror, Front interior light	495
3. Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel right vent illumination bulb, Cup holder illumination bulb	496
4. Onboard supply control unit, Front left footwell light, Front right footwell light, Light for left dash panel background lighting, Light for right dash panel background lighting	497
5. Light for front left door contour lighting, Fuse holder C	498
6. Driver door control unit, Light 2 for front left door background lighting, Light for driver side interior door handle illumination, Light for driver door background lighting	499
7. Coupling point for front left door	500
8. Rear driver side door control unit, Rear left door background lighting bulb, Light for rear driver side interior door handle illumination, Light for rear left door contour lighting, Light for rear door background lighting, driver side	501
9. Light for front right door contour lighting	502
10. Front passenger door control unit, Light 2 for front right door background lighting, Light for passenger side interior door handle illumination, Light for passenger door background lighting	503
11. Coupling point for front right door	504
12. Rear passenger side door control unit, Rear right door background lighting bulb, Light for rear passenger side interior door handle illumination, Light for rear right door contour lighting, Light for rear door background lighting, passenger side	505
13. Rear interior light, Rear left reading light, Rear right reading light	506
14. Data bus diagnostic interface	507
049 - Rear roller blind , (3Y2),(3Y5)	508-509
1. Rear roller blind , (3Y2),(3Y5)	508
2. Switch module 2 in centre console, Rear roller blind switch, Rear roller blind control unit, Onboard supply control unit, Fuse holder C	509
050 - LED headlights , (8Q5)	510-513
1. LED headlights , (8Q5)	510
2. Output module 1 for left LED headlight, Onboard supply control unit, Output module for left headlight, Control unit for cornering light and headlight range control, Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor, Left dynamic cornering light control motor	511
3. Rear left vehicle level sender, Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Fuse holder C	512
4. Output module 1 for right LED headlight, Onboard supply control unit, Output module for right headlight, Control unit for right daytime running light and side light, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor, Right dynamic cornering light control motor	513
051 - Seat ventilation . (4D3)	514-517

1. Seat ventilation , (4D3)	514
2. Onboard supply control unit, Fuse holder C, Front left seat backrest fan 1, Front left seat cushion fan 1	515
3. Coupling point in front left seat, Coupling point in front right seat	516
4. Front passenger seat adjustment thermal fuse 1, Front right seat backrest fan 1, Front right seat cushion fan 1	517
052 - Seat backrest and electric lumbar support, driver seat , (7P7),(7P8)	518-520
1. Seat backrest and electric lumbar support, driver seat , (7P7),(7P8)	518
2. Operating unit for front left seat adjustment, Fuse holder C, Front left backrest, Front left backrest adjustment motor	519
3. Operating unit for front right seat adjustment, Front right backrest, Front right backrest adjustment motor	520
053 - Tail light clusters with LEDs , (8SP),(8SQ)	521-527
1. Tail light clusters with LEDs , (8SP),(8SQ)	521
2. Onboard supply control unit, Left tail light cluster	522
3. Onboard supply control unit, Right tail light cluster	523
4. Left tail light cluster 2	524
5. Left tail light cluster 2	525
6. Right tail light cluster 2	526
7. Right tail light cluster 2	527
054 - All-wheel drive , (1X1)	528-529
1. All-wheel drive , (1X1)	528
2. All-wheel drive control unit, Data bus diagnostic interface, Fuse holder C, All-wheel drive coupling pump	529
055 - 1.8l petrol engine , CJSA,CJSC	530-550
1. 1.8l petrol engine , CJSA,CJSC	530
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	531
3. Main relay, Fuse holder B	532
4. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Engine component current supply relay, Fuse holder B, Fuse holder C	533
5. Engine/motor control unit, Radiator fan	534
6. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	535
7. Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	536
8. Brake light switch, Accelerator pedal module, Engine/motor control unit	537
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	538
10. Alternator with voltage regulator, Charge pressure sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	539
11. Engine/motor control unit, Coolant shut-off valve	540
12. Engine speed sender, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	541
13. Throttle valve module, Intake manifold sender, Knock sensor 1, Engine/motor control unit	542
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	543
15. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3	544
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4, Auxiliary pump for heating	545
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	546
18. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	547
19. Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	548
20. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	549
21. Fuel delivery unit, Fuel pump control unit, Dash panel insert	550
056 - 2.0l petrol engine , CHHB,CXDA	551-572
1. 2.0l petrol engine , CHHB,CXDA	551
2. Starter. Starter relay 1. Starter relay 2. Fuse holder B. Jump start connection	552

3. Main relay, Fuse holder B	553
4. Battery, Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Battery monitor control unit, Onboard supply control unit, Engine component current supply relay, Battery isolation igniter, Fuse holder B, Fuse holder D	554
5. Engine/motor control unit, Radiator fan	555
6. ABS control unit, Steering column electronics control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Interface for entry and start system, Fuse holder C	556
7. Brake light switch, Accelerator pedal module, Engine/motor control unit	557
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	558
9. Engine/motor control unit	559
10. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	560
11. Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit	561
12. Data bus diagnostic interface, Engine/motor control unit, Gearbox oil cooling pump	562
13. Intake manifold sender, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	563
14. Oil pressure switch for reduced oil pressure, Engine speed sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve	564
15. Throttle valve module, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	565
16. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3	566
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4, Auxiliary pump for heating	567
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	568
19. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	569
20. Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	570
21. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	571
22. Fuel delivery unit, Fuel pump control unit, Dash panel insert	572
057 - Special vehicle , (F6K)	573-591
1. Special vehicle , (F6K)	573
2. Fuse holder C, Fuse holder H	574
3. Fuse holder F, Fuse holder K, Fuse holder H	575
4. Onboard supply control unit, Interface for entry and start system, Coupling point in interior, below left	576
5. Data bus diagnostic interface, Special vehicle control unit	577
6. Blocking diode, Special vehicle control unit, Blocking diode 2	578
7. Special vehicle control unit, Accident data memory	579
8. Interior lighting central switch button, Hands-free system button, Button for daytime running light switch-off, Special vehicle control unit	580
9. Two-way radio button, Ignition bypass button, Functional test button for special signal system, Special signal system changeover button, Special vehicle control unit	581
10. 2-way radio loudspeaker volume control 1, 2-way radio loudspeaker volume control 2, Special vehicle control unit	582
11. Special vehicle control unit, Coupling point for special vehicles	583
12. Alarm rotary and pull switch, Special vehicle control unit, Coupling point for special vehicles	584
13. Alarm rotary and pull switch, Special vehicle control unit	585
14. Rotating light and siren system control unit	586
15. Rotating light and siren system control unit, Coupling point on left A-pillar, Coupling point on left B-pillar, bottom	587
16. Coupling point on right A-pillar, Coupling point on right B-pillar, bottom	588
17. Coupling point on left A-pillar, bottom, Coupling point on dash panel, right, Coupling point in luggage compartment, left, Coupling point in luggage compartment, right, 12 V socket	589
18. Charging station for torch, Charging station 2 for torch	590
19. Coupling point on right A-pillar, bottom, Coupling point in luggage compartment, centre	591
058 - Special vehicle , (F6J)	592-610
1. Special vehicle , (F6J)	592
2. Fuse holder C, Fuse holder H	593
3. Fuse holder G, Fuse holder H	594

4. Onboard supply control unit, Interface for entry and start system, Fuse holder K	595
5. Battery isolation relay, Fuse holder F	596
6. Special vehicle control unit	597
7. Special vehicle control unit	598
8. Interior lighting central switch button, Hands-free system button, Ignition bypass button, Special vehicle control unit	599
9. Load area illumination switch, Button for daytime running light switch-off, Special vehicle control unit	600
10. Operating unit with buttons for special functions, Special vehicle control unit	601
11. 2-way radio loudspeaker volume control 1, 2-way radio loudspeaker volume control 2, Special vehicle control unit	602
12. Special vehicle control unit	603
13. Special vehicle control unit	604
14. Rotating light and siren system control unit	605
15. 12 V socket, 12 V socket 5, 12 V socket 6	606
16. Coupling point on dash panel, right, Coupling point in luggage compartment, left, Coupling point in luggage compartment, right	607
17. 2-pin connector, Coupling point on left A-pillar, bottom, Coupling point on dash panel, centre	608
18. Charging station for torch, Charging station 2 for torch	609
19. Coupling point on right A-pillar, bottom, Coupling point in luggage compartment, centre	610
059 - Special vehicle , (F6T),(F6W),(F6X),(F6Z)	611-635
1. Special vehicle , (F6T),(F6W),(F6X),(F6Z)	611
2. Fuse holder C, Fuse holder H	612
3. Fuse holder G, Fuse holder H	613
4. Onboard supply control unit, Interface for entry and start system	614
5. Battery isolation relay, Fuse 4 in fuse holder F, Fuse 5 in fuse holder F, Fuse 6 in fuse holder F, Fuse 7 in fuse holder F, Fuse 8 in fuse holder F	615
6. Fuse holder K, Fuse 9 in fuse holder F, Fuse 10 in fuse holder F	616
7. Two-way radio voltage relay, Special vehicle interface control unit, Coupling point in luggage compartment, right	617
8. Operating unit with buttons for special functions, Special vehicle interface control unit	618
9. Special vehicle interface control unit, Coupling point on right A-pillar	619
10. Special vehicle interface control unit	620
11. Special vehicle interface control unit	621
12. Special signal system changeover button, Special vehicle interface control unit, Ethernet socket	622
13. Special vehicle interface control unit, Microphone for special signals, 4-pin connector	623
14. Special vehicle interface control unit, Interface for MIB CAN bus, special vehicle interface	624
15. Special vehicle interface control unit, Two-way radio loudspeaker, Two-way radio loudspeaker 2	625
16. Special vehicle control unit	626
17. Hands-free system button, Hands-free system button 2, Special vehicle control unit	627
18. Data bus diagnostic interface, Special vehicle control unit, Accident data memory	628
19. Blocking diode, Special vehicle control unit, Blocking diode 2	629
20. Special vehicle control unit, Coupling point for rear lid, Coupling point in luggage compartment, left, 12 V socket	630
21. Coupling point on dash panel, right, Coupling point in luggage compartment, left, Coupling point in luggage compartment, right, Charging station for torch, Charging station 2 for torch	631
22. Rotating light and siren system control unit	632
23. Rotating light and siren system control unit	633
24. Coupling point on right A-pillar, Coupling point on left B-pillar, bottom, Coupling point on right B-pillar, bottom	634
25. Coupling point on right A-pillar, bottom, Coupling point in luggage compartment, centre	635
060 - Special vehicle , (F6I),(F6S),(F6V),(F6Y)	636-664
1. Special vehicle , (F6I),(F6S),(F6V),(F6Y)	636
2. Fuse holder C, Fuse holder H	637
3. Fuse holder G, Fuse holder H, Coupling point in interior, below left	638
4. Coupling point in interior, below left	639
5. Second battery, Battery isolation relay, Fuse holder F	640
6. Two-way radio voltage relay, Fuse holder K	641
7. Special vehicle interface control unit	642
8. Operating unit with buttons for special functions, Special vehicle interface control unit	643
9. Special vehicle interface control unit	644
10. Special vehicle interface control unit	645
11. Special vehicle interface control unit	646
12. Special signal system changeover button, Special vehicle interface control unit, Ethernet socket	647
13. Special vehicle interface control unit, Microphone for special signals, Camera for in-car video surveillance. Memory for in-car video surveillance	648

14. Special vehicle interface control unit, Memory for in-car video surveillance, Camera 2 for in-car video surveillance	649
15. Special vehicle interface control unit, Interface for MIB CAN bus, special vehicle interface	650
16. Special vehicle interface control unit, Two-way radio loudspeaker, Two-way radio loudspeaker 2	651
17. Special vehicle interface control unit	652
18. Special vehicle control unit	653
19. Hands-free system button, Hands-free system button 2, Special vehicle control unit	654
20. Data bus diagnostic interface, Special vehicle control unit	655
21. Special vehicle control unit	656
22. Special vehicle control unit, Accident data memory	657
23. Special vehicle control unit	658
24. Rotating light and siren system control unit, Special vehicle control unit	659
25. Rotating light and siren system control unit	660
26. Rotating light and siren system control unit, 12 V socket 5	661
27. 12 V socket, 12 V socket 6	662
28. Charging station for torch, Charging station 2 for torch	663
29. Coupling point on right A-pillar, bottom, Coupling point in luggage compartment, centre	664
061 - Taxi equipment , (F4E),(F4F),(F5Z),(F5E),(F5R)	665-682
1. Taxi equipment , (F4E),(F4F),(F5Z),(F5E),(F5R)	665
2. Fuse holder B, Fuse holder C, Fuse holder H	666
3. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Interface for entry and start system, Fuse holder H	667
4. Voltage stabiliser, Coupling point in interior, below left	668
5. Fuse holder J, Fuse holder K	669
6. Special vehicle control unit	670
7. Interior light switch (taxi), Taxi alarm active button, Special vehicle control unit	671
8. Taxi sign switch, Taxi alarm off button, Hands-free system button, Passive Taxi alarm button, Special vehicle control unit	672
9. Mirror taximeter, Special vehicle control unit	673
10. Taximeter, Special vehicle control unit	674
11. Taxi alarm remote control, control unit, Special vehicle control unit	675
12. Coupling point for data transmission operating unit in special vehicle, Coupling point for printer port, special vehicles, Coupling point for interface control unit in special vehicle	676
13. GSM aerial 2, GPS aerial 2, Coupling point on dash panel, right, Coupling point on right D-pillar, Coupling point for interface control unit in special vehicle	677
14. Coupling point on dash panel, right, Coupling point on right D-pillar	678
15. Coupling point on right A-pillar, Coupling point on dash panel, right, Coupling point on right D-pillar	679
16. 2-way radio loudspeaker volume control 1, Coupling point on right A-pillar, Coupling point on right D-pillar	680
17. Coupling point on dash panel, right, Coupling point in luggage compartment, right	681
18. Coupling point for roof, centre, Coupling point in luggage compartment, right	682
062 - Driving aids for disabled persons with special vehicle control unit , (F6M)	683-688
1. Driving aids for disabled persons with special vehicle control unit , (F6M)	683
2. Fuse holder C, Fuse holder H	684
3. Coupling point in interior, below left	685
4. Button for driving aids for disabled persons, Data bus diagnostic interface, Special vehicle control unit	686
5. Special vehicle control unit, Coupling point for special vehicle with driving aids for disabled persons	687
6. Special vehicle control unit, Coupling point for special vehicle with driving aids for disabled persons	688
063 - Heads-up display , (KS2)	689-691
1. Heads-up display , (KS2)	689
2. Switch for head-up display, Control unit for head-up display, Fuse holder C	690
3. Data bus diagnostic interface, Control unit for head-up display, Open and close display motor	691
064 - 2.0l petrol engine , CJXA	692-713
1. 2.0l petrol engine , CJXA	692
2. Starter, Starter relay 1, Starter relay 2, Fuse holder B, Jump start connection	693
3. Main relay, Fuse holder B	694
4. Battery, Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Battery monitor control unit, Onboard supply control unit, Engine component current supply relay, Battery isolation igniter, Fuse holder B, Fuse holder D	695
5. Engine/motor control unit, Radiator fan	696
6. Brake light switch, Accelerator pedal module, Radiator outlet coolant temperature sender, Engine/motor control unit	697

7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Engine/motor control unit	698
8. Steering column electronics control unit, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2, Interface for entry and start system, Fuse holder C	699
9. Alternator with voltage regulator, Charge pressure sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	700
10. Engine/motor control unit	701
11. Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox, Actuator for engine temperature regulation	702
12. Throttle valve module, Intake manifold sender, Engine/motor control unit	703
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine speed sender, Hall sender 3, Engine/motor control unit	704
14. Knock sensor 1, Coolant temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Fuel pressure regulating valve	705
15. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve, Charge pressure positioner	706
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Charge air cooling pump	707
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	708
18. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4	709
19. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator B for cylinder 4	710
20. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	711
21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	712
22. Fuel delivery unit, Fuel gauge sender for auxiliary fuel tank, Fuel pump control unit, Dash panel insert	713
065 - Adjustable seat , (3L6),(3L8)	714-719
1. Adjustable seat , (3L6),(3L8)	714
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	715
3. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	716
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Lumbar support for driver seat	717
5. Operating unit for front left seat adjustment, Fuse carrier 2, Front passenger seat adjustment thermal fuse 1, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	718
6. Operating unit for front left seat adjustment, Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	719
066 - Seat backrest and electric lumbar support, driver seat , (811),(813)	720-723
1. Seat backrest and electric lumbar support, driver seat , (811),(813)	720
2. Driver seat lumbar support adjustment switch, Massage function button, Massage control unit, Fuse holder C	721
3. Massage control unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	722
4. Massage control unit	723
067 - Adjustable seat , (3L4),(3L7)	724-729
1. Adjustable seat , (3L4),(3L7)	724
2. Driver seat adjustment control unit, Fuse holder C, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	725
3. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	726
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Lumbar support for driver seat	727
5. Operating unit for front right seat adjustment, Fuse carrier 2, Front passenger seat adjustment thermal fuse 1, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	728
6. Operating unit for front right seat adjustment, Front passenger seat lumbar support adjustment switch. Lumbar support for front passenger seat. Front passenger seat backrest adjustment motor	729

068 - Adjustable seat , (3L6),(3L8)	730-735
1. Adjustable seat , (3L6),(3L8)	730
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	731
3. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	732
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Lumbar support for driver seat	733
5. Operating unit for front left seat adjustment, Fuse carrier 2, Front passenger seat adjustment thermal fuse 1, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	734
6. Operating unit for front left seat adjustment, Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	735
069 - Preparation for multimedia system , (9WM),(9WU),(9WW),(9WY)	736-737
1. Preparation for multimedia system , (9WM),(9WU),(9WW),(9WY)	736
2. Control unit for iPad, Control unit 2 for iPad, Fuse holder H, Video socket, Video socket 2	737
070 - Engine sound generator , CUKC	738-739
1. Engine sound generator , CUKC	738
2. Data bus diagnostic interface, Engine sound generator control unit, Actuator 1 for engine sound generator, Fuse holder C	739
071 - 1.4l petrol engine , CUKC	740-757
1. 1.4l petrol engine , CUKC	740
2. Main relay, Fuse holder B	741
3. Battery, Tank flap release, Battery monitor control unit, Onboard supply control unit, Fuse holder B, Fuse holder D	742
4. Switch module 1 in centre console, Onboard supply control unit	743
5. Radiator outlet coolant temperature sender, Temperature sender after electric drive motor, Brake servo	744
6. High-voltage battery 1, Accelerator pedal module, Tank pressure sensor, Fuel tank shut-off valve	745
7. Oil level and oil temperature sender, Power steering control unit, Coolant circulation pump before power and control electronics for electric drive	746
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Mechatronic unit for dual clutch gearbox, Radiator fan	747
9. Steering column electronics control unit, Data bus diagnostic interface, Interface for entry and start system	748
10. Coolant temperature sender for heater, Power and control electronics for electric drive	749
11. Throttle valve module, Charge pressure positioner	750
12. Intake manifold sender, Hall sender, Fuel pressure sender, Hall sender 3	751
13. Charge pressure sender, Engine speed sender, Knock sensor 1, Coolant temperature sender	752
14. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant changeover valve 1, Coolant changeover valve 2	753
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	754
16. Coolant valve for gearbox, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit, Coolant pump for high-voltage battery	755
17. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	756
18. Fuel delivery unit, Fuel pump control unit, Dash panel insert	757
072 - Dual clutch gearbox 0DD , CUKC	758-762
1. Dual clutch gearbox 0DD , CUKC	758
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Solenoid valve 1, Solenoid valve 2, Solenoid valve 3, Solenoid valve 4, Solenoid valve 5, Solenoid valve 6, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Fuse holder A	759
3. Gearbox hydraulic pressure sender, Clutch travel sender 1, Clutch travel sender 2, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	760
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Mechatronic unit for dual clutch gearbox, Fuse holder C, Hydraulic pump motor	761
5. Selector lever, Selector lever position display	762
073 - High-voltage system , CUKC	763-779
1. High-voltage system , CUKC	763
2. Coolant shortage indicator sender. Coolant shortage indicator control unit. Onboard supply	764

control unit, Fuse holder A, Fuse holder B	
3. Heater and air conditioning controls, Coolant shortage indicator sender 2, Air conditioning system relay, Coolant shortage indicator control unit, Fuse holder B, Fuse holder C	765
4. High-voltage battery 1, Trailer detector control unit	766
5. High-voltage battery 1, Coolant valve for high-voltage battery, Coolant pump for high-voltage battery	767
6. High-voltage battery 1, Airbag control unit, Maintenance connector for high-voltage system	768
7. High-voltage battery 1, Power and control electronics for electric drive, Three-phase current drive	769
8. Power and control electronics for electric drive, Three-phase current drive	770
9. Power and control electronics for electric drive, Three-phase current drive	771
10. Power and control electronics for electric drive	772
11. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, High-voltage heater (PTC) control unit	773
12. Charging unit 1 for high-voltage battery, Control unit for air conditioner compressor, High-voltage heater (PTC) control unit	774
13. Charging unit 1 for high-voltage battery	775
14. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	776
15. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, High-voltage battery charging socket 1	777
16. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	778
17. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, High-voltage battery charging socket 1	779
074 - Air conditioning system for models with high-voltage system , CUKC	780-788
1. Air conditioning system for models with high-voltage system , CUKC	780
2. Pressure sender for refrigerant circuit, Air conditioning system relay, Fresh air blower control unit, Fuse holder B, Fuse holder C, Fresh air blower	781
3. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Data bus diagnostic interface	782
4. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Refrigerant shut-off valve for heater and air conditioner unit, Refrigerant shut-off valve for high-voltage battery heat exchanger	783
5. Charging unit 1 for high-voltage battery, Heater and air conditioning controls, External air quality and air humidity sensor, Control unit for air conditioning compressor, High-voltage heater (PTC) control unit, Three-phase current drive	784
6. Heater and air conditioning controls, Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Left temperature flap control motor, Right temperature flap control motor	785
7. Heater and air conditioning controls, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	786
8. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Potentiometer for rear temperature flap motor, Defroster flap control motor, Rear temperature flap control motor	787
9. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor	788
075 - Emergency call module , (EL1),(EL2),(EL5),(EL6),(NZ3),(NZ4)	789-792
1. Emergency call module , (EL1),(EL2),(EL5),(EL6),(NZ3),(NZ4)	789
2. Telematics button module, Airbag control unit, Onboard supply control unit, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	790
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit	791
4. Data bus diagnostic interface, Emergency call module control unit and communication unit, Roof aerial, Telephone microphone, GSM aerial 2	792
076 - Fuse assignment for models with high-voltage system , CUKC	793-823
1. Fuse assignment for models with high-voltage system , CUKC	793
2. Battery, Battery monitor control unit, Fuse holder A, Jump start connection	794
3. Horn relay, Fuse holder A, Fuse holder B	795
4. Fuse holder B	796
5. Air conditioning system relay, Fuse holder B	797
6. Main relay, Fuse holder B	798
7. Fuse holder B	799
8. Heated windscreen relay, Fuse holder B, Coupling point in interior, below left	800
9. Engine/motor control unit, Coupling point in engine compartment, left	801
10. Coupling point in engine compartment, left	802
11. Onboard supply control unit	803

12. Fuse holder C	804
13. Fuse holder C	805
14. Fuse holder C	806
15. Fuse holder C	807
16. Fuse holder C	808
17. Fuse holder C	809
18. Fuse holder C	810
19. Heated rear window relay, Fuse holder C	811
20. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	812
21. Fuse holder C	813
22. Fuse holder C	814
23. Fuse holder C	815
24. Fuse holder C	816
25. Fuse holder C	817
26. Fuse holder C	818
27. Fuse holder C	819
28. Fuse holder C	820
29. Fuse holder C	821
30. Fuse holder D, Front passenger seat adjustment thermal fuse 1, Fuse holder H	822
31. High-voltage system fuse 1	823
077 - High-voltage battery system , CUKC	824-836
1. High-voltage battery system , CUKC	824
2. Trailer detector control unit, Fuse holder C	825
3. Airbag control unit, Coolant valve for high-voltage battery, Maintenance connector for high-voltage system, Coolant pump for high-voltage battery	826
4. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, High-voltage heater (PTC) control unit	827
5. High-voltage battery 1, Coolant temperature sender 1 for high-voltage battery, Coolant temperature sender 2 for high-voltage battery, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery	828
6. High-voltage battery 1, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery	829
7. High-voltage battery 1, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery	830
8. High-voltage battery 1, Module monitor control unit for batteries, Switching unit for high-voltage battery	831
9. High-voltage battery 1, Module monitor control unit for batteries, Precharge contactor for high-voltage battery, High-voltage battery power contactor 1, Protection resistor for high-voltage battery, Switching unit for high-voltage battery	832
10. High-voltage battery 1, Current sensor for high-voltage battery, Module monitor control unit for batteries, High-voltage battery power contactor 2, Switching unit for high-voltage battery, High-voltage system fuse 1	833
11. High-voltage battery 1	834
12. High-voltage battery 1, Battery module 4, Battery module 5, Battery module 6, Battery module 7	835
13. High-voltage battery 1, Battery module 1, Battery module 2, Battery module 3, Battery module 0	836
078 - 2.0l diesel engine , CRGA	837-858
1. 2.0l diesel engine , CRGA	837
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder B	838
3. Terminal 30 voltage supply relay, High heat output relay, Battery monitor control unit, Fuse holder B, Auxiliary air heater element	839
4. Automatic glow period control unit, Fuse holder B	840
5. Automatic glow period control unit, Low heat output relay, Fuse holder B, Fuse holder C	841
6. Switch module 1 in centre console, Onboard supply control unit	842
7. Engine/motor control unit	843
8. Air mass meter, Exhaust gas temperature sender 2, Gearbox neutral position sender, Engine/motor control unit, Heater element for crankcase breather	844
9. Water separator sender, Engine/motor control unit, Exhaust flap control unit	845
10. Oil level and oil temperature sender, Engine/motor control unit, Exhaust flap control unit, Auxiliary pump for heating	846
11. Alternator with voltage regulator, Brake light switch, Engine/motor control unit, Radiator fan, Charge air cooling pump	847
12. Accelerator pedal module, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	848
13. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	849

14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Glow plug 1, Glow plug 2	850
15. Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 3, Glow plug 4	851
16. Hall sender, Exhaust gas temperature sender 1, Position sender for charge pressure positioner, Engine/motor control unit	852
17. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	853
18. Engine speed sender, Charge pressure sender, Fuel pressure sender, Engine/motor control unit	854
19. Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Injector, cylinder 1	855
20. Data bus diagnostic interface, Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	856
21. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	857
22. Fuel delivery unit, Fuel pump control unit, Dash panel insert	858
079 - 1.4l petrol engine , CZEA	859-876
1. 1.4l petrol engine , CZEA	859
2. Battery, Starter, Alternator with voltage regulator, Starter relay 1, Starter relay 2, Fuse holder B	860
3. Main relay, Battery monitor control unit, Fuse holder B	861
4. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit	862
5. Engine/motor control unit	863
6. Accelerator pedal module, Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit	864
7. Brake light switch, Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Radiator fan	865
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	866
9. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Vacuum pump for brakes	867
10. Data bus diagnostic interface, Engine/motor control unit	868
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	869
12. Intake manifold sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	870
13. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	871
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	872
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	873
16. Engine/motor control unit, Fuel pressure regulating valve, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Charge air cooling pump	874
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	875
18. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	876
080 - 1.4l petrol engine , CZCA,CZDA	877-894
1. 1.4l petrol engine , CZCA,CZDA	877
2. Battery, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	878
3. Starter, Main relay, Fuse holder B	879
4. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit	880
5. Engine/motor control unit	881
6. Accelerator pedal module, Clutch position sender, ABS control unit, Engine/motor control unit	882
7. Brake light switch, Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Radiator fan	883
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Gearbox neutral position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	884
9. Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit	885
10. Data bus diagnostic interface, Engine/motor control unit	886
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	887
12. Intake manifold sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	888
13. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	889
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	890
15. Knock sensor 1. Engine/motor control unit. Activated charcoal filter solenoid valve 1. Camshaft	891

control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	
16. Engine/motor control unit, Fuel pressure regulating valve, Charge air cooling pump	892
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	893
18. Fuel delivery unit, Fuel pump control unit, Dash panel insert	894
081 - 1.8l petrol engine , CJSA,CJSC	895-915
1. 1.8l petrol engine , CJSA,CJSC	895
2. Battery, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	896
3. Starter, Main relay, Fuse holder B	897
4. Switch module 1 in centre console, Start/stop operation button, Driving mode selection button, Onboard supply control unit, Engine component power supply relay, Fuse holder B	898
5. Engine/motor control unit, Radiator fan	899
6. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system, Fuse holder C	900
7. Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	901
8. Brake light switch, Accelerator pedal module, Engine/motor control unit	902
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	903
10. Alternator with voltage regulator, Charge pressure sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	904
11. Engine/motor control unit, Coolant shut-off valve	905
12. Engine speed sender, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	906
13. Throttle valve module, Intake manifold sender, Knock sensor 1, Engine/motor control unit	907
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	908
15. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3	909
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4, Auxiliary pump for heating	910
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	911
18. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	912
19. Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	913
20. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	914
21. Fuel delivery unit, Fuel pump control unit, Dash panel insert	915
082 - 2.0l petrol engine , CHHB,CXDA	916-941
1. 2.0l petrol engine , CHHB,CXDA	916
2. Starter, Starter relay 1, Starter relay 2, Fuse holder B, Jump start connection	917
3. Main relay, Engine component power supply relay, Fuse holder B	918
4. Battery, Switch module 1 in centre console, Start/stop operation button, Driving mode selection button, Battery monitor control unit, Onboard supply control unit, Battery isolation igniter, Fuse holder B, Fuse holder D	919
5. Engine/motor control unit, Radiator fan	920
6. ABS control unit, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Fuse holder C	921
7. Brake light switch, Accelerator pedal module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	922
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	923
9. Engine/motor control unit	924
10. Data bus diagnostic interface, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	925
11. Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit	926
12. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Gearbox oil cooling pump	927
13. Engine/motor control unit, Fuel pressure regulating valve, Intake manifold flap valve, Valve for oil pressure control. Actuator for engine temperature regulation	928

14. Oil pressure switch for reduced oil pressure, Intake manifold sender, Engine/motor control unit, Turbocharger air recirculation valve, Piston cooling jet control valve	929
15. Engine/motor control unit, Charge pressure positioner	930
16. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3	931
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4, Auxiliary pump for heating	932
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	933
19. Throttle valve module, Engine/motor control unit	934
20. Engine speed sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	935
21. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	936
22. Fuel pressure sender for low pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	937
23. Stage 3 oil pressure switch, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	938
24. Hall sender, Hall sender 3, Engine/motor control unit	939
25. Fuel delivery unit, Fuel pump control unit, Dash panel insert	940
26. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	941
083 - 2.0l petrol engine , CJXA,DNUA	942-964
1. 2.0l petrol engine , CJXA,DNUA	942
2. Starter, Starter relay 1, Starter relay 2, Fuse holder B, Jump start connection	943
3. Main relay, Fuse holder B	944
4. Battery, Switch module 1 in centre console, Start/stop operation button, Driving mode selection button, Battery monitor control unit, Onboard supply control unit, Engine component power supply relay, Battery isolation igniter, Fuse holder B, Fuse holder D	945
5. Engine/motor control unit, Radiator fan	946
6. Brake light switch, Accelerator pedal module, Radiator outlet coolant temperature sender, Engine/motor control unit	947
7. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	948
8. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2, Interface for entry and start system, Fuse holder C	949
9. Alternator with voltage regulator, Charge pressure sender, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	950
10. Engine/motor control unit	951
11. Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox, Actuator for engine temperature regulation	952
12. Throttle valve module, Intake manifold sender, Engine/motor control unit	953
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine speed sender, Hall sender 3, Engine/motor control unit	954
14. Knock sensor 1, Coolant temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Fuel pressure regulating valve	955
15. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve, Charge pressure positioner	956
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	957
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	958
18. Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4	959
19. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator B for cylinder 4	960
20. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	961
21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	962
22. Lambda probe 1 before catalytic converter, Engine/motor control unit	963
23. Fuel delivery unit, Lambda probe 1 after catalytic converter, Fuel gauge sender for auxiliary fuel tank, Fuel pump control unit, Engine/motor control unit, Dash panel insert	964
084 - 1.4l petrol engine . CUKC	965-982

1. 1.4l petrol engine , CUKC	965
2. Main relay, Fuse holder B	966
3. Battery, Tank flap release, Battery monitor control unit, Onboard supply control unit, Fuse holder B, Fuse holder D	967
4. Switch module 1 in centre console, Onboard supply control unit	968
5. Radiator outlet coolant temperature sender, Engine temperature sender 2, Brake servo	969
6. High-voltage battery 1, Accelerator pedal module, Tank pressure sensor, Fuel tank shut-off valve	970
7. Oil level and oil temperature sender, Power steering control unit, Coolant circulation pump before power and control electronics for electric drive	971
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	972
9. Steering column electronics control unit, Interface for entry and start system, Radiator fan	973
10. Coolant temperature sender for heater, Power and control electronics for electric drive	974
11. Throttle valve module, Charge pressure positioner	975
12. Intake manifold sender, Hall sender, Fuel pressure sender, Hall sender 3	976
13. Charge pressure sender, Engine speed sender, Knock sensor 1, Coolant temperature sender	977
14. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant changeover valve 1, Coolant changeover valve 2	978
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	979
16. Coolant valve for gearbox, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit, Coolant pump for high-voltage battery	980
17. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	981
18. Fuel delivery unit, Fuel pump control unit, Dash panel insert	982
085 - Basic equipment	983-1006
1. Basic equipment	983
2. Horn relay, Onboard supply control unit, Fuse holder B, Fuse holder C	984
3. Heated rear window relay, Onboard supply control unit, Fuse holder C	985
4. Reversing light switch, Brake fluid level warning contact, Bonnet contact switch, Front right brake pad wear sender, Treble horn, Bass horn, Onboard supply control unit	986-987
5. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left daytime running light bulb, Right daytime running light bulb	988
6. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	989
7. Onboard supply control unit, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	990
8. Rotary light switch, Headlight range control regulator, Onboard supply control unit	991
9. Hazard warning light switch, Centre switch module in dash panel, Front reading light button, Onboard supply control unit, Front interior light	992
10. Interior mirror, Rear reading light button, Anti-dazzle interior mirror button, Onboard supply control unit, Engine/motor control unit, Rear interior light, Automatic anti-dazzle interior mirror	993
11. Glove compartment light switch, Onboard supply control unit, Luggage compartment light, Glove compartment light, Analogue clock	994
12. Ignition/starter switch, Intermittent wiper switch, Multifunction display call-up button, Selector lever, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	995
13. Turn signal switch, Cruise control system switch, Cruise control system (CCS) SET button, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side	996
14. Heater and air conditioning controls, Fresh air blower control unit, Heater control unit, Onboard supply control unit, Fresh air blower, Air recirculation flap control motor	997
15. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Heater control unit, Onboard supply control unit, Temperature flap control motor, Air distribution flap control motor	998
16. Onboard supply control unit, Rear left fog light bulb, Left tail light cluster, Left tail light bulb, Left tail light cluster 2, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Left brake and tail light bulb	999
17. Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster, Right tail light cluster 2, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb	1000
18. Onboard supply control unit, High-level brake light bulb	1001
19. Rear lid handle release button. Onboard supply control unit. Heated rear window	1002

20. Onboard supply control unit	1003
21. Fuel tank filler flap central locking actuator, Onboard supply control unit, Left number plate light, Right number plate light	1004
22. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	1005
23. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	1006
086 - Convenience system, left-hand drive , (LOL)	1007-1042
1. Convenience system, left-hand drive , (LOL)	1007
2. Fuse holder C	1008
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	1009
4. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	1010
5. Exterior mirror adjuster, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	1011
6. Operating unit for window regulator in driver door, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	1012
7. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Left window regulator motor, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	1013
8. Driver door control unit	1014
9. Coupling point for front left door	1015
10. Coupling point for front right door	1016
11. Front passenger door control unit, Right window regulator motor	1017
12. Window regulator switch in front passenger door, Front passenger door control unit, Front passenger door lock unit, Front passenger side door warning lamp	1018
13. Front passenger door control unit, Passenger side exterior mirror, Front passenger side fold-in mirror motor	1019
14. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	1020
15. Rear driver side door control unit, Rear left window regulator motor	1021
16. Rear driver side door control unit, Rear left door lock unit, Rear left window regulator motor	1022
17. Rear left window regulator switch, in door, Rear driver side door control unit, Rear passenger side door control unit, Rear left door warning lamp	1023
18. Rear passenger side door control unit, Rear right window regulator motor	1024
19. Rear right door contact switch, Rear passenger side door control unit, Rear right door lock unit	1025
20. Rear right window regulator switch, in door, Rear passenger side door control unit, Rear right window regulator motor, Rear right door warning lamp	1026
21. Interior mirror, Main beam assist control unit	1027
22. Interior mirror, Rain and light sensor, Main beam assist control unit	1028
23. Front interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	1029
24. Rear lid handle release button, Control unit for overhead view camera	1030
25. Button to close rear lid in luggage compartment	1031
26. Rear lid lock unit	1032
27. Anti-trapping sender, Anti-trapping sender 2, Rear lid control unit	1033
28. Sensor in motor 2 for rear lid, Rear lid control unit, Motor 2 for rear lid	1034
29. Sensor in motor 1 for rear lid, Rear lid control unit, Motor 1 for rear lid	1035
30. Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	1036
31. Rear lid control unit	1037
32. Rear lid control unit	1038
33. Data bus diagnostic interface, Rear lid control unit	1039
34. Rear lid power opening sender, Rear lid power opening sender 2, Tyre Pressure Monitoring System control unit, Onboard supply control unit, Rear lid power opening control unit, Interface for entry and start system	1040
35. Onboard supply control unit	1041
36. Onboard supply control unit, Motor 1 for luggage compartment cover, Motor 2 for luggage compartment cover	1042
087 - Convenience system, right-hand drive , (LOR)	1043-1078
1. Convenience system, right-hand drive , (LOR)	1043
2. Fuse holder C	1044
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	1045
4. Driver door control unit. Driver side exterior mirror turn signal bulb. Driver side exterior	1046

mirror, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	
5. Exterior mirror adjuster, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	1047
6. Operating unit for window regulator in driver door, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	1048
7. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Right window regulator motor, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	1049
8. Driver door control unit	1050
9. Driver door control unit	1051
10. Coupling point for front left door	1052
11. Front passenger door control unit, Left window regulator motor	1053
12. Window regulator switch in front passenger door, Front passenger door control unit, Front passenger door lock unit, Front passenger side door warning lamp	1054
13. Front passenger door control unit, Passenger side exterior mirror, Front passenger side fold-in mirror motor	1055
14. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	1056
15. Rear driver side door control unit, Rear left window regulator motor	1057
16. Rear driver side door control unit, Rear left door lock unit, Rear left window regulator motor	1058
17. Rear left window regulator switch, in door, Rear driver side door control unit, Rear passenger side door control unit, Rear left door warning lamp	1059
18. Rear passenger side door control unit, Rear right window regulator motor	1060
19. Rear right door contact switch, Rear passenger side door control unit, Rear right door lock unit	1061
20. Rear right window regulator switch, in door, Rear passenger side door control unit, Rear right window regulator motor, Rear right door warning lamp	1062
21. Interior mirror, Main beam assist control unit	1063
22. Interior mirror, Rain and light sensor, Main beam assist control unit	1064
23. Front interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	1065
24. Rear lid handle release button, Control unit for overhead view camera	1066
25. Button to close rear lid in luggage compartment	1067
26. Rear lid lock unit	1068
27. Anti-trapping sender, Anti-trapping sender 2, Rear lid control unit	1069
28. Sensor in motor 2 for rear lid, Rear lid control unit, Motor 2 for rear lid	1070
29. Sensor in motor 1 for rear lid, Rear lid control unit, Motor 1 for rear lid	1071
30. Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	1072
31. Rear lid control unit	1073
32. Rear lid control unit	1074
33. Data bus diagnostic interface, Rear lid control unit	1075
34. Rear lid power opening sender, Rear lid power opening sender 2, Tyre Pressure Monitoring System control unit, Onboard supply control unit, Rear lid power opening control unit, Interface for entry and start system	1076
35. Onboard supply control unit	1077
36. Onboard supply control unit, Motor 1 for luggage compartment cover, Motor 2 for luggage compartment cover	1078
088 - Fuse assignment	1079-1121
1. Fuse assignment	1079
2. Battery, Fuse holder A	1080
3. Fuse holder A	1081
4.	1082
5. Starter relay 1, Starter relay 2	1083
6. High heat output relay, Horn relay	1084
7. Main relay, Terminal 30 voltage supply relay	1085
8.	1086
9. Control unit for NOx sender	1087
10. Control unit 2 for NOx sender	1088
11. Heated windscreen relay, Engine component power supply relay	1089
12. Automatic glow period control unit, Low heat output relay	1090
13.	1091
14. Engine/motor control unit	1092
15. Coupling point in engine compartment, left	1093
16. Coupling point in engine compartment, left	1094
17. Coupling point in engine compartment, left	1095

18. Coupling point in engine compartment, left	1096
19. Coupling point on engine, top right	1097
20. Onboard supply control unit	1098
21. Fuse holder C	1099
22. Fuse holder C	1100
23. Fuse holder C	1101
24. Fuse holder C	1102
25. Fuse holder C	1103
26. Fuse holder C	1104
27. Fuse holder C	1105
28. Heated rear window relay, Magnetic clutch relay, Air conditioner compressor regulating valve, Magnetic clutch for supercharger, Fuse holder C	1106
29. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	1107
30. Fuse holder C	1108
31. Fuse holder C	1109
32. Fuse holder C	1110
33. Fuse holder C	1111
34. Fuse holder C	1112
35. Relay for reducing agent metering system, Fuse holder C	1113
36. Fuse holder C	1114
37. Fuse holder C	1115
38. Fuse holder C	1116
39. Fuse holder C	1117
40. Fuse holder C	1118
41. Fuse holder C	1119
42. Front passenger seat adjustment thermal fuse 1, Fuse holder H	1120
43. Battery isolation igniter, Fuse holder D	1121
089 - Overhead view camera , (KA6),(KA7)	1122-1126
1. Overhead view camera , (KA6),(KA7)	1122
2. Rear lid handle release button, Data bus diagnostic interface, Control unit for overhead view camera	1123
3. Centre switch module in dash panel, Parking aid control unit, Control unit 1 for information electronics, Control unit for overhead view camera, Front overhead view camera	1124
4. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	1125
5. Control unit for overhead view camera, Rear overhead view camera	1126
090 - Tail light clusters with LEDs , (8SP),(8SQ)	1127-1133
1. Tail light clusters with LEDs , (8SP),(8SQ)	1127
2. Onboard supply control unit, Left tail light cluster	1128
3. Onboard supply control unit, Right tail light cluster	1129
4. Left tail light cluster 2	1130
5. Left tail light cluster 2	1131
6. Right tail light cluster 2	1132
7. Right tail light cluster 2	1133
091 - Heated windscreen , (4GX)	1134-1136
1. Heated windscreen , (4GX)	1134
2. Heated windscreen relay, Onboard supply control unit, Fuse holder B	1135
3. Heated windscreen relay 2, Fuse holder B, Heated windscreen	1136
092 - Radio and navigation system (South Korea) , (ER7)	1137-1140
1. Radio and navigation system (South Korea) , (ER7)	1137
2. Control unit for navigation system, Telephone microphone, Connection for external audio sources, Fuse holder C	1138
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system	1139
4. Control unit 1 for information electronics, Control unit for navigation system, Roof aerial, Left aerial module, Digital radio aerial	1140
093 - LED headlights , (8IU),(8Q5)	1141-1145
1. LED headlights , (8IU),(8Q5)	1141
2. Rear left vehicle level sender, Onboard supply control unit, Fuse holder C	1142
3. Output module 1 for left LED headlight, Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor, Left dynamic cornering light control motor	1143
4. Output module 1 for right LED headlight, Onboard supply control unit, Output module for right headlight. Control unit for right daytime running light and side light. Right LED module for daytime	1144

running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor, Right dynamic cornering light control motor	
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	1145
094 - Seat backrest and electric lumbar support, driver seat , (811),(813)	1146-1149
1. Seat backrest and electric lumbar support, driver seat , (811),(813)	1146
2. Driver seat lumbar support adjustment switch, Massage control unit, Fuse holder C	1147
3. Massage function button, Massage control unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	1148
4. Massage control unit	1149
095 - Adjustable seat , (2R2),(2R9),(810)	1150-1155
1. Adjustable seat , (2R2),(2R9),(810)	1150
2. Driver seat adjustment control unit, Front passenger seat adjustment thermal fuse 1, Fuse holder C, Fuse carrier 2, Driver seat backrest adjustment motor	1151
3. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1152
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Lumbar support for driver seat	1153
5. Operating unit for front right seat adjustment, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	1154
6. Operating unit for front right seat adjustment, Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	1155
096 - Adjustable seat , (2R8),(3E0)	1156-1161
1. Adjustable seat , (2R8),(3E0)	1156
2. Data bus diagnostic interface, Driver seat adjustment control unit, Fuse holder C, Fuse carrier 2, Front passenger seat adjustment thermal fuse 1, Driver seat backrest adjustment motor	1157
3. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1158
4. Driver operating unit for memory settings, Driver seat adjustment control unit, Lumbar support for driver seat	1159
5. Operating unit for front left seat adjustment, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	1160
6. Operating unit for front left seat adjustment, Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	1161
097 - Seat backrest and electric lumbar support, driver seat , (7P7),(7P8)	1162-1164
1. Seat backrest and electric lumbar support, driver seat , (7P7),(7P8)	1162
2. Operating unit for front left seat adjustment, Fuse holder C, Front left backrest, Front left backrest adjustment motor	1163
3. Operating unit for front right seat adjustment, Front right backrest, Front right backrest adjustment motor	1164
098 - Seat ventilation , (4D3)	1165-1169
1. Seat ventilation , (4D3)	1165
2. Onboard supply control unit, Front passenger seat adjustment thermal fuse 1, Fuse holder C, Front left seat cushion fan 1	1166
3. Front left seat backrest fan 1	1167
4. Front right seat backrest fan 1, Front right seat cushion fan 1	1168
5. Coupling point for front right seat	1169
099 - Seat heating , (4A3),(4A4)	1170-1175
1. Seat heating , (4A3),(4A4)	1170
2. Heater and air conditioning controls, Button for left seat heating, Button for right seat heating, Onboard supply control unit, Data bus diagnostic interface, Seat heating (driver side)	1171
3. Onboard supply control unit, Seat heating (driver side)	1172
4. Onboard supply control unit, Heated backrest for driver seat, Heated backrest for front passenger seat, Seat heating (driver side), Seat heating (front passenger side)	1173
5. Onboard supply control unit, Seat heating (front passenger side)	1174
6. Operating and display unit for rear air conditioning system, Button for rear left seat heating, Button for rear right seat heating, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	1175
100 - Seat backrest and electric lumbar support, driver seat , (812)	1176-1179
1. Seat backrest and electric lumbar support, driver seat , (812)	1176
2. Driver seat lumbar support adjustment switch, Massage control unit, Fuse holder C	1177
3. Massage function button, Massage control unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	1178

4. Massage control unit	1179
101 - Anti-theft alarm system , (7AL)	1180-1181
1. Anti-theft alarm system , (7AL)	1180
2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder B, Fuse holder C	1181
102 - Airbag systems , (L0L)	1182-1192
1. Airbag systems , (L0L)	1182
2. Battery isolation igniter, Fuse holder C, Fuse holder D	1183
3. Centre switch module in dash panel, Airbag control unit, Diagnostic connection	1184
4. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner	1185
5. Crash sensor for front airbag, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	1186
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	1187
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1188
8. Front passenger side belt switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Seat occupied sensor on front passenger side, Airbag control unit	1189
9. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	1190
10. Airbag coil connector and return ring with slip ring, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	1191
11. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp	1192
103 - Airbag systems , (L0R)	1193-1203
1. Airbag systems , (L0R)	1193
2. Battery isolation igniter, Fuse holder C, Fuse holder D	1194
3. Centre switch module in dash panel, Airbag control unit, Diagnostic connection	1195
4. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner	1196
5. Crash sensor for front airbag, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	1197
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	1198
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1199
8. Front passenger side belt switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Seat occupied sensor on front passenger side, Airbag control unit	1200
9. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	1201
10. Airbag coil connector and return ring with slip ring, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	1202
11. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp	1203
104 - Pilot line for high-voltage system , CUKC	1204-1206
1. Pilot line for high-voltage system , CUKC	1204
2. High-voltage battery 1, Power and control electronics for electric drive, Maintenance connector for high-voltage system, Three-phase current drive	1205
3. Charging unit 1 for high-voltage battery, Control unit for air conditioning compressor, High-voltage heater (PTC) control unit	1206
105 - Dual clutch gearbox 0GC , (0IJ)	1207-1212
1. Dual clutch gearbox 0GC , (0IJ)	1207
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	1208
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1209
4. Selector lever, Onboard supply control unit, Steering column electronics control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	1210
5. Selector lever, Data bus diagnostic interface	1211
6. Selector lever. Selector lever position display	1212

106 - Telematics , (7I3)	1213-1214
1. Telematics , (7I3)	1213
2. Selector lever, Data bus diagnostic interface, Telematics control unit for real-time monitoring, LTE aerial 1, Fuse holder C	1214
107 - 1.5l petrol engine , DADA	1215-1233
1. 1.5l petrol engine , DADA	1215
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder B	1216
3. Main relay, Fuse holder B	1217
4. Vacuum pump relay, Fuse holder C, Vacuum pump for brakes	1218
5. Switch module 1 in centre console, Onboard supply control unit	1219
6. Engine/motor control unit	1220
7. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1221
8. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Gearbox neutral position sender, Power steering control unit, Engine/motor control unit, Radiator fan	1222
9. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	1223
10. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	1224
11. Engine/motor control unit	1225
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	1226
13. Throttle valve module, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	1227
14. Intake manifold sender, Engine speed sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1	1228
15. Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Inlet camshaft control valve 1	1229
16. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve, Exhaust cam actuator for cylinder 3	1230
17. Engine temperature regulation module, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	1231
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Charge air cooling pump	1232
19. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector, cylinder 3, Injector, cylinder 4	1233
108 - Electromechanical brake servo	1234-1238
1. Electromechanical brake servo	1234
2. Brake servo, Fuse holder B	1235
3. Onboard supply control unit, Engine/motor control unit, Brake servo, Brake system pressure accumulator	1236
4. Data bus diagnostic interface, Brake servo	1237
5. Brake servo	1238
109 - Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZA),(2ZH),(2ZW),(7ZD)	1239-1241
1. Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZA),(2ZH),(2ZW),(7ZD)	1239
2. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Airbag igniter on driver side, Fuse holder C	1240
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction steering wheel control unit	1241
110 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	1242-1244
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	1242
2. Switch module 2 in centre console, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	1243
3. Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	1244
111 - Data bus network	1245-1264
1. Data bus network	1245
2. Fuse holder B, Fuse holder C, Diagnostic connection	1246
3. Data bus diagnostic interface	1247
4. Digital sound package control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for navigation system. TV tuner	1248

5. Pressure sender for refrigerant circuit, Auxiliary heater control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Reversing camera	1249
6. Electronically controlled damping control unit, Parking aid control unit, All-wheel drive control unit, Data bus diagnostic interface, Control unit for overhead view camera, Remote control receiver for auxiliary heater	1250
7. ABS control unit, Power steering control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	1251
8. Selector lever, NOx sender, Particulate sensor, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, DC/AC converter with socket, 12 V - 230 V	1252
9. Adaptive cruise control unit, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	1253
10. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Interior mirror, Data bus diagnostic interface, Output module for left headlight, Output module for right headlight, Lane change assist control unit, Lane change assist control unit 2, Main beam assist control unit, Control unit for left daytime running light and side light, Control unit for right daytime running light and side light, Front left headlight, Front right headlight, Front camera for driver assist systems	1254
11. Alternator with voltage regulator, Battery monitor control unit, Data bus diagnostic interface, Front right seat backrest fan 1, Front right seat cushion fan 1	1255
12. Data bus diagnostic interface, Driver seat adjustment control unit, Control unit for head-up display, Front left seat backrest fan 1, Front left seat cushion fan 1	1256
13. Data bus diagnostic interface, Rear lid power opening control unit, Interface for entry and start system, Light for front right door contour lighting	1257
14. Sliding sunroof adjustment control unit, Front passenger door control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Data bus diagnostic interface, Coupling point in interior, Analogue clock	1258
15. Driver door control unit, Light for front left door contour lighting	1259
16. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Fresh air blower control unit, Trailer detector control unit, Rear lid control unit, Control unit for electronic steering column lock	1260
17. Rear driver side door control unit, Rear passenger side door control unit, Light 1 for rear left door background lighting, Rear left window regulator motor, Rear right window regulator motor	1261
18. Control unit in dash panel insert, Dash panel insert	1262
19. Rotary light switch, Rain and light sensor, Anti-theft alarm sensor, Alarm horn, Wiper motor control unit, Onboard supply control unit, Front interior light	1263
20. Onboard supply control unit, Light for left dash panel background lighting, Light for right dash panel background lighting	1264
112 - Basic equipment	1265-1287
1. Basic equipment	1265
2. Horn relay, Fuse holder B, Fuse holder C	1266
3. Heated rear window relay, Onboard supply control unit, Fuse holder C	1267
4. Reversing light switch, Brake fluid level warning contact, Bonnet contact switch 2, Bonnet contact switch, Front right brake pad wear sender, Treble horn, Bass horn, Onboard supply control unit	1268
5. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left daytime running light bulb, Right daytime running light bulb	1269
6. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	1270
7. Onboard supply control unit, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	1271
8. Rotary light switch, Onboard supply control unit	1272
9. Hazard warning light switch, Centre switch module in dash panel, Front reading light button, Onboard supply control unit, Front interior light	1273
10. Interior mirror, Rear reading light button, Anti-dazzle interior mirror button, Brake light switch, Onboard supply control unit, Engine/motor control unit, Rear interior light, Automatic anti-dazzle interior mirror	1274
11. Glove compartment light switch, Selector lever, Onboard supply control unit, Luggage compartment light, Glove compartment light, Analogue clock	1275
12. Ignition/starter switch, Intermittent wiper switch, Multifunction display call-up button, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	1276
13. Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	1277
14. Turn signal switch. Horn plate. Airbag control unit. Onboard supply control unit. Steering	1278

column electronics control unit, Airbag igniter on driver side	
15. Heater and air conditioning controls, Fresh air blower control unit, Heater control unit, Onboard supply control unit, Fresh air blower, Air recirculation flap control motor	1279
16. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Heater control unit, Onboard supply control unit, Temperature flap control motor, Air distribution flap control motor	1280
17. Onboard supply control unit, Rear left fog light bulb, Left tail light cluster, Left tail light bulb, Left tail light cluster 2, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb, Left brake and tail light bulb	1281
18. Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster, Right tail light cluster 2, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Right brake and tail light bulb, High-level brake light bulb	1282
19. Rear lid handle release button, Onboard supply control unit, Heated rear window	1283
20. Onboard supply control unit	1284
21. Fuel tank filler flap central locking actuator, Onboard supply control unit, Left number plate light, Right number plate light	1285
22. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	1286
23. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	1287
113 - Fuse assignment	1288-1328
1. Fuse assignment	1288
2. Battery, Fuse holder A	1289
3. Fuse holder A	1290
4. Fuse holder B	1291
5. Starter relay 1, Starter relay 2, Fuse holder B	1292
6. High heat output relay, Horn relay, Fuse holder B	1293
7. Main relay, Terminal 30 voltage supply relay, Fuse holder B	1294
8. Fuse holder B	1295
9. Fuse holder B	1296
10. Control unit for NOx sender, Control unit 2 for NOx sender, NOx sender 2, Particulate sensor, Fuse holder B	1297
11. Heated windscreen relay, Engine component power supply relay, Fuse holder B	1298
12. Automatic glow period control unit, Low heat output relay, Fuse holder B	1299
13. Fuse holder B	1300
14. Engine/motor control unit	1301
15. Coupling point in engine compartment, left	1302
16. Coupling point in engine compartment, left	1303
17. Coupling point in engine compartment, left	1304
18. Coupling point in engine compartment, left	1305
19. Coupling point on engine, top right	1306
20. Onboard supply control unit	1307
21. Fuse holder C	1308
22. Fuse holder C	1309
23. Fuse holder C	1310
24. Fuse holder C	1311
25. Fuse holder C	1312
26. Fuse holder C	1313
27. Fuse holder C	1314
28. Heated rear window relay, Magnetic clutch relay, Air conditioner compressor regulating valve, Magnetic clutch for supercharger, Fuse holder C	1315
29. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	1316
30. Fuse holder C	1317
31. Fuse holder C	1318
32. Control unit for cornering light and headlight range control, Fuse holder C	1319
33. Fuse holder C	1320
34. Fuse holder C	1321
35. Relay for reducing agent metering system, Fuse holder C	1322
36. Fuse holder C	1323
37. Fuse holder C	1324
38. Fuse holder C	1325
39. Fuse holder C	1326
40. Front passenger seat adjustment thermal fuse 1, Fuse holder H	1327
41. Battery isolation igniter, Fuse holder D	1328
114 - LED headlights , (8IU),(8Q5)	1329-1333
1. LED headlights , (8IU),(8Q5)	1329
2. Rear left vehicle level sender. Onboard supply control unit. Fuse holder C	1330

3. Output module 1 for left LED headlight, Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor, Left dynamic cornering light control motor	1331
4. Output module 1 for right LED headlight, Onboard supply control unit, Output module for right headlight, Control unit for right daytime running light and side light, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor, Right dynamic cornering light control motor	1332
5. Onboard charging unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Telematics control unit for real-time monitoring	1333
115 - 2.0l petrol engine , CZPB,DKZA	1334-1361
1. 2.0l petrol engine , CZPB,DKZA	1334
2. Fuse holder B	1335
3. Fuse holder B	1336
4. Battery, Starter, Fuse holder C, Relay and fuse carrier 3, Jump start connection	1337
5. Switch module 1 in centre console, Onboard supply control unit, Engine/motor control unit	1338
6. Engine/motor control unit	1339
7. Brake light switch, Engine/motor control unit, Brake servo	1340
8. Accelerator pedal module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	1341
9. Lambda probe 1 before catalytic converter, Engine/motor control unit	1342
10. Lambda probe 1 after catalytic converter, Air mass meter, Radiator outlet coolant temperature sender, Engine/motor control unit	1343
11. Temperature sender before particulate filter, Temperature sender after particulate filter, Data bus diagnostic interface, Engine/motor control unit	1344
12. Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit	1345
13. Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit, Coolant valve for gearbox	1346
14. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	1347
15. Engine/motor control unit	1348
16. Engine speed sender, Engine/motor control unit, Actuator for engine temperature regulation	1349
17. Throttle valve module, Hall sender 3, Engine/motor control unit, Coolant shut-off valve	1350
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	1351
19. Intake manifold sender, Engine/motor control unit, Fuel pressure regulating valve	1352
20. Fuel pressure sender for low pressure, Exhaust gas pressure sensor 1, Engine/motor control unit	1353
21. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	1354
22. Charge pressure control module, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1355
23. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Spark plug 1, Auxiliary pump for heating	1356
24. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Inlet cam actuator A for cylinder 1, Spark plug 2, Spark plug 3, Spark plug 4	1357
25. Engine/motor control unit, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4	1358
26. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	1359
27. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1360
28. Fuel delivery unit, Fuel pump control unit, Dash panel insert	1361
801 - - Fitting locations: Earth points - 3	1362-1385
1. Earth points	1362-1385
1.1 Earth points in front part of vehicle	1362-1376
1.1.1 Front from left	1363-1364
1.1.2 Front from left, additional earth points for vehicles with hybrid drive	1365
1.1.3 Front from right	1366
1.1.4 Front from right, additional earth points for models with hybrid drive system	1367
1.1.5 1.4l petrol engine	1368
1.1.6 1.5l petrol engine	1369
1.1.7 1.8l petrol engine	1370

1.1.8 2.0l petrol engine	1371
1.1.9 Manual gearbox 0AJ	1372
1.1.10 Manual gearbox 02S	1373
1.1.11 Manual gearbox, 0BB, 0FB, 02Q	1374
1.1.12 Dual clutch gearbox 0CW	1375
1.1.13 Dual clutch gearbox, 0DL, 0D9, 0GC	1376
1.2 Earth points in middle part of vehicle	1377
1.2.1 Interior from left	1377
1.2.2 Interior from right	1378
1.3 Earth points in rear part of vehicle	1378-1383
1.3.1 On left of luggage compartment, saloon	1379-1380
1.3.2 On left of luggage compartment, estate	1381
1.3.3 On right of luggage compartment, saloon	1382
1.3.4 On right of luggage compartment, estate	1383
1.4 Earth points on vehicle underbody	1384-1385
1.4.1 Earth points for models with hybrid drive system	1384-1385
802 - -Fitting locations: Fuses - 3	1386-1483
1. Fuses	1386-1483
1.1 Overview of fuse holders	1386-1391
1.1.1 Overview of fuse holders, saloon	1386-1388
1.1.2 Overview of fuse holders, estate	1389-1391
1.2 Fitting location of fuse holder F -SF-	1392
1.2.1 Fitting location of fuse holder F -SF-, only for special vehicles	1392
1.3 Fuse assignment for fuse holder F -SF-	1393
1.3.1 Fuse assignment for fuse holder F -SF-, from April 2015, only for special vehicles	1393
1.4 Fitting location of fuse holder D -SD-	1394-1396
1.4.1 Fitting location of fuse holder D -SD-, saloon, only models with battery at rear	1394
1.4.2 Fitting location of fuse holder D -SD-, estate, only models with battery at rear	1395
1.4.3 Fitting location of fuse holder D -SD-, only models with hybrid drive system	1395-1396
1.5 Fuse assignment for fuse holder D -SD-	1397
1.5.1 Fuse assignment for fuse holder D -SD-, from September 2014, only models with battery at rear	1397
1.5.2 Fuse assignment for fuse holder D -SD-, from July 2014, only models with hybrid drive system	1398
1.6 Fitting location of fuse holder J -SJ-	1398-1399
1.6.1 Fitting location of fuse holder J -SJ-, only for special vehicles	1398-1399
1.7 Fuse assignment for fuse holder J -SJ-	1400
1.7.1 Fuse assignment for fuse holder J -SJ-, from April 2015, only for special vehicles	1400
1.8 Fitting location of fuse holder in switching unit for high-voltage battery -SX6-	1400-1401
1.8.1 Fitting location of fuse holder in switching unit for high-voltage battery -SX6-, only models with hybrid drive system	1400-1401
1.9 Fuse assignment for high-voltage system fuse 1 -S350-	1402
1.9.1 Fuse assignment for high-voltage system fuse 1 -S350-, from August 2015, only models with hybrid drive system	1402
1.10 Fitting location of fuse holder K -SK-	1402
1.10.1 Fitting location of fuse holder K -SK-, only for special vehicles	1402
1.11 Fuse assignment for fuse holder K -SK-	1403
1.11.1 Fuse assignment for fuse holder K -SK-, from April 2015, only for special vehicles	1403
1.12 Fitting location of fuse holder C -SC-	1404-1405
1.12.1 Fitting location of fuse holder C -SC-, LHD models	1404
1.12.2 Fitting location of fuse holder C -SC-, RHD models	1405
1.13 Fuse assignment for fuse holder C -SC-	1406-1443
1.13.1 Fuse assignment for fuse holder C -SC-, from September 2014	1406-1409
1.13.2 Fuse assignment for fuse holder C -SC-, from May 2015	1410-1414
1.13.3 Fuse assignment for fuse holder C -SC-, from November 2015	1415-1419
1.13.4 Fuse assignment for fuse holder C -SC-, from May 2016	1420-1423
1.13.5 Fuse assignment for fuse holder C -SC-, from November 2016	1424-1428
1.13.6 Fuse assignment for fuse holder C -SC-, from May 2017	1429-1433
1.13.7 Fuse assignment for fuse holder C -SC-, from November 2017	1434-1438
1.13.8 Fuse assignment for fuse holder C -SC-, from July 2018	1439-1443
1.14 Fitting location of front passenger seat adjustment thermal fuse 1 -S46-	1444-1446
1.14.1 Fitting location of front passenger seat adjustment thermal fuse 1 -S46-, left-hand drive models	1444
1.14.2 Fitting location of front passenger seat adjustment thermal fuse 1 -S46-, right-hand drive models	1445-1446
1.15 Fuse assignment of front passenger seat adjustment thermal fuse 1 -S46-	1447
1.15.1 Fuse assignment for front passenger seat adjustment thermal fuse 1 -S46-, from September 2014	1447
1.16 Fitting location of fuse holder H -SH-	1447

1.16.1 Fitting location of fuse holder H -SH-	1447
1.17 Fuse assignment for fuse holder H -SH-	1448-1449
1.17.1 Fuse assignment for fuse holder H -SH-, from April 2015	1448
1.17.2 Fuse assignment for fuse holder H -SH-, from November 2016	1449
1.18 Fitting location of fuse holder B -SB-	1450-1451
1.18.1 Fitting location of fuse holder B -SB-	1450-1451
1.19 Fuse assignment for fuse holder B -SB-	1452-1474
1.19.1 Fuse assignment for fuse holder B -SB-, from September 2014	1452-1454
1.19.2 Fuse assignment for fuse holder B -SB-, from February 2015	1455-1459
1.19.3 Fuse assignment for fuse holder B -SB-, from May 2017	1460-1464
1.19.4 Fuse assignment for fuse holder B -SB-, from November 2017	1465-1469
1.19.5 Fuse assignment for fuse holder B -SB-, from July 2018	1470-1474
1.20 Fitting location of fuse holder A -SA-	1475-1477
1.20.1 Fitting location of fuse holder A -SA-	1475
1.20.2 Fitting location of fuse holder A -SA-, only models with hybrid drive system	1476-1477
1.21 Fuse assignment for fuse holder A -SA-	1478-1480
1.21.1 Fuse assignment for fuse holder A -SA-, from September 2014	1478-1479
1.21.2 Fuse assignment for fuse holder A -SA-, from August 2015, only models with hybrid drive system	1480
1.22 Fitting location of fuse holder in the power and control electronics for electric drive -JX1-	1481-1482
1.22.1 Fitting location of fuse holder in the power and control electronics for electric drive -JX1-, only models with hybrid drive system	1481-1482
1.23 Fuse assignment for high-voltage system fuse 3 -S353-	1483
1.23.1 Fuse assignment for high-voltage system fuse 3 -S353-, from August 2015, only models with hybrid drive system	1483
803 - - Fitting locations: Relays - 3	1484-1493
1. Relays	1484-1493
1.1 Overview of relay carriers	1484-1486
1.1.1 Overview of relay carriers, saloon	1484
1.1.2 Overview of relay carriers, estate	1485-1486
1.2 Relay and fuse carrier 4 -SR4-, in luggage compartment	1487
1.2.1 Fitting location and relay assignment of relay and fuse carrier 4 -SR4-, from April 2015, only for special vehicles	1487
1.3 Relay in high-voltage battery junction box -SX6-	1488
1.3.1 Fitting location and relay assignment in switching unit for high-voltage battery -SX6-, from August 2015, only models with hybrid drive system	1488
1.4 Relay and fuse carrier 2 -SR2-, on left under dash panel	1489-1490
1.4.1 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, left-hand drive models, from September 2014	1489
1.4.2 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, right-hand drive models, from September 2014	1490
1.5 Relay and fuse carrier 1 -SR1-, in E-box in engine compartment	1491-1493
1.5.1 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, on E-box, PR number 4GX, from September 2014	1491
1.5.2 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, on E-box, PR number 4GF, 4GW, from September 2014	1492-1493
804 - -Fitting locations: Control units in front part of vehicle - 3	1494-1552
1. Control units in front part of vehicle	1494-1552
1.1 Overview of control units	1494-1495
1.2 Overview of additional control units, for vehicles with hybrid drive system	1496
1.3 Output module for right headlight -J668-	1497
1.4 Output module 1 for right LED headlight -A27-	1498-1499
1.5 Control unit for right daytime running light and side light -J861-	1500
1.6 Auxiliary heater control unit -J364-	1501-1502
1.7 ABS control unit -J104-	1503-1506
1.7.1 ABS control unit -J104-, left-hand drive models	1503-1504
1.7.2 ABS control unit -J104-, right-hand drive models	1505-1506
1.8 Power steering control unit -J500-	1507-1508
1.9 Turbocharger 1 control unit -J724-	1509-1510
1.10 Exhaust flap control unit -J883-	1511-1512
1.11 Wiper motor control unit -J400-	1513-1516
1.11.1 Wiper motor control unit -J400-, left-hand drive models	1513-1514
1.11.2 Wiper motor control unit -J400-, right-hand drive models	1515-1516
1.12 Battery monitor control unit -J367-	1517-1518
1.13 Engine/motor control unit -J623-	1519-1520
1.13.1 Engine/motor control unit -J623-. 60-pin connector -T60-/94-pin connector -T94-	1519

1.13.2 Engine/motor control unit -J623-, 91-pin connector -T91-/105-pin connector -T105-	1520
1.14 Output module for left headlight -J667-	1521
1.15 Output module 1 for left LED headlight -A31-	1522-1523
1.16 Control unit for left daytime running light and side light -J860-	1524-1525
1.17 Mechatronic unit for dual clutch gearbox -J743-	1526-1530
1.17.1 Mechatronic unit for dual clutch gearbox -J743-, 16-pin connector -T16m-	1526
1.17.2 Mechatronic unit for dual clutch gearbox -J743-, 20-pin connector -T20g-	1527-1528
1.17.3 Mechatronic unit for dual clutch gearbox -J743-, 25-pin connector -T25-	1529-1530
1.18 Radiator fan -VX57-	1531-1534
1.18.1 Radiator fan control unit -J293-, 4-pin connector -T4gl-	1531-1532
1.18.2 Radiator fan control unit -J293-, radiator fan control unit 2 -J671-, 4-pin connector -T4gl-	1533-1534
1.19 Adaptive cruise control unit -J428-	1535-1536
1.20 Three-phase current drive -VX54-	1537-1538
1.21 High-voltage heater (PTC) control unit -J848-	1539-1540
1.22 Brake servo -NX6-	1541-1543
1.23 Brake system pressure accumulator -VX70-	1544
1.24 Power and control electronics for electric drive -JX1-	1545-1546
1.25 Charging unit 1 for high-voltage battery -AX4-	1547-1549
1.26 Control unit for air conditioning compressor -J842-	1550-1552
805 - - Fitting locations: Control units in middle part of vehicle - 3	1553-1663
1. Control units in middle part of vehicle	1553-1663
1.1 Overview of control units, saloon	1553-1556
1.2 Overview of additional control units, for vehicles with hybrid drive system	1557
1.3 Overview of control units, estate	1558-1561
1.4 Fresh air blower control unit -J126-	1562-1563
1.5 Interface for MIB CAN bus, special vehicle interface -J1061-	1564-1565
1.6 Front passenger door control unit -J387-	1566-1568
1.7 Control unit 1 for information electronics -J794-	1569-1571
1.8 Interface for entry and start system -J965-	1572-1573
1.9 Climatronic control unit -J255-	1574-1576
1.10 Air conditioning system control unit -J301-	1577-1578
1.11 Display unit for front information display and operating unit control unit -J685-	1579-1582
1.11.1 Display unit for front information display and operating unit control unit -J685-	1582
1.12 USB hub -R293-, left-hand drive models	1583-1586
1.12.1 USB hub -R293-, right-hand drive models	1585-1586
1.13 Control unit for overhead view camera -J928-	1587-1588
1.14 Driver seat adjustment control unit -J810-, right-hand drive models	1589-1591
1.15 Front camera for driver assist systems -R242-	1592-1593
1.16 Main beam assist control unit -J844-	1594-1595
1.17 Rear passenger side door control unit -J927-	1596-1597
1.18 Control unit in dash panel insert -J285-	1598-1599
1.19 Control unit for electronic steering column lock -J764-	1600-1601
1.20 Fuel pump control unit -J538-	1602-1605
1.20.1 Fuel pump control unit -J538-, for models with petrol engine	1602-1603
1.20.2 Fuel pump control unit -J538-, for models with diesel engine	1604-1605
1.21 Rear driver side door control unit -J926-	1606-1607
1.22 Operating and display unit for rear air conditioning system -E265-	1608-1609
1.23 Sliding sunroof adjustment control unit -J245-	1610-1613
1.23.1 Sliding sunroof adjustment control unit -J245-, saloon	1610-1611
1.23.2 Sliding sunroof adjustment control unit -J245-/sliding sunroof motor -V1-, estate	1612-1613
1.24 Special vehicle control unit -J608-, only for special vehicles	1614
1.25 Multifunction steering wheel control unit -J453-	1615-1616
1.26 Steering column electronics control unit -J527-, from August	1617-1619
1.27 Steering column electronics control unit -J527-, for models with no heated steering wheel, from July 2018	1620
1.28 Steering column electronics control unit -J527-, for models with heated steering wheel, from July 2018	1621-1622
1.29 Driver seat adjustment control unit -J810-, left-hand drive models	1623-1625
1.30 Chip card reader control unit -J676-	1626-1627
1.31 Digital sound package control unit -J525-	1628-1629
1.32 Driver door control unit -J386-	1630-1633
1.33 Onboard supply control unit -J519-	1634-1638
1.34 Parking aid control unit -J446-/park assist steering control unit -J791-	1639-1641
1.35 Control unit for Head-up Display -J898-	1642
1.36 Selector lever -E313-	1643-1644

1.37 Data bus diagnostic interface -J533-	1645-1646
1.38 Control unit for cornering light and headlight range control -J745-	1647-1650
1.38.1 Control unit for cornering light and headlight range control -J745-	1647-1648
1.38.2 Control unit for cornering light and headlight range control -J745- with 20-pin connector -T20-	1649-1650
1.39 Airbag control unit -J234-	1651
1.40 High-voltage battery 1 -AX2-	1652-1653
1.41 Battery regulation control unit -J840-	1654-1655
1.42 Module monitor control unit for batteries -J497-	1656-1658
1.43 Engine sound generator control unit -J943-	1659-1660
1.44 Emergency call module control unit and communication unit -J949-	1661-1663
806 - - Fitting locations: Control units in rear part of vehicle - 3	1664-1709
1. Overview of control units in rear part of vehicle	1664-1709
1.1 Overview of control units, saloon	1664-1665
1.2 Overview of control units, estate	1666-1667
1.3 Electronically controlled damping control unit -J250-	1668-1670
1.3.1 Electronically controlled damping control unit -J250-, saloon	1668
1.3.2 Electronically controlled damping control unit -J250-, estate	1669-1670
1.4 TV tuner -RX6-	1671-1674
1.4.1 TV tuner -RX6-, saloon	1671-1672
1.4.2 TV tuner -RX6-, estate	1673-1674
1.5 Control unit for navigation system -J856-, saloon	1675-1676
1.6 Control unit for reducing agent heater -J891-	1677-1680
1.6.1 Control unit for reducing agent heater -J891-, saloon	1677-1678
1.6.2 Control unit for reducing agent heater -J891-, estate	1679-1680
1.7 Remote control receiver for auxiliary heater -R64-	1681-1684
1.7.1 Remote control receiver for auxiliary heater -R64-, saloon	1681-1682
1.7.2 Remote control receiver for auxiliary heater -R64-, estate	1683-1684
1.8 Special vehicle interface control unit -J1059-, only for special vehicles	1685
1.9 Lane change assist control unit -J769-	1686-1687
1.10 Rear lid power opening control unit -J938-	1688
1.11 Tyre Pressure Monitoring System control unit -J502-	1689-1690
1.12 Rear roller blind control unit -J262-	1691-1692
1.13 Rear lid control unit -J605-	1693-1696
1.13.1 Rear lid control unit -J605-, saloon	1693-1694
1.13.2 Rear lid control unit -J605-, estate	1695-1696
1.14 Lane change assist control unit 2 -J770-	1697-1698
1.15 Battery monitor control unit -J367-	1699-1700
1.16 Trailer detector control unit -J345-	1701-1704
1.16.1 Trailer detector control unit -J345-, saloon	1701-1702
1.16.2 Trailer detector control unit -J345-, estate	1703-1704
1.17 Delivery unit for reducing agent metering system -GX19-	1705-1706
1.18 All-wheel drive control unit -J492-	1707-1709
807 - -Fitting locations: Coupling points - 3	1710-1749
1. Coupling points	1710-1749
1.1 Coupling point in engine compartment, left -TML-	1710-1712
1.1.1 Coupling point in engine compartment, left -TML-	1710-1711
1.1.2 Coupling point on left in engine compartment -TML-, only models with hybrid drive system	1712
1.2 Coupling point on engine, top centre -TMOM-	1713
1.3 Coupling point on engine, top left -TMOL-	1714
1.4 Coupling point for headlight washer system -TSRA-	1715
1.5 Diagnostic connection -U31-	1716-1717
1.5.1 Diagnostic connection -U31-, LHD models	1716
1.5.2 Diagnostic connection -U31-, RHD models	1717
1.6 Coupling point in interior -TI-, LHD models	1718
1.7 Coupling point in interior -TI-, RHD models	1719
1.8 Coupling point on front left door -TTVL-	1720
1.9 Coupling point in front left door -TTIVL-	1721
1.10 Coupling point on rear left door -TTHL-	1722
1.11 Coupling point in rear left door -TTIHL-	1723
1.12 Coupling point for all-wheel drive -TSAA-	1724
1.13 Coupling point in interior, below left -TIUL-	1725
1.14 Coupling point in interior, below left -TIUL-, only vehicles with special equipment	1726
1.15 Coupling point on left A-pillar -TAL-, only vehicles with special equipment	1727
1.16 Coupling point for front left seat -TSVL-	1728-1729
1.16.1 Coupling point for front left seat -TSVL-. LHD models	1728

1.16.2 Coupling point for front left seat -TSVL-, RHD models	1729
1.17 Coupling point in front left seat -TISVL-	1730
1.18 Coupling point for roof -TH-	1731
1.19 Coupling point on right A-pillar -TAR-, on front right roof frame, only vehicles with special equipment	1732
1.20 Coupling point on front right door -TTVR-	1733
1.21 Coupling point in front right door -TTIVR-	1734
1.22 Coupling point on rear right door -TTHR-	1735
1.23 Coupling point in rear right door -TTIHR-	1736
1.24 Coupling point in interior, below right -TIUR-	1737
1.25 Coupling point for front right seat -TSVR-	1738-1739
1.25.1 Coupling point for front right seat -TSVR-, LHD models	1738
1.25.2 Coupling point for front right seat -TSVR-, RHD models	1739
1.26 Coupling point in front right seat -TISVR-	1740
1.27 Coupling point for exhaust flap control unit -TAGK-	1741
1.28 Coupling point in luggage compartment, centre -THRM-, only models with hybrid drive system	1742
1.29 Coupling point on rear lid -THK-, estate	1743
1.30 Coupling point in luggage compartment, left -THRL-	1744-1745
1.30.1 Coupling point in luggage compartment, left -THRL-, saloon	1744
1.30.2 Coupling point in luggage compartment, left -THRL-, estate	1745
1.31 Coupling point in luggage compartment, right -THRR-	1746-1747
1.31.1 Coupling point in luggage compartment, right -THRR-, saloon	1746
1.31.2 Coupling point in luggage compartment, right -THRR-, estate	1747
1.32 Coupling point in high-voltage battery -TIHV-	1748-1749