



Contents

1	Engine list	1
2	Service work	8
2.1	Information about flexible or fixed service	8
2.2	Service tables up to model year ▶2020	11
2.3	Service tables as of model year 2021▶	20
3	General information	29
3.1	General warnings for working on high-voltage system	29
3.2	Raising vehicle with lifting platform or trolley jack	29
3.3	Entries in service schedule	31
3.4	Connecting vehicle diagnostic tester	31
3.5	Vehicle identification number	32
3.6	Vehicle data sticker	33
3.7	Severe operating conditions	35
3.8	Countries with hot climate	36
3.9	Country overview for diesel not compliant with EN 590/EN 15940	36
3.10	Country overview for petrol not compliant with EN 228	37
3.11	Engine code and engine number	38
3.12	Countries with high levels of dust	38
3.13	Identification plate	39
3.14	Shortened intervals for spark plug replacement	40
4	Descriptions of work	45
4.1	Swivel joints and suspension link mountings: inspecting	47
4.2	Automatic headlight control and static cornering light: checking function	48
4.3	Front passenger front airbag: checking key switch and "ON/OFF function"	50
4.4	Battery (12V): checking battery terminal clamps for secure seating	51
4.5	Battery (12V): checking with battery tester (always refer to workshop manual)	54
4.6	Battery (12V): checking (only applies for Passat GTE)	54
4.7	Status of battery (12V): reading - sending diagnosis protocol via online connection	55
4.8	Tyres: checking condition, wear pattern, tyre pressure and tread depth	56
4.9	Brake and clutch system: changing brake fluid	71
4.10	Brake system and shock absorbers: inspecting for leaks and damage	78
4.11	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	78
4.12	Brake fluid level: checking	81
4.13	Dual clutch gearbox 0D9: changing gear oil and filter	83
4.14	Dual clutch gearbox 0DD: changing gear oil	83
4.15	Dual clutch gearbox 0DL: changing gear oil	83
4.16	Dual clutch gearbox 0GC: changing gear oil	83
4.17	Diesel particulate filter: checking	83
4.18	Electric windows: checking positioning (open and close functions)	83
4.19	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	84
4.20	Boots: inspecting	84
4.21	All-wheel drive coupling: changing oil	85
4.22	High-voltage battery: checking charge level	89
4.23	Maintenance of high-voltage battery	89
4.24	High-voltage battery: charging	89
4.25	Head-up display (HUD): removing protective film	90
4.26	Hybrid components: inspect for damage to high-voltage components and wires.	90
4.27	Interior and exterior body: inspecting for corrosion with doors and flaps open	90
4.28	Poly V-belt: renewing	91
4.29	Poly V-belt: checking condition	91
4.30	Cooling system: checking frost protection and coolant level	93
4.31	Cooling system for high-voltage system: checking coolant additive and coolant level	97



4.32	Diesel fuel filter: renewing	100
4.33	Air filter: cleaning housing and renewing filter element	102
4.34	Multi-purpose additive for diesel fuel: adding	111
4.35	Multi-purpose additive for petrol fuel: adding	113
4.36	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	115
4.37	Engine cover panel "top": removing and installing	116
4.38	Motor compartment cover (noise insulation) "bottom": removing and installing	119
4.39	Engine oil level: checking	119
4.40	Engine oil: draining, renewing oil filter and filling engine oil	120
4.41	Engine oil: capacities and specifications up to model year ►2020	131
4.42	Engine oil: capacities and specifications as of model year 2021►	133
4.43	Panoramic sliding sunroof	135
4.44	Panorama sliding roof with rear panorama roof	143
4.45	Road test: performing (driving behaviour, noises, air conditioner etc.)	146
4.46	Wheel securing bolts: tightening to specified torque	146
4.47	Reducing agent (AdBlue®/DEF): replenishing	147
4.48	Reducing agent (AdBlue®/DEF): changing	152
4.49	Tyre pressure indicator: calibrating	152
4.50	Tyre repair set: checking	153
4.51	Window wash/wipe system and headlight washer system: checking function	153
4.52	Headlight adjustment: checking halogen headlights	157
4.53	Headlight adjustment: checking LED headlights with cornering light	161
4.54	Headlight adjustment: checking LED headlights	167
4.55	Headlight adjustment: checking matrix LED headlights	172
4.56	Headlight adjustment: checking fog lights	177
4.57	Sliding sunroof drains at rear (Passat saloon): check for blockage, clean if necessary	179
4.58	Sliding sunroof drains at front (Passat estate): check for blockage, clean if necessary	180
4.59	Service interval display: Reset	181
4.60	Service interval display: recoding	182
4.61	Track rods: checking clearance, attachment and boots	183
4.62	Interior filter: cleaning housing and renewing filter element	184
4.63	Transportation mode: switching off	184
4.64	Transportation devices: removing blocking pieces	185
4.65	Clock and date: setting	186
4.66	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	187
4.67	Warning stickers, Passat GTE: checking	187
4.68	Water drain valves at rear (Passat estate): check for blockages, clean if necessary	187
4.69	Toothed belt (petrol engines): renewing	188
4.70	Camshaft drive toothed belt (diesel engines): renewing	188
4.71	Spark plugs: renewing	188
5	Exhaust emissions test	205
5.1	Exhaust emissions test for petrol engines	205
5.2	Exhaust emissions test for diesel engines	207
6	00 Periodic Technical Inspection (PTI)	211
7	Glossary	215
8	---Change history---	218