



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair instructions</b>	<b>1</b>
1.1 General repair instructions	1
1.2 Routing and attachment of lines	1
1.3 Notes on repair of CAN bus wiring	1
1.4 Transmitting power and aerial fitting locations	1
<b>91 - Communication</b>	<b>3</b>
<b>1 Infotainment system</b>	<b>3</b>
1.1 Overview of fitting locations – Infotainment system	3
1.2 Removing and installing infotainment system display	5
1.3 Removing and installing control unit 1 for information electronics J794	6
1.4 Renewing rotary knobs of display unit for front information display and operating unit control unit J685	8
<b>2 Sound system</b>	<b>10</b>
2.1 Overview of fitting locations – sound system	10
2.2 Removing and installing digital sound package control unit/amplifier J525	12
2.3 Removing and installing front treble loudspeakers R20/R22	15
2.4 Removing and installing rear treble loudspeakers R14/R16	15
2.5 Removing and installing front mid-range loudspeakers	16
2.6 Removing and installing front bass loudspeakers R21/R23	17
2.7 Removing and installing rear bass loudspeakers R15/R17	18
2.8 Removing and installing subwoofer R211	19
2.9 Removing and installing centre loudspeaker R208	20
2.10 Removing and installing loudspeaker for emergency call module R335	21
<b>3 Aerial systems</b>	<b>23</b>
3.1 Overview of fitting locations – aerial systems	23
3.2 Removing and installing aerial module	26
3.3 Removing and installing TV aerial amplifier	28
3.4 Removing and installing frequency modulation (FM) frequency filter in negative wire R178	29
3.5 Removing and installing frequency modulation (FM) frequency filter in positive wire R179	30
3.6 Removing and installing roof aerial	31
3.7 Removing and installing LTE aerials [R297/R306]	32
<b>4 Telephone system</b>	<b>34</b>
4.1 Overview of fitting locations – telephone system	34
4.2 Removing and installing two-way signal amplifier for mobile telephone/data services J984	35
4.3 Removing and installing telephone microphone R38	37
4.4 Removing and installing storage compartment with interface for mobile telephone R265	38
<b>5 TV system</b>	<b>40</b>
5.1 Overview of fitting locations - TV system	40
5.2 Removing and installing TV tuner	40
<b>6 Multifunction steering wheel</b>	<b>43</b>
6.1 Overview of multifunction steering wheel	43
6.2 Assembly overview – multifunction steering wheel	43
6.3 Removing and installing multifunction buttons in steering wheel E441/E440	44
6.4 Removing and installing Tiptronic switch in steering wheel E439/E438	48
<b>7 Connection for external multimedia devices</b>	<b>49</b>
7.1 Removing and installing connection for external multimedia devices	49
7.2 Removing and installing USB hub R293	51
<b>8 Rear Seat Entertainment (RSE)</b>	<b>53</b>
8.1 Assembly overview - mounting and bracket for Rear Seat Entertainment	53
8.2 Removing and installing mounting for Rear Seat Entertainment	53



8.3	Removing and installing bracket for Rear Seat Entertainment .....	55
<b>9</b>	<b>Car-Net</b> .....	<b>57</b>
9.1	General information .....	57
9.2	Overview of fitting locations – mobile online services .....	57
9.3	Removing and installing emergency call module control unit and communication unit J949 ..	58
9.4	Renewing control unit for emergency call module and communication unit J949 .....	60
9.5	Renewing battery in emergency call module control unit and communication unit J949 ..	61
9.6	Bringing ERA GLONASS into operation .....	62