



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Basic instructions</b>	<b>1</b>
1.1 Original joint	1
1.2 Used joining techniques	1
<b>2 Vehicle identification data</b>	<b>2</b>
2.1 Vehicle identification number	2
2.2 Type plate	2
2.3 Vehicle data sticker	3
<b>3 Safety information</b>	<b>5</b>
<b>4 Gas vehicles</b>	<b>6</b>
<b>5 Body work for which HV electrical system must be de-energised</b>	<b>7</b>
5.1 The following body work requires the HV electrical system to be de-energised.	7
<b>6 Moulded foam inserts</b>	<b>8</b>
<b>7 Galvanized body parts, high- and higher-strength and hot-formed body panels</b>	<b>10</b>
<b>8 Galvanized body parts, high- and higher-strength and hot-formed body panels</b>	<b>15</b>
<b>9 Laser welding</b>	<b>20</b>
<b>10 Gaps</b>	<b>21</b>
10.1 Body - front	21
10.2 Body - front	22
10.3 Body, centre	24
10.4 Body, centre	26
10.5 Body, centre	28
10.6 Body, centre	30
10.7 Body, rear	32
10.8 Body, rear	33
10.9 Body, rear	34
10.10 Body, rear	36
<b>11 Body dimensions</b>	<b>39</b>
11.1 Body - front	39
11.2 Body, centre	41
11.3 Body, centre	47
11.4 Body, rear	53
11.5 Body, rear	56
11.6 Floor panel, front	59
11.7 Floor panel, centre	60
11.8 Floor panel, rear	61
<b>12 Straightening bracket set</b>	<b>64</b>
12.1 Setup overview of complete body	64
<b>13 Portal gauge</b>	<b>66</b>
13.1 Setup overview of complete body	66
13.2 Setup overview of complete body	67
<b>50 - Body - front</b>	<b>69</b>
<b>1 Overview of parts</b>	<b>69</b>
<b>2 Renewing right bracket</b>	<b>70</b>
2.1 Tools	71
2.2 Removing	71
2.3 Installing	72
<b>3 Repairing threads for securing subframe</b>	<b>75</b>
3.1 Contents of thread repair kit	76



3.2	Repairing threads .....	77
<b>4</b>	<b>Renewing mounting bracket for subframe .....</b>	<b>81</b>
4.1	Tools .....	82
4.2	Removing .....	82
4.3	Installing .....	83
<b>5</b>	<b>Renewing mounting bracket for subframe .....</b>	<b>87</b>
5.1	Tools .....	88
5.2	Removing .....	88
5.3	Installing .....	89
<b>6</b>	<b>Renewing front longitudinal member end plate .....</b>	<b>92</b>
6.1	Tools .....	93
6.2	Removing .....	93
6.3	Installing .....	94
<b>7</b>	<b>Renewing upper wheel housing longitudinal member .....</b>	<b>97</b>
7.1	Tools .....	98
7.2	Removing .....	98
7.3	Installing .....	99
<b>8</b>	<b>Renewing upper inner wheel housing longitudinal member .....</b>	<b>103</b>
8.1	Tools .....	104
8.2	Removing .....	104
8.3	Installing .....	105
<b>9</b>	<b>Renewing front wheel housing .....</b>	<b>109</b>
9.1	Tools .....	110
9.2	Removing .....	110
9.3	Installing .....	112
<b>10</b>	<b>Renewing front longitudinal member .....</b>	<b>117</b>
10.1	Tools .....	118
10.2	Removing .....	118
10.3	Installing .....	122
<b>11</b>	<b>Renewing front longitudinal member (left part section) .....</b>	<b>127</b>
11.1	Tools .....	128
11.2	Removing .....	128
11.3	Installing when using complete longitudinal member assembly .....	130
11.4	Installing when using individual components of longitudinal member .....	134
<b>12</b>	<b>Renewing front longitudinal member (right part section) .....</b>	<b>138</b>
12.1	Tools .....	139
12.2	Removing .....	139
12.3	Installing when using complete longitudinal member assembly .....	141
12.4	Installing when using individual components of longitudinal member .....	145
<b>13</b>	<b>Renewing studs .....</b>	<b>149</b>
<b>51 - Body - centre .....</b>		<b>150</b>
<b>1</b>	<b>Overview of parts .....</b>	<b>150</b>
<b>2</b>	<b>Overview of parts .....</b>	<b>151</b>
<b>3</b>	<b>Renewing roof - vehicles without sliding sunroof .....</b>	<b>152</b>
3.1	Tools .....	153
3.2	Removing .....	153
3.3	Installing .....	157
<b>4</b>	<b>Renewing roof - vehicles with sliding sunroof .....</b>	<b>168</b>
4.1	Tools .....	169
4.2	Removing .....	169
4.3	Installing .....	173
<b>5</b>	<b>Renewing roof - vehicles with no panorama tilting sunroof .....</b>	<b>184</b>



5.1	Tools .....	185
5.2	Removing .....	185
5.3	Installing .....	189
<b>6</b>	<b>Renewing roof - vehicles with panorama tilting sunroof .....</b>	<b>200</b>
6.1	Tools .....	201
6.2	Removing .....	201
6.3	Installing .....	205
<b>7</b>	<b>Renewing roof side member (part section) .....</b>	<b>215</b>
7.1	Tools .....	216
7.2	Removing .....	217
7.3	Installing .....	218
<b>8</b>	<b>Renewing roof side member .....</b>	<b>222</b>
8.1	Tools .....	223
8.2	Moulded foam inserts .....	224
8.3	Removing .....	224
8.4	Installing .....	225
<b>9</b>	<b>Renewing roof side member (part section) .....</b>	<b>229</b>
9.1	Tools .....	230
9.2	Removing .....	231
9.3	Installing .....	232
<b>10</b>	<b>Renewing roof side member .....</b>	<b>236</b>
10.1	Tools .....	237
10.2	Moulded foam inserts .....	238
10.3	Removing .....	238
10.4	Installing .....	239
<b>11</b>	<b>Renewing A-pillar .....</b>	<b>243</b>
11.1	Tools .....	244
11.2	Moulded foam inserts .....	245
11.3	Removing .....	245
11.4	Installing .....	246
<b>12</b>	<b>Renewing upper A-pillar reinforcement (part section) .....</b>	<b>251</b>
12.1	Tools .....	252
12.2	Moulded foam inserts .....	252
12.3	Removing .....	252
12.4	Installing .....	255
<b>13</b>	<b>Renewing A-pillar reinforcement (part section) .....</b>	<b>263</b>
13.1	Tools .....	264
13.2	Moulded foam inserts .....	264
13.3	Removing .....	264
13.4	Installing .....	267
<b>14</b>	<b>Renewing B-pillar .....</b>	<b>271</b>
14.1	Tools .....	272
14.2	Identification plate .....	273
14.3	Moulded foam inserts .....	274
14.4	Removing .....	274
14.5	Installing .....	275
<b>15</b>	<b>Renewing B-pillar reinforcement .....</b>	<b>279</b>
15.1	Tools .....	280
15.2	Identification plate .....	280
15.3	Moulded foam inserts .....	281
15.4	Removing .....	281
15.5	Installing .....	282
<b>16</b>	<b>Renewing B-pillar reinforcement (part section) .....</b>	<b>286</b>
16.1	Tools .....	287



16.2	Identification plate	287
16.3	Moulded foam inserts	288
16.4	Removing	288
16.5	Installing	291
<b>17</b>	<b>Renewing outer side member</b>	<b>299</b>
17.1	Tools	300
17.2	Identification plate	300
17.3	Moulded foam inserts	301
17.4	Removing	301
17.5	Installing	303
<b>18</b>	<b>Renewing side member reinforcement</b>	<b>308</b>
18.1	Tools	310
18.2	Moulded foam inserts	310
18.3	Removing	310
18.4	Installing	312
<b>19</b>	<b>Renewing end plate for wing</b>	<b>316</b>
19.1	Tools	317
19.2	Removing	317
19.3	Installing	319
<b>53 - Body - rear</b>		<b>323</b>
<b>1</b>	<b>Overview of parts</b>	<b>323</b>
<b>2</b>	<b>Overview of parts</b>	<b>324</b>
<b>3</b>	<b>Renewing rear cross panel</b>	<b>325</b>
3.1	Tools	326
3.2	Removing	326
3.3	Installing	327
<b>4</b>	<b>Renewing rear cross panel</b>	<b>331</b>
4.1	Tools	332
4.2	Removing	332
4.3	Installing	333
<b>5</b>	<b>Renewing rear cross member</b>	<b>337</b>
5.1	Tools	338
5.2	Removing	338
5.3	Installing	339
<b>6</b>	<b>Renewing rear cross member</b>	<b>344</b>
6.1	Tools	345
6.2	Removing	345
6.3	Installing	346
<b>7</b>	<b>Renewing tail light mounting</b>	<b>351</b>
7.1	Tools	352
7.2	Removing	352
7.3	Installing	353
<b>8</b>	<b>Renewing tail light mounting</b>	<b>356</b>
8.1	Tools	357
8.2	Removing	357
8.3	Installing	358
<b>9</b>	<b>Renewing luggage compartment floor</b>	<b>362</b>
9.1	Tools	363
9.2	Moulded foam inserts	364
9.3	Removing	364
9.4	Installing	365
<b>10</b>	<b>Renewing luggage compartment floor - hybrid drive</b>	<b>369</b>
10.1	Tools	370



10.2	Moulded foam inserts .....	370
10.3	Removing .....	370
10.4	Installing .....	372
<b>11</b>	<b>Renewing luggage compartment floor .....</b>	<b>376</b>
11.1	Tools .....	377
11.2	Moulded foam inserts .....	378
11.3	Removing .....	378
11.4	Installing .....	379
<b>12</b>	<b>Renewing luggage compartment floor - hybrid drive .....</b>	<b>383</b>
12.1	Tools .....	384
12.2	Moulded foam inserts .....	384
12.3	Removing .....	384
12.4	Installing .....	386
<b>13</b>	<b>Renewing rear shelf .....</b>	<b>390</b>
13.1	Tools .....	391
13.2	Removing .....	391
13.3	Installing .....	392
<b>14</b>	<b>Renewing C-pillar reinforcement .....</b>	<b>397</b>
14.1	Tools .....	398
14.2	Moulded foam inserts .....	398
14.3	Removing .....	398
14.4	Installing .....	399
<b>15</b>	<b>Renewing C-pillar reinforcement .....</b>	<b>403</b>
15.1	Tools .....	404
15.2	Moulded foam inserts .....	404
15.3	Removing .....	404
15.4	Installing .....	405
<b>16</b>	<b>Renewing rear longitudinal member (part section) .....</b>	<b>409</b>
16.1	Tools .....	410
16.2	Removing .....	410
16.3	Installing .....	412
<b>17</b>	<b>Renewing rear longitudinal member (part section) .....</b>	<b>415</b>
17.1	Tools .....	416
17.2	Removing .....	416
17.3	Installing .....	418
<b>18</b>	<b>Renewing rear longitudinal member (part section – second parting cut) .....</b>	<b>421</b>
18.1	Tools .....	422
18.2	Moulded foam inserts .....	422
18.3	Removing .....	422
18.4	Installing .....	426
<b>19</b>	<b>Renewing rear longitudinal member (part section – second parting cut) .....</b>	<b>436</b>
19.1	Tools .....	437
19.2	Moulded foam inserts .....	437
19.3	Removing .....	437
19.4	Installing .....	442
<b>20</b>	<b>Permitted parting cuts on side panel .....</b>	<b>453</b>
<b>21</b>	<b>Renewing side panel (part section) .....</b>	<b>454</b>
21.1	Tools .....	455
21.2	Moulded foam inserts .....	456
21.3	Removing .....	456
21.4	Installing .....	458
<b>22</b>	<b>Renewing side panel (part section) .....</b>	<b>463</b>
22.1	Tools .....	464
22.2	Moulded foam inserts .....	465



22.3	Removing .....	465
22.4	Installing .....	467
<b>23</b>	<b>Renewing outer wheel housing liner .....</b>	<b>472</b>
23.1	Tools .....	473
23.2	Moulded foam inserts .....	473
23.3	Removing .....	473
23.4	Installing .....	474
<b>24</b>	<b>Renewing outer wheel housing liner .....</b>	<b>478</b>
24.1	Tools .....	479
24.2	Moulded foam inserts .....	479
24.3	Removing .....	479
24.4	Installing .....	480
<b>25</b>	<b>Renewing high-voltage battery retaining plate, vehicles with hybrid drive .....</b>	<b>484</b>
25.1	Tools .....	485
25.2	Removing .....	485
25.3	Installing .....	486
<b>26</b>	<b>Renewing welded nut for high-voltage battery, hybrid vehicles .....</b>	<b>489</b>
26.1	Tools .....	490
26.2	Removing .....	490
26.3	Installing .....	491
<b>27</b>	<b>Renewing connecting plate, vehicles with hybrid drive .....</b>	<b>494</b>
27.1	Tools .....	495
27.2	Removing .....	495
27.3	Installing .....	496