



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety precautions when handling refrigerants	2
1.3 Safety measures when working on vehicles with start/stop system	2
1.4 Safety precautions when working on high-voltage system	2
1.5 Safety precautions when working in the vicinity of high-voltage components	3
1.6 Safety precautions when working on the cooling system	3
1.7 Safety precautions for working on vehicles with auxiliary/supplementary heater	4
1.8 Safety precautions when using testers and measuring instruments during a road test	5
2 Identification	6
2.1 Identification of heater and air conditioning unit	6
3 General information	8
3.1 Notes for vehicles with start-stop system	8
3.2 Type plates	8
4 Repair instructions	12
4.1 Working on refrigerant circuit	12
4.2 General repair instructions	13
4.3 Refrigerant circuit seals	13
5 Technical data	14
5.1 Refrigerant capacity	14
5.2 Refrigerant oil capacities	14
5.3 Oil distribution	15
80 - Heating	16
1 Heating	16
87 - Air conditioning system	17
1 Overview of fitting locations - air conditioning system	17
1.1 Overview of fitting locations - components not located in passenger compartment	17
1.2 Overview of fitting locations - components located in front section of passenger compartment	21
2 Refrigerant circuit	24
2.1 System overview - refrigerant circuit	24
2.2 Assembly overview - refrigerant lines	31
2.3 Assembly overview - condenser	35
2.4 Assembly overview - heat exchanger for high-voltage battery	37
2.5 Removing and installing refrigerant circuit pressure sender G805	38
2.6 Removing and installing expansion valve	39
2.7 Removing and installing condenser	47
2.8 Removing and installing desiccant bag or cartridge	50
2.9 Removing and installing damper weight for refrigerant line, low-pressure side	61
2.10 Removing and installing refrigerant pressure and temperature sender G395	61
2.11 Removing and installing refrigerant shut-off valve for heater and air conditioner unit N541	63
2.12 Removing and installing refrigerant shut-off valve for high-voltage battery heat exchanger N542	67
2.13 Removing and installing heat exchanger for high-voltage battery	70
2.14 Removing and installing evacuating and charging valves on low and high-pressure side	73
2.15 Removing and installing refrigerant line with internal heat exchanger	76
2.16 Refrigerant line with restrictor	83
2.17 Removing and installing refrigerant line between condenser and heat exchanger for high-voltage battery, refrigerant line with internal heat exchanger, Passat GTE	84



2.18	Removing and installing refrigerant line between electrical air conditioner compressor V470 and heat exchanger for high-voltage battery, refrigerant line with internal heat exchanger, Passat GTE	87
2.19	Removing and installing refrigerant line from air conditioner compressor to evaporator	89
2.20	Removing and installing refrigerant line from air conditioner compressor to condenser	92
2.21	Removing and installing refrigerant line between condenser and air conditioner compressor, Passat GTE	94
2.22	Removing and installing refrigerant line from evaporator to air conditioner compressor	96
2.23	Commissioning air conditioning system after filling refrigerant circuit	99
3	Air conditioner compressor	101
3.1	Assembly overview – drive unit of air conditioner compressor	101
3.2	Assembly overview - pulley	108
3.3	Removing air conditioning compressor from and installing on bracket	114
3.4	Removing and installing air conditioner compressor	118
3.5	Removing and installing high-voltage system fuse 3 S353	125
3.6	Checking high-pressure safety valve on air conditioner compressor	125
3.7	Removing and installing pulley	126
4	Control motors	135
4.1	Overview of fitting locations – control motors at front	135
4.2	Removing and installing temperature flap control motor V68 with potentiometer G92	141
4.3	Removing and installing defroster flap control motor V107 with potentiometer G135	145
4.4	Removing and installing air recirculation flap control motor V113	148
4.5	Removing and installing left temperature flap control motor V158 with potentiometer G220	152
4.6	Removing and installing right temperature flap control motor V159 with potentiometer G221	156
4.7	Removing and installing rear temperature flap control motor V137	160
4.8	Removing and installing fresh air/air recirculation, air flow flap control motor V425 with potentiometer G644	162
4.9	Removing and installing front air distribution flap control motor V426 with potentiometer for front air distribution flap control motor G642	166
4.10	Removing and installing air distribution flap control motor V428 with potentiometer G645	170
4.11	Removing and installing air distribution flap actuator	175
5	Front heater and air conditioning unit	182
5.1	Assembly overview – heater and air conditioning unit	182
5.2	Assembly overview - add-on parts of heater and air conditioning unit and of air intake box	187
5.3	Assembly overview – evaporator housing	189
5.4	Assembly overview - flaps and partitions in air distribution housing	190
5.5	Removing and installing heater and air conditioning unit	193
5.6	Dismantling and assembling heater and air conditioning unit	198
5.7	Removing and installing air distribution housing	199
5.8	Removing and installing holder for heater and air conditioning unit	200
5.9	Removing and installing evaporator	202
5.10	Removing and installing fresh air blower control unit J126	204
5.11	Removing and installing dust and pollen filter	205
5.12	Removing and installing fresh air blower V2	209
5.13	Checking auxiliary air heater element Z35 with auxiliary air heater control unit J604	212
5.14	Removing and installing auxiliary air heater element Z35 with auxiliary air heater control unit J604	214
5.15	Removing and installing heat exchanger	217
5.16	Removing and installing coolant pipes on heat exchanger	237
5.17	Removing and installing evaporator temperature sensor G308	241
5.18	Checking condensation drain	243
5.19	Removing and installing condensation drain	245
5.20	Removing and installing baffle plate	249
6	Air duct	250
6.1	Assembly overview – air duct and air distribution in passenger compartment	250
6.2	Removing and installing fresh air intake	251



6.3	Removing and installing cover for fresh air intake	254
6.4	Removing and installing air intake duct	254
6.5	Removing and installing driver side footwell vents	255
6.6	Removing and installing front passenger side footwell vents	257
6.7	Removing and installing rear footwell vent	259
6.8	Removing and installing air duct for rear vent	260
6.9	Removing and installing dash panel air duct	261
6.10	Removing and installing air duct for rear centre console vent	262
6.11	Checking forced ventilation for passenger compartment	263
6.12	Removing and installing forced ventilation for passenger compartment	264
6.13	Removing and installing air duct for defroster vent	265
6.14	Removing and installing air duct for centre vent	265
7	Coolant circuit	267
7.1	Assembly overview - high-voltage heater (PTC) ZX17	267
7.2	Incorporation of high-voltage heater (PTC) Z115 into coolant circuit	269
7.3	Incorporation of heat exchanger for high-voltage battery into coolant circuit of high-voltage system	273
7.4	Removing and installing coolant valve for high-voltage battery N688	275
7.5	Removing and installing coolant valve for high-voltage battery V590	276
7.6	Removing and installing high-voltage heater (PTC) Z115/high-voltage heater (PTC) J848 ..	278
8	Operating and display unit	284
8.1	Overview of operating and display unit	284
8.2	Removing and installing operating and display unit	291
9	Other controlling and regulating components	295
9.1	Removing and installing sunlight penetration photosensor G107	295
9.2	Removing and installing external air quality and humidity sensor G935	296
9.3	Removing and installing ambient temperature sensor G17	298
9.4	Removing and installing humidity sender for air conditioning system G260	298
9.5	Removing and installing left vent temperature sender G150	298
9.6	Removing and installing right vent temperature sender G151	300
9.7	Removing and installing rear vent temperature sender G174	301
9.8	Removing and installing footwell vent temperature sender G192	302