



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions for working on vehicles with auxiliary heater	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions when working on fuel system	2
1.4 Safety precautions when working on the cooling system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working on high-voltage system	3
1.7 Safety precautions when working in the vicinity of high-voltage components	4
2 General information	5
2.1 Starting conditions for auxiliary/supplementary heater	5
2.2 Notes for vehicles with a start/stop system	6
2.3 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..	6
2.4 Type plates	6
3 Repair instructions	8
3.1 General repair instructions	8
82 - Supplementary heating	9
1 Overview of fitting locations - auxiliary/supplementary heater	9
1.1 Overview of fitting locations - auxiliary/supplementary heater components	9
2 Auxiliary/supplementary heater	12
2.1 Overview of fitting locations - auxiliary/supplementary heater	12
2.2 Assembly overview - auxiliary/supplementary heater attachments	14
2.3 Assembly overview - auxiliary/supplementary heater, internal	15
2.4 Removing and installing auxiliary/supplementary heater	16
2.5 Dismantling and assembling auxiliary/supplementary heater	21
2.6 Removing and installing air intake silencer	23
2.7 Removing and installing circulation pump V55	23
2.8 Removing and installing exhaust system	26
2.9 Removing and installing auxiliary/supplementary heater bracket	26
2.10 Removing and installing covers for auxiliary heater control unit J364	27
2.11 Removing and installing glow plug with flame monitor Q8	28
2.12 Removing and installing temperature sensor G18 and overheating sensor G189 ..	28
2.13 Connector pin assignment for auxiliary/supplementary heater	29
2.14 Dismantling and assembling burner unit	29
2.15 Removing and installing auxiliary heater control unit J364 with combustion air blower V6	30
3 Coolant circuit with auxiliary/supplementary heater	31
3.1 Connection diagram - coolant hoses	31
3.2 Bleeding coolant circuit of auxiliary/supplementary heater	38
3.3 Removing and installing coolant pipes for auxiliary/supplementary heater	39
4 Fuel supply	42
4.1 Overview of fitting locations - fuel supply system	42
4.2 Checking fuel delivery rate	45
4.3 Removing and installing metering pump V54	46
4.4 Checking metering pump V54 with end sealing valve	50
4.5 Bleeding fuel line to metering pump V54 (filling with fuel)	51
5 Regulation of auxiliary/supplementary heater	53
6 Other controlling and regulating components	54
6.1 Removing and installing ambient temperature sensor G17	54
6.2 Removing and installing remote control receiver for auxiliary coolant heater R149	54