



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Repair notes</b>	<b>6</b>
3.1 General repair instructions	6
3.2 Gaskets and seals	7
3.3 Nuts and bolts	7
<b>4 Technical data</b>	<b>9</b>
4.1 Capacities	9
<b>5 Electrical components</b>	<b>10</b>
5.1 Overview of fitting locations - electrical components	10
<b>30 - Clutch</b>	<b>12</b>
<b>1 Clutch</b>	<b>12</b>
1.1 Assembly overview - dual clutch	12
1.2 Removing and installing clutch end cover	14
1.3 Removing dual clutch	19
1.4 Installing dual clutch	20
<b>34 - Controls, housing</b>	<b>29</b>
<b>1 Mechatronic unit</b>	<b>29</b>
1.1 Assembly overview - mechatronic unit	29
1.2 Removing and installing oil pan	34
1.3 Removing and installing mechatronic unit for dual clutch gearbox J743	42
<b>2 Bevel box</b>	<b>64</b>
2.1 Assembly overview - bevel box	64
2.2 Removing bevel box	65
2.3 Installing bevel box	72
<b>3 Selector mechanism</b>	<b>76</b>
3.1 Assembly overview - selector mechanism	76
3.2 Manual release from position P	79
3.3 Removing and installing selector lever handle	83
3.4 Moving push-button in the handle to installation position	102
3.5 Removing and installing selector mechanism	104
3.6 Adjusting selector mechanism	113
3.7 Removing and installing gear selector cable	119
3.8 Checking selector mechanism	125
3.9 Checking and adjusting selector lever cable	126
3.10 Renewing selector shaft seal	128
<b>4 Removing and installing gearbox</b>	<b>131</b>
4.1 Removing gearbox	131
4.2 Installing gearbox	251
4.3 Specified torques for gearbox	257
<b>5 Assembly mountings</b>	<b>260</b>
5.1 Assembly overview - assembly mountings	260
<b>6 Transporting gearbox</b>	<b>264</b>



6.1	Transporting gearbox	264
6.2	Transporting front differential lock	264
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>265</b>
7.1	Assembly overview - gearbox	265
<b>8</b>	<b>Securing to engine and gearbox support</b>	<b>269</b>
8.1	Installing gearbox to engine and gearbox support	269
8.2	Securing front differential lock to engine and gearbox support	270
<b>9</b>	<b>Gear oil circuit</b>	<b>272</b>
9.1	Removing and installing gear oil cooler	272
9.2	Removing and installing cover for gear oil pump	275
9.3	Removing and installing gear oil pump	277
9.4	Removing and installing gear oil filter	279
<b>10</b>	<b>Gear oil</b>	<b>282</b>
10.1	Checking gear oil level	282
10.2	Draining and filling gear oil	285
<b>11</b>	<b>Front differential lock</b>	<b>289</b>
11.1	Assembly overview - front differential lock	289
11.2	Removing front differential lock	289
11.3	Installing front differential lock	293
11.4	Removing and installing differential lock control unit J647	295
<b>35 - Gears, shafts</b>		<b>297</b>
1	Currently, no repairs can be made to gears and shafts	297
<b>39 - Final drive - differential</b>		<b>298</b>
<b>1</b>	<b>Gear oil</b>	<b>298</b>
1.1	Checking gear oil level	298
<b>2</b>	<b>Oil for front differential lock</b>	<b>302</b>
2.1	Checking oil level for front differential lock	302
2.2	Draining and filling oil for front differential lock	303
<b>3</b>	<b>Oil seals</b>	<b>307</b>
3.1	Overview of fitting locations - oil seals	307
3.2	Renewing left seal	309
3.3	Renewing right seal	313
<b>4</b>	<b>Components of front differential lock</b>	<b>330</b>
4.1	Assembly overview - components of front differential lock	330
4.2	Checking function	332
4.3	Removing and installing pump for front differential lock V181	332
4.4	Removing and installing coupling for front differential lock	334
4.5	Renewing seals for front differential lock	334
4.6	Renewing ball bearing for flange shaft	342
<b>5</b>	<b>Bevel box</b>	<b>346</b>
5.1	Assembly overview - bevel box	346
5.2	Removing and installing right flange shaft	348
5.3	Renewing needle bearing (polygon bearing) for right flange shaft	351
5.4	Renewing output flange and redetermining thickness of shim, bevel box removed	352