



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	4
2.1 Gearbox identification	4
3 Repair instructions	6
3.1 General information	6
3.2 Rules for cleanliness	7
3.3 General repair instructions	7
3.4 Gaskets and seals	9
3.5 Nuts and bolts	9
4 Technical data	11
4.1 Allocation gearbox - engine	11
4.2 Capacities	11
5 Electrical components	13
5.1 Overview of fitting locations - electrical components	13
30 - Clutch	14
1 Clutch	14
1.1 Assembly overview - dual clutch	14
1.2 Removing and installing clutch end cover	15
1.3 Removing dual clutch	20
1.4 Installing dual clutch	23
34 - Controls, housing	33
1 Mechatronic unit	33
1.1 Assembly overview - mechatronic unit	33
1.2 Removing and installing sump	34
1.3 Removing and installing mechatronic unit	37
2 Bevel box	41
2.1 Assembly overview - bevel box	41
2.2 Distinguishing between different types of bevel boxes	42
2.3 Removing and installing bevel box	43
3 Selector mechanism	54
3.1 Assembly overview - selector mechanism	54
3.2 Manual release from position P	56
3.3 Removing and installing selector lever handle	56
3.4 Moving push-button in the handle to installation position	60
3.5 Removing and installing selector mechanism	62
3.6 Removing and installing gear selector cable	67
3.7 Checking selector mechanism	69
3.8 Checking and adjusting selector lever cable	70
3.9 Renewing selector shaft seal	73
4 Removing and installing gearbox	76
4.1 Specified torques for gearbox	76
4.2 Removing gearbox	78
4.3 Installing gearbox	160
5 Assembly mountings	162
5.1 Assembly overview - assembly mountings	162



6	Transporting gearbox	165
7	Securing to engine and gearbox support	167
8	Gear oil circuit	169
8.1	Assembly overview - gear oil circuit	169
8.2	Removing and installing gear oil cooler	169
8.3	Removing and installing gear oil filter	172
8.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	174
9	Gear oil	177
9.1	Overview of oil drain and inspection plugs	177
9.2	Tools for gear oil change	177
9.3	Checking gear oil level	179
9.4	Draining and filling gear oil	183
35 - Gears, shafts		187
1	Currently, no repairs can be made to gears and shafts	187
39 - Final drive - differential		188
1	Gear oil	188
1.1	Checking gear oil level	188
1.2	Draining and filling gear oil	190
2	Oil seals	197
2.1	Overview of fitting locations - oil seals	197
2.2	Renewing left seal	197
2.3	Renewing right seal	201
3	Differential	205
3.1	Removing and installing right flange shaft	205
4	Components of bevel box	208
4.1	Assembly overview - components of bevel box	208
4.2	Renewing bevel box seals	212
4.3	Renewing seal on right of bevel box	212
4.4	Renewing left seal	213
4.5	Renewing needle bearing for right flange shaft	215
4.6	Removing and installing output flange	217