



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on SCR system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>5</b>
2.1 Engine number/engine data	5
<b>3 Repair instructions</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	7
3.3 Contact corrosion	7
3.4 Routing and attachment of lines	8
3.5 Fitting radiator and condensers	8
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing and installing engine</b>	<b>9</b>
1.1 Removing engine	9
1.2 Separating engine and gearbox	21
1.3 Securing engine on engine and gearbox support	24
1.4 Installing engine	25
<b>2 Assembly mountings</b>	<b>30</b>
2.1 Assembly overview - assembly mountings	30
2.2 Removing and installing engine mounting	34
2.3 Removing and installing gearbox mounting	36
2.4 Removing and installing pendulum support	40
2.5 Supporting engine in installation position	41
2.6 Adjusting assembly mountings	58
2.7 Checking adjustment of assembly mountings	61
<b>3 Engine cover panel</b>	<b>62</b>
3.1 Removing and installing engine cover	62
<b>13 - Crankshaft group</b>	<b>63</b>
<b>1 Cylinder block (pulley end)</b>	<b>63</b>
1.1 Assembly overview - cylinder block (pulley end)	63
1.2 Assembly overview - sealing flange, belt pulley end	66
1.3 Removing and installing poly-V belt	68
1.4 Removing and installing tensioner for poly V-belt	69
1.5 Removing and installing vibration damper	70
1.6 Removing and installing bracket for ancillaries	71
1.7 Removing and installing engine support	73
1.8 Removing and installing sealing flange on pulley end	75
1.9 Renewing caps in cylinder block (pulley end)	78
<b>2 Cylinder block, gearbox end</b>	<b>81</b>
2.1 Assembly overview - cylinder block, gearbox end	81
2.2 Removing and installing flywheel	84
2.3 Removing and installing sealing flange on gearbox side	86
2.4 Renewing caps in cylinder block (gearbox end)	96
<b>3 Crankshaft</b>	<b>98</b>
3.1 Assembly overview - crankshaft	98



3.2	Crankshaft dimensions	98
3.3	Renewing needle bearing in crankshaft	98
3.4	Measuring axial clearance of crankshaft	101
<b>4</b>	<b>Pistons and conrods</b>	<b>103</b>
4.1	Assembly overview - pistons and conrods	103
4.2	Removing and installing pistons	106
4.3	Measuring piston projection at TDC	108
4.4	Checking pistons and cylinder bores	110
4.5	Separating new conrod	112
4.6	Checking radial clearance of conrods	113
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>114</b>
<b>1</b>	<b>Cylinder head</b>	<b>114</b>
1.1	Assembly overview - cylinder head	114
1.2	Assembly overview - cylinder head cover	118
1.3	Removing and installing cylinder head	121
1.4	Removing and installing cylinder head cover	128
1.5	Removing and installing injector seals	131
1.6	Removing and installing camshaft housing	133
1.7	Checking compression	137
<b>2</b>	<b>Toothed belt drive</b>	<b>140</b>
2.1	Assembly overview - toothed belt cover	140
2.2	Assembly overview - toothed belt	140
2.3	Removing and installing toothed belt guard	142
2.4	Removing and installing toothed belt	148
2.5	Removing toothed belt from camshaft	163
<b>3</b>	<b>Valve gear</b>	<b>169</b>
3.1	Assembly overview - valve gear	169
3.2	Measuring axial play of camshaft	172
3.3	Removing and installing camshaft oil seal	172
3.4	Checking hydraulic compensation elements	175
3.5	Removing and installing valve stem seals	176
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>184</b>
4.1	Checking valve guides	184
4.2	Checking valves	185
4.3	Valve dimensions	185
<b>17</b>	<b>Lubrication</b>	<b>186</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>186</b>
1.1	Assembly overview - sump/oil pump	186
1.2	Engine oil:	188
1.3	Removing and installing oil sump	188
1.4	Removing and installing oil pump	193
1.5	Removing and installing oil level and oil temperature sender G266	194
<b>2</b>	<b>Engine oil cooler</b>	<b>196</b>
<b>3</b>	<b>Oil filter, oil pressure switch</b>	<b>197</b>
3.1	Assembly overview - oil filter housing, oil pressure switch	197
3.2	Removing and installing oil pressure switch F1	199
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	201
3.4	Checking oil pressure	203
3.5	Removing and installing oil filter housing	203
3.6	Removing and installing oil pressure regulating valve N428	206
<b>19</b>	<b>Cooling</b>	<b>209</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>209</b>



1.1	Connection diagram - coolant hoses	209
1.2	Checking cooling system for leaks	211
1.3	Draining coolant	215
1.4	Filling with coolant	217
1.5	Checking filling quality of cooling system	237
1.6	Flushing cooling system	239
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>264</b>
2.1	Assembly overview - coolant pump, thermostat	264
2.2	Assembly overview - electric coolant pump	268
2.3	Assembly overview - coolant temperature sender	270
2.4	Assembly overview - actuator for engine temperature regulation N493	271
2.5	Removing and installing electric coolant pump	273
2.6	Removing and installing coolant pump	279
2.7	Removing and installing thermostat	280
2.8	Checking thermostat	284
2.9	Removing and installing coolant valve for cylinder head N489	285
2.10	Removing and installing coolant temperature sender G62	285
2.11	Removing and installing coolant temperature sender 2 G802	287
2.12	Removing and installing actuator for engine temperature regulation N493	289
<b>3</b>	<b>Coolant pipes</b>	<b>296</b>
3.1	Assembly overview - coolant pipes	296
3.2	Removing and installing coolant pipes	300
<b>4</b>	<b>Radiator, radiator fan</b>	<b>325</b>
4.1	Assembly overview - radiator/radiator fan	325
4.2	Assembly overview - auxiliary radiator	327
4.3	Assembly overview - radiator cowl and radiator fan	328
4.4	Removing and installing radiator	329
4.5	Removing and installing water radiator for charge air cooling circuit	332
4.6	Removing and installing radiator cowl	335
4.7	Removing and installing radiator fan	338
4.8	Removing and installing auxiliary radiator	339
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>343</b>
<b>1</b>	<b>Turbocharger</b>	<b>343</b>
1.1	Assembly overview - turbocharger	343
1.2	Removing and installing turbocharger	356
1.3	Removing and installing vacuum unit for turbocharger	368
1.4	Removing and installing turbocharger 1 control unit J724	374
<b>2</b>	<b>Charge air system</b>	<b>379</b>
2.1	Assembly overview - charge air system	379
2.2	Removing and installing charge pressure sender G31	381
2.3	Removing and installing charge pressure sender 2 G447	381
2.4	Checking charge air system for leaks	382
2.5	Removing and installing air pipe	384
2.6	Checking charge air cooler for leaks	391
<b>23</b>	<b>Mixture preparation - injection</b>	<b>397</b>
<b>1</b>	<b>Injection system</b>	<b>397</b>
1.1	Schematic overview - fuel system	397
1.2	Overview of fitting locations - injection system	398
1.3	Filling/bleeding fuel system	412
1.4	Checking fuel system for leaks	412
<b>2</b>	<b>Vacuum system</b>	<b>414</b>
2.1	Connection diagram - vacuum system	414
2.2	Checking vacuum system	417



<b>3</b>	<b>Injectors/high-pressure accumulator (rail)</b>	<b>419</b>
3.1	Assembly overview - injectors	419
3.2	Assembly overview - fuel rail	421
3.3	Adapting correction values for injectors	423
3.4	Testing injectors	424
3.5	Checking return flow rate of injectors with engine running	424
3.6	Checking return flow rate of injectors at starter speed	427
3.7	Removing and installing injectors	429
3.8	Removing and installing high-pressure lines	433
3.9	Removing and installing fuel rail	439
<b>4</b>	<b>Air filter</b>	<b>443</b>
4.1	Assembly overview - air filter housing	443
4.2	Removing and installing air filter housing	445
<b>5</b>	<b>Intake manifold</b>	<b>449</b>
5.1	Assembly overview – intake manifold	449
5.2	Removing and installing intake manifold	452
5.3	Removing and installing throttle valve module J338	458
<b>6</b>	<b>Senders and sensors</b>	<b>461</b>
6.1	Removing and installing fuel pressure regulating valve N276	461
6.2	Checking fuel pressure regulating valve N276	463
6.3	Removing and installing fuel pressure sender G247	465
6.4	Removing and installing air mass meter G70	466
6.5	Removing and installing pressure differential sender G505	468
6.6	Removing and installing exhaust gas pressure sensor 1 G450	469
6.7	Removing and installing charge air temperature sender ahead of charge air cooler G810	471
6.8	Removing and installing charge air temperature sender after charge air cooler G811	471
6.9	Removing and installing fuel temperature sender G81	472
6.10	Removing and installing control unit for NOx sender GX30	473
6.11	Assembly overview - NOx sender control unit GX30	477
6.12	Removing and installing control unit 2 for NOx sender GX46	478
6.13	Removing and installing particle sensor G784	480
<b>7</b>	<b>Engine control unit</b>	<b>482</b>
7.1	Removing and installing engine control unit J623	482
<b>8</b>	<b>High-pressure pump</b>	<b>490</b>
8.1	Assembly overview - high-pressure pump	490
8.2	Removing and installing high-pressure pump	492
<b>9</b>	<b>Lambda probe</b>	<b>496</b>
9.1	Assembly overview - Lambda probe	496
9.2	Removing and installing Lambda probe	496
<b>26</b>	<b>Exhaust system</b>	<b>499</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>499</b>
1.1	Assembly overview – silencers	499
1.2	Removing and installing front exhaust pipe	503
1.3	Removing and installing rear silencer	506
1.4	Aligning exhaust system free of stress	510
1.5	Checking exhaust system for leaks	510
1.6	Installation position of clamp	511
1.7	Assembly overview - front exhaust pipe	511
<b>2</b>	<b>Emission control</b>	<b>518</b>
2.1	Assembly overview – emission control	518
2.2	Removing and installing emission control module	525
2.3	Removing and installing exhaust flap control unit J883	529
<b>3</b>	<b>SCR system (selective catalytic reduction)</b>	<b>532</b>



3.1	Assembly overview – reducing agent tank	532
3.2	Assembly overview - reducing agent supply line	536
3.3	Assembly overview - delivery module for reducing agent	537
3.4	Removing and installing reducing agent tank	538
3.5	Removing and installing front section of reducing agent supply line	544
3.6	Removing and installing delivery module for reducing agent	559
3.7	Removing and installing injector for reduction agent N474	561
3.8	Removing and installing control unit for reducing-agent heater J891	564
3.9	Assembly overview - injector for reducing agent	568
3.10	Draining reducing agent tank	569
3.11	Removing and installing rear section of reducing agent supply line	576
3.12	Removing and installing filler pipe for reducing agent tank	578
3.13	Disconnecting reducing agent supply line	582
3.14	SCR - resetting learnt values	585
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>586</b>
4.1	Assembly overview – exhaust gas temperature regulation	586
4.2	Removing and installing exhaust gas temperature sender 1 G235	588
4.3	Removing and installing exhaust gas temperature sender 2 G448	594
4.4	Removing and installing exhaust gas temperature sender 3 G495	596
4.5	Removing and installing exhaust gas temperature sender 4 G648	597
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>600</b>
5.1	Assembly overview – exhaust gas recirculation	600
5.2	Removing and installing exhaust gas recirculation cooler	603
5.3	Removing and installing exhaust gas recirculation valve 1 GX5	609
5.4	Removing and installing exhaust gas recirculation valve 2 GX6	611
5.5	Checking exhaust gas recirculation cooler for leaks	614
<b>6</b>	<b>Exhaust manifold</b>	<b>615</b>
6.1	Assembly overview - exhaust manifold	615
6.2	Removing and installing exhaust manifold	616
<b>28</b>	<b>Glow plug system</b>	<b>618</b>
<b>1</b>	<b>Glow plug system</b>	<b>618</b>
1.1	Assembly overview – glow plug system	618
1.2	Removing and installing glow plug	619
1.3	Removing and installing automatic glow period control unit J179	623
1.4	Removing and installing Hall sender G40	623
1.5	Removing and installing engine speed sender G28	624