



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety regulations for working on fuel supply | 1 |
| 1.2 Safety measures when working on vehicles with start/stop system | 2 |
| 1.3 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 1.4 Safety precautions when working on the cooling system | 2 |
| 1.5 Safety precautions when working on SCR system | 2 |
| 1.6 Safety precautions when working on exhaust system | 3 |
| 2 Identification | 5 |
| 2.1 Engine number/engine data | 5 |
| 3 Repair instructions | 7 |
| 3.1 Rules for cleanliness | 7 |
| 3.2 Foreign objects in engine | 7 |
| 3.3 Contact corrosion | 7 |
| 3.4 Routing and attachment of lines | 8 |
| 3.5 Fitting radiator and condensers | 8 |
| 10 - Removing and installing engine | 9 |
| 1 Removing and installing engine | 9 |
| 1.1 Removing engine | 9 |
| 1.2 Separating engine and gearbox | 22 |
| 1.3 Securing engine on engine and gearbox support | 27 |
| 1.4 Installing engine | 29 |
| 2 Assembly mountings | 35 |
| 2.1 Assembly overview - assembly mountings | 35 |
| 2.2 Removing and installing engine mounting | 37 |
| 2.3 Removing and installing gearbox mounting | 38 |
| 2.4 Removing and installing pendulum support | 40 |
| 2.5 Supporting engine in installation position | 41 |
| 2.6 Adjusting assembly mountings | 46 |
| 2.7 Checking adjustment of assembly mountings | 48 |
| 3 Engine cover panel | 50 |
| 3.1 Removing and installing engine cover | 50 |
| 13 - Crankshaft group | 51 |
| 1 Cylinder block (pulley end) | 51 |
| 1.1 Assembly overview - cylinder block (pulley end) | 51 |
| 1.2 Assembly overview - sealing flange, belt pulley end | 54 |
| 1.3 Removing and installing poly-V belt | 55 |
| 1.4 Removing and installing tensioner for poly V-belt | 57 |
| 1.5 Removing and installing vibration damper | 57 |
| 1.6 Removing and installing bracket for ancillaries | 58 |
| 1.7 Removing and installing engine support | 60 |
| 1.8 Removing and installing sealing flange on pulley end | 62 |
| 1.9 Renewing caps in cylinder block (pulley end) | 64 |
| 2 Cylinder block, gearbox end | 66 |
| 2.1 Assembly overview - cylinder block, gearbox end | 66 |
| 2.2 Removing and installing flywheel | 69 |
| 2.3 Removing and installing sealing flange on gearbox side | 71 |
| 2.4 Renewing caps in cylinder block (gearbox end) | 96 |
| 3 Crankshaft | 98 |
| 3.1 Assembly overview - crankshaft | 98 |



| | | |
|-----------|---|------------|
| 3.2 | Crankshaft dimensions | 100 |
| 3.3 | Renewing needle bearing in crankshaft | 101 |
| 3.4 | Measuring axial clearance of crankshaft | 103 |
| 3.5 | Measuring radial clearance of crankshaft | 104 |
| 4 | Pistons and conrods | 105 |
| 4.1 | Assembly overview - pistons and conrods | 105 |
| 4.2 | Removing and installing pistons | 110 |
| 4.3 | Measuring piston projection at TDC | 112 |
| 4.4 | Checking pistons and cylinder bores | 114 |
| 4.5 | Checking radial clearance of conrods | 117 |
| 15 | Cylinder head, valve gear | 118 |
| 1 | Cylinder head | 118 |
| 1.1 | Assembly overview - cylinder head | 118 |
| 1.2 | Assembly overview - cylinder head cover | 122 |
| 1.3 | Removing and installing cylinder head | 124 |
| 1.4 | Removing and installing cylinder head cover | 136 |
| 1.5 | Removing and installing injector seals | 137 |
| 1.6 | Removing and installing camshaft housing | 138 |
| 1.7 | Checking compression | 145 |
| 2 | Toothed belt drive | 149 |
| 2.1 | Assembly overview - toothed belt cover | 149 |
| 2.2 | Assembly overview - toothed belt | 150 |
| 2.3 | Removing and installing toothed belt guard | 152 |
| 2.4 | Removing and installing toothed belt | 156 |
| 2.5 | Removing toothed belt from camshaft | 169 |
| 3 | Valve gear | 179 |
| 3.1 | Assembly overview - valve gear | 179 |
| 3.2 | Measuring axial play of camshaft | 181 |
| 3.3 | Removing and installing camshaft oil seal | 182 |
| 3.4 | Checking hydraulic compensation elements | 185 |
| 3.5 | Removing and installing valve stem oil seals | 186 |
| 4 | Inlet and exhaust valves | 202 |
| 4.1 | Checking valve guides | 202 |
| 4.2 | Checking valves | 203 |
| 4.3 | Valve dimensions | 203 |
| 17 | Lubrication | 205 |
| 1 | Sump, oil pump | 205 |
| 1.1 | Assembly overview - sump/oil pump | 205 |
| 1.2 | Engine oil: | 209 |
| 1.3 | Removing and installing lower part of sump | 209 |
| 1.4 | Removing and installing upper part of sump | 214 |
| 1.5 | Removing and installing oil pump | 218 |
| 1.6 | Removing and installing oil level and oil temperature sender G266 | 219 |
| 2 | Engine oil cooler | 220 |
| 3 | Oil filter, oil pressure switch | 221 |
| 3.1 | Assembly overview - oil filter housing | 221 |
| 3.2 | Exploded view - oil pressure switches | 223 |
| 3.3 | Removing and installing oil pressure sender G10 | 224 |
| 3.4 | Checking oil pressure | 225 |
| 3.5 | Removing and installing oil filter housing | 226 |
| 3.6 | Removing and installing oil pressure regulating valve N428 | 228 |
| 3.7 | Removing and installing piston cooling jet control valve N522 | 229 |
| 4 | Oil circuit | 230 |



| | | |
|-----------|--|------------|
| 4.1 | Removing and installing oil supply line | 230 |
| 4.2 | Removing and installing oil return line for turbocharger | 231 |
| 19 | Cooling | 233 |
| 1 | Cooling system/coolant | 233 |
| 1.1 | Connection diagram - coolant hoses | 233 |
| 1.2 | Checking cooling system for leaks | 237 |
| 1.3 | Draining coolant | 240 |
| 1.4 | Filling with coolant | 242 |
| 1.5 | Checking filling quality of cooling system | 262 |
| 1.6 | Flushing cooling system | 264 |
| 2 | Coolant pump, regulation of cooling system | 286 |
| 2.1 | Assembly overview - coolant pump, thermostat | 286 |
| 2.2 | Assembly overview - electric coolant pump | 289 |
| 2.3 | Assembly overview - coolant temperature sender | 291 |
| 2.4 | Removing and installing electric coolant pump | 293 |
| 2.5 | Removing and installing coolant pump | 301 |
| 2.6 | Removing and installing coolant distribution module | 303 |
| 2.7 | Removing and installing coolant regulating valve N515 | 306 |
| 2.8 | Removing and installing coolant temperature sender G62 | 307 |
| 2.9 | Removing and installing engine outlet coolant temperature sender G82 | 309 |
| 2.10 | Removing and installing coolant temperature sender for charge air cooler G1130 | 311 |
| 3 | Coolant pipes | 314 |
| 3.1 | Assembly overview - coolant pipes | 314 |
| 3.2 | Removing and installing coolant pipes | 315 |
| 4 | Radiator, radiator fan | 323 |
| 4.1 | Assembly overview - radiator/radiator fan | 323 |
| 4.2 | Assembly overview - radiator cowl and radiator fan | 326 |
| 4.3 | Removing and installing radiator | 327 |
| 4.4 | Removing and installing water radiator for charge air cooling circuit | 329 |
| 4.5 | Removing and installing radiator cowl | 335 |
| 4.6 | Removing and installing radiator fan | 336 |
| 21 | Turbocharging/supercharging | 338 |
| 1 | Turbocharger | 338 |
| 1.1 | Assembly overview - turbocharger | 338 |
| 1.2 | Removing and installing turbocharger | 341 |
| 1.3 | Removing and installing connection for turbocharger | 347 |
| 2 | Charge air system | 348 |
| 2.1 | Assembly overview - charge air system | 348 |
| 2.2 | Removing and installing charge pressure sender GX26 | 348 |
| 2.3 | Checking charge air system for leaks | 348 |
| 2.4 | Removing and installing air intake pipe | 351 |
| 2.5 | Checking charge air cooler for leaks | 353 |
| 2.6 | Assembly overview - charge-air hose connections | 357 |
| 23 | Mixture preparation - injection | 359 |
| 1 | Injection system | 359 |
| 1.1 | Schematic overview - fuel system | 359 |
| 1.2 | Overview of fitting locations - injection system | 361 |
| 1.3 | Filling/bleeding fuel system | 373 |
| 1.4 | Checking fuel system for leaks | 373 |
| 2 | Injectors/high-pressure accumulator (rail) | 375 |
| 2.1 | Assembly overview - injectors | 375 |
| 2.2 | Assembly overview - fuel rail | 377 |



| | | |
|-----------|---|------------|
| 2.3 | Adapting correction values for injectors | 378 |
| 2.4 | Testing injectors | 379 |
| 2.5 | Checking return flow rate of injectors with engine running | 380 |
| 2.6 | Checking return flow rate of injectors at starter speed | 383 |
| 2.7 | Checking open injectors | 385 |
| 2.8 | Removing and installing injectors | 386 |
| 2.9 | Removing and installing high-pressure lines | 391 |
| 2.10 | Removing and installing fuel rail | 396 |
| 3 | Air filter | 401 |
| 3.1 | Assembly overview - air filter housing | 401 |
| 3.2 | Removing and installing air filter housing | 403 |
| 3.3 | Removing and installing air guide on lock carrier | 405 |
| 4 | Intake manifold | 407 |
| 4.1 | Assembly overview – intake manifold | 407 |
| 4.2 | Removing and installing intake manifold | 412 |
| 4.3 | Removing and installing throttle valve module GX3 | 419 |
| 5 | Senders and sensors | 422 |
| 5.1 | Removing and installing fuel pressure regulating valve N276 | 422 |
| 5.2 | Checking fuel pressure regulating valve N276 | 424 |
| 5.3 | Removing and installing fuel pressure sender G247 | 426 |
| 5.4 | Removing and installing air mass measurement module GX35 | 428 |
| 5.5 | Removing and installing pressure differential sender G505 | 430 |
| 5.6 | Removing and installing NOx sender 2 G687 | 432 |
| 5.7 | Removing and installing NOx sender 3 G932 | 433 |
| 5.8 | Removing and installing charge air temperature sender ahead of charge air cooler G810 | 435 |
| 5.9 | Removing and installing charge air temperature sender after charge air cooler G811 | 436 |
| 5.10 | Removing and installing NOx sender G295 | 436 |
| 5.11 | Removing and installing particle sensor G784 | 439 |
| 5.12 | Removing and installing temperature and pressure sender for low-pressure fuel system GX20 | 440 |
| 6 | Engine/motor control unit | 442 |
| 6.1 | Removing and installing engine control unit J623 | 442 |
| 6.2 | Removing and installing engine control unit J623 (with protective housing) | 443 |
| 7 | High-pressure pump | 450 |
| 7.1 | Assembly overview - high-pressure pump | 450 |
| 7.2 | Removing and installing high-pressure pump | 451 |
| 8 | Lambda probe | 455 |
| 8.1 | Assembly overview - Lambda probe | 455 |
| 8.2 | Removing and installing lambda probe | 456 |
| 26 | Exhaust system | 458 |
| 1 | Exhaust pipes and silencers | 458 |
| 1.1 | Assembly overview – silencers | 458 |
| 1.2 | Assembly overview - front exhaust pipe | 459 |
| 1.3 | Separating exhaust pipes from silencers | 463 |
| 1.4 | Removing and installing silencer | 464 |
| 1.5 | Aligning exhaust system free of stress | 466 |
| 1.6 | Checking exhaust system for leaks | 466 |
| 1.7 | Installation position of clamp | 466 |
| 1.8 | Align end exhaust pipes | 468 |
| 2 | Emission control | 469 |
| 2.1 | Assembly overview – emission control | 469 |
| 2.2 | Removing and installing emission control module | 471 |
| 2.3 | Removing and installing exhaust flap control unit J883 | 479 |
| 2.4 | Removing and installing ammonia traps | 481 |



| | | |
|-----------|---|------------|
| 3 | SCR system (selective catalytic reduction) | 484 |
| 3.1 | Assembly overview – reducing agent tank | 484 |
| 3.2 | Assembly overview - reducing agent supply line | 486 |
| 3.3 | Assembly overview - delivery unit for reducing agent metering system GX19 | 490 |
| 3.4 | Removing and installing reducing agent tank | 490 |
| 3.5 | Removing and installing front section of reducing agent supply line | 492 |
| 3.6 | Removing and installing delivery unit for reducing agent metering system GX19 | 496 |
| 3.7 | Removing and installing injector for reduction agent N474 | 498 |
| 3.8 | Removing and installing injector 2 for reducing agent N758 | 500 |
| 3.9 | Removing and installing control unit for reducing-agent heater J891 | 502 |
| 3.10 | Assembly overview - injector for reducing agent N474 | 505 |
| 3.11 | Assembly overview – injector 2 for reducing agent N758 | 506 |
| 3.12 | Draining reducing agent tank | 507 |
| 3.13 | Removing and installing middle section of reducing agent supply line | 511 |
| 3.14 | Removing and installing rear section of reducing agent supply line | 512 |
| 3.15 | Removing and installing filler pipe for reducing agent tank | 515 |
| 3.16 | Disconnecting reducing agent supply line | 516 |
| 3.17 | SCR - resetting learnt values | 522 |
| 4 | Exhaust gas temperature regulation | 523 |
| 4.1 | Assembly overview – exhaust gas temperature regulation | 523 |
| 4.2 | Removing and installing exhaust gas temperature sender 1 G235 | 524 |
| 4.3 | Removing and installing exhaust gas temperature sender 2 G448 | 526 |
| 4.4 | Removing and installing exhaust gas temperature sender 3 G495 | 528 |
| 4.5 | Removing and installing exhaust gas temperature sender 4 G648 | 530 |
| 5 | Exhaust gas recirculation | 534 |
| 5.1 | Assembly overview – exhaust gas recirculation | 534 |
| 5.2 | Removing and installing exhaust gas recirculation cooler | 537 |
| 5.3 | Removing and installing exhaust gas recirculation valve 1 GX5 | 540 |
| 5.4 | Removing and installing exhaust gas recirculation valve 2 GX6 | 541 |
| 5.5 | Removing and installing exhaust gas recirculation temperature sensor G98 | 542 |
| 5.6 | Checking exhaust gas recirculation cooler for leaks | 543 |
| 28 | Glow plug system | 549 |
| 1 | Glow plug system | 549 |
| 1.1 | Assembly overview – glow plug system | 549 |
| 1.2 | Removing and installing glow plug | 551 |
| 1.3 | Removing and installing automatic glow period control unit J179 | 555 |
| 1.4 | Removing and installing Hall sender G40 | 556 |
| 1.5 | Removing and installing engine speed sender G28 | 557 |