



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on SCR system	2
2 Identification	4
2.1 Engine number/engine data	4
3 General information	5
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	5
4 Repair instructions	6
4.1 Rules for cleanliness	6
4.2 Foreign bodies in engine	6
4.3 Contact corrosion	6
4.4 Routing and attachment of lines	7
4.5 Fitting radiator and condensers	7
20 - Fuel supply system	8
1 Procedure in event of misfuelling	8
1.1 Procedure in event of misfuelling	8
2 Fuel	17
2.1 Assembly overview - fuel tank	17
2.2 Removing and installing fuel tank	24
2.3 Emptying fuel tank	46
2.4 Removing and installing misfuelling prevention device	59
2.5 Deactivating misfuelling prevention device	63
3 Fuel delivery unit, fuel gauge sender	65
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	65
3.2 Removing and installing fuel delivery unit, fuel gauge sender	73
3.3 Removing and installing fuel gauge sender G	83
3.4 Removing and installing fuel gauge sender 2 G169	84
3.5 Removing and installing assembly opening cover	89
4 Plug-in connectors	91
4.1 Separating plug-in connectors	91
5 Fuel filter	98
5.1 Assembly overview – fuel filter	98
5.2 Removing and installing fuel filter	99
5.3 Fuel hoses in the engine compartment	103
6 Accelerator pedal	105
6.1 Assembly overview - accelerator module	105
6.2 Removing and installing accelerator pedal module GX2	105
7 Fuel supply	107
7.1 Checking fuel system pressurisation pump G6	107
7.2 Removing and installing suction-jet pump	128
7.3 Removing and installing fuel pump control unit J538	133
7.4 Checking suction-jet pump	135
8 Fuel lines	137
8.1 Removing and installing fuel lines	137
8.2 Removing and installing fuel line for auxiliary/supplementary heater	142
9 Senders and sensors	145
9.1 Removing and installing water separator sender G63	145