



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Service work</b>	<b>9</b>
2.1	Information about flexible or fixed service	9
2.2	Service tables	11
<b>3</b>	<b>General information</b>	<b>25</b>
3.1	Raising vehicle with lifting platform or trolley jack	25
3.2	Stickers	27
3.3	Entries in service schedule	28
3.4	Connecting vehicle diagnostic tester	28
3.5	Vehicle identification number	29
3.6	Vehicle data sticker	30
3.7	Severe operating conditions	31
3.8	Countries with hot climate	31
3.9	Country overview for diesel not compliant with EN 590	32
3.10	Country overview for petrol not compliant with EN 228	33
3.11	Engine code and engine number	34
3.12	Countries with high levels of dust	34
3.13	Identification plate	35
3.14	Shortened intervals for spark plug replacement	36
<b>4</b>	<b>Descriptions of work</b>	<b>41</b>
4.1	Removable towing bracket: checking and cleaning if necessary	43
4.2	Swivel joints and suspension link mountings: inspecting	46
4.3	Front passenger front airbag: checking key switch and "ON/OFF function"	47
4.4	Automatic gearbox: checking ATF level	50
4.5	Battery: checking battery terminal clamps for secure seating	50
4.6	Battery (12V): checking with battery tester (always refer to workshop manual)	54
4.7	Status of battery: reading, sending diagnosis protocol online	54
4.8	Tyres: checking condition, wear pattern, tyre pressure and tread depth	54
4.9	Brake and clutch system: change brake fluid	73
4.10	Brake fluid level: Check	79
4.11	Brake system and shock absorbers: inspecting for leaks and damage	81
4.12	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	82
4.13	Dual clutch gearbox 02E: changing gear oil and filter	84
4.14	Electric windows: checking positioning (open and close functions)	84
4.15	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	85
4.16	Bonnet catch hook: grease.	85
4.17	Boots: inspecting	86
4.18	Interior and exterior body: inspecting for corrosion with doors and flaps open	86
4.19	Poly V-belt: renewing	86
4.20	Poly V-belt: checking condition	87
4.21	Cooling system: checking frost protection and coolant level	88
4.22	Diesel fuel filter: renewing	91
4.23	Air filter: cleaning housing and renewing filter element	99
4.24	Engine cover panel -top-: removing and installing	108
4.25	Engine cover panel, -bottom- (noise insulation): removing and installing	118
4.26	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	118
4.27	Engine oil level: checking	119
4.28	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	121
4.29	Engine oil: capacities and specifications	141
4.30	Tyre repair set: check bottle for damage and if used; check and enter use-by date of tyre sealant	143
4.31	Road test: performing (driving behaviour, noises, air conditioner etc.)	144



4.32	Wheel securing bolts: tightening to specified torque	144
4.33	Radio code: reading using vehicle diagnostic tester	146
4.34	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	146
4.35	Tyre pressure loss indicator: performing basic setting	147
4.36	Dust and pollen filter: cleaning housing and renewing filter element	151
4.37	Headlight adjustment: checking halogen headlights and fog lights, adjust if necessary, Passat/Passat Estate 2006▶	151
4.38	Headlight adjustment: checking halogen headlights, Passat CC and CC 2010▶	155
4.39	Headlight adjustment: checking gas discharge headlights without DLA, adjust if necessary, Passat/Passat Estate 2006▶	158
4.40	Headlight adjustment: checking gas discharge headlights without DLA, Passat CC and CC 2010▶	162
4.41	Headlight adjustment: checking gas discharge headlights with DLA, adjust if necessary, CC 2012▶	169
4.42	Headlight adjustment: checking fog lights, Passat CC and CC 2010▶	177
4.43	Window wash/wipe system and headlight washer system: checking function	179
4.44	Service interval display: recoding	184
4.45	Service interval display: Reset	185
4.46	Sunroof: checking function, cleaning and greasing guide rails	189
4.47	Sliding sunroof drains: checking for blockage, cleaning if necessary	189
4.48	Track rods: checking clearance, attachment and boots	192
4.49	Door arrester: grease.	193
4.50	Transportation mode: switching off	194
4.51	Transportation devices: removing blocking pieces from springs on front axle	194
4.52	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	195
4.53	Clock: setting to correct time	195
4.54	Camshaft drive toothed belt (diesel engines): renewing	198
4.55	Toothed belt and toothed belt tensioning roller: renewing (TDI unit injector)	198
4.56	Camshaft drive toothed belt: renewing (petrol engines)	198
4.57	Camshaft drive toothed belt: checking (1.6 l, 4-cyl. petrol engines)	198
4.58	Spark plugs: Renew	199
4.59	Compass module: activating	218
4.60	Static cornering light (cornering light) and driving light assist: check function.	218
4.61	All-wheel drive coupling: changing oil	220
4.62	Front and rear final drive: checking oil level	225
4.63	Auxiliary heater: setting weekday in menu of dash panel insert	225
4.64	Multi-purpose additive for diesel fuel: adding	226
4.65	Multi-purpose additive for petrol fuel: adding	228
4.66	Memory seat: initialising	229
4.67	Diesel particulate filter: checking	229
4.68	Automatic gearbox: change ATF.	230
4.69	Reducing agent (AdBlue®/DEF): replenishing	230
4.70	Reducing agent (AdBlue®/DEF): changing	235
4.71	Transportation devices: removing tie-down rings	236
4.72	Natural gas system: visually inspecting natural gas tank for corrosion and leakage	238
4.73	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut-off valve	243
4.74	Natural gas filler connection: checking condition, cleaning if necessary and checking seal	244
4.75	Natural gas tank: renewing	244
4.76	Activation of environment monitoring system (Front Assist): checking	245
<b>5</b>	<b>Exhaust emissions test</b>	<b>246</b>
5.1	Exhaust emissions test for petrol engines	246
5.2	Exhaust emissions test for diesel engines	248
<b>6</b>	<b>Glossary</b>	<b>252</b>
<b>7</b>	<b>---Change history---</b>	<b>255</b>