



Contents

00 - Technical data	1
1 Identification	1
1.1 Allocation of PR number - brakes	1
2 Technical data	3
2.1 Technical data for brakes	3
3 Brake test	5
3.1 General information	5
3.2 Checking vehicles with front-wheel drive	5
3.3 Checking vehicles with four-wheel drive	5
3.4 Checking parking brake	6
45 - Anti-lock brake system	8
1 General information	8
1.1 Repair instructions for repair work on ABS	8
1.2 Vehicle diagnosis, testing and information system	9
2 Fitting location overview	11
3 Control unit and hydraulic unit	13
3.1 Assembly overview	13
3.2 Removing and installing control unit and hydraulic unit	14
3.3 Connecting brake lines to hydraulic unit	17
4 Sensors	19
4.1 Assembly overview - speed sensor on front axle	19
4.2 Removing and installing speed sensor on front axle	20
4.3 Assembly overview - speed sensor on rear axle	20
4.4 Removing and installing speed sensor on rear axle	22
4.5 Removing and installing ESP sensor unit	23
4.6 Removing and installing steering angle sender	24
4.7 Removing and installing brake servo vacuum sender	24
46 - Brakes - mechanism	26
1 Front brakes	26
1.1 Assembly overview - front brakes	26
1.2 Removing and installing brake pads/linings	31
1.3 Removing and installing brake caliper	39
2 Rear brakes	45
2.1 Assembly overview - rear brakes	45
2.2 Removing and installing brake pads/linings	46
2.3 Removing and installing brake caliper	49
3 Parking brake	52
3.1 Fitting location overview - parking brake	52
3.2 Removing and installing control unit	53
3.3 Removing and installing parking brake motor	53
4 Brake pedal	56
4.1 Assembly overview - brake pedal	56
4.2 Separating brake pedal from brake servo	56
4.3 Connecting brake pedal to brake servo	57
47 - Brakes - hydraulics	58
1 Front brake calipers	58
1.1 Assembly overview - front brake caliper	58
1.2 Removing and installing brake caliper piston	60



2	Rear brake calipers	68
2.1	Assembly overview - rear brake caliper	68
2.2	Removing and installing rear brake caliper piston	69
3	Brake servo and brake master cylinder	72
3.1	Assembly overview - brake servo/brake master cylinder	72
3.2	Removing and installing brake light switch	73
3.3	Removing and installing brake master cylinder	74
3.4	Removing and installing brake servo	75
4	Vacuum system	80
4.1	Assembly overview - vacuum pump	80
4.2	Checking non-return valve	81
4.3	Removing and installing brake servo pressure sensor	81
4.4	Checking brake servo vacuum system	82
5	Brake lines	87
5.1	Repairing brake lines	87
6	Hydraulic system	92
6.1	General notes on brake fluid	92
6.2	Pre-bleeding hydraulic system	92
6.3	Bleeding hydraulic system following standard procedure	94
6.4	Subsequent bleeding of hydraulic system	95
6.5	Testing for leaks	95