



Contents

| | |
|--|-----|
| 00 - Technical data | 1 |
| 1 Battery | 1 |
| 1.1 Types of battery | 1 |
| 1.2 Battery - general notes | 1 |
| 1.3 Fundamental issues | 1 |
| 27 - Starter, current supply, CCS | 2 |
| 1 Battery | 2 |
| 1.1 Assembly overview - battery | 2 |
| 1.2 Removing and installing battery | 4 |
| 1.3 Checking battery | 7 |
| 1.4 Disconnecting and connecting battery | 7 |
| 1.5 Charging battery | 12 |
| 1.6 Removing and installing earth cable with battery monitor control unit J367 | 12 |
| 1.7 Pyrotechnical battery isolator | 14 |
| 1.8 Adapting battery monitor control unit J367 | 17 |
| 2 Jump start point | 18 |
| 2.1 Assembly overview - jump-start terminal | 18 |
| 2.2 Removing and installing jump starting point | 18 |
| 3 Starter motor | 20 |
| 3.1 Assembly overview - starter | 20 |
| 3.2 Removing and installing starter motor | 29 |
| 3.3 Checking starter | 55 |
| 4 Alternator | 56 |
| 4.1 Assembly overview - alternator | 56 |
| 4.2 Removing and installing alternator | 63 |
| 4.3 Checking alternator | 82 |
| 4.4 Checking poly V-belt | 82 |
| 4.5 Removing and installing poly V-belt pulley | 83 |
| 4.6 Removing and installing voltage regulator | 88 |
| 4.7 Securing B+ (battery positive) wire to alternator | 90 |
| 5 Start/stop system | 91 |
| 5.1 Components of start/stop system | 91 |
| 5.2 Removing and installing voltage stabiliser J532 | 92 |
| 6 Cruise control system (CCS) | 94 |
| 6.1 General notes | 94 |
| 6.2 Activating and deactivating cruise control system (CCS) | 94 |
| 7 Adaptive cruise control (ACC) | 95 |
| 7.1 Installing adaptive cruise control | 95 |
| 7.2 Overview of fitting locations - adaptive cruise control | 95 |
| 7.3 Removing and installing adaptive cruise control unit | 96 |
| 7.4 Removing and installing adaptive cruise control button | 97 |
| 7.5 Calibrating adaptive cruise control | 97 |
| 90 - Gauges, instruments | 99 |
| 1 Dash panel insert | 99 |
| 1.1 General description | 99 |
| 1.2 Assembly overview - dash panel insert | 101 |
| 1.3 Removing and installing dash panel insert | 104 |
| 2 Clock | 106 |
| 2.1 Removing and installing clock | 106 |
| 3 Horn | 108 |



| | | |
|--|--|------------|
| 3.1 | Assembly overview - horn | 108 |
| 3.2 | Removing and installing horn | 109 |
| 92 - Windscreen wash/wipe system | | 110 |
| 1 | windscreen wiper system | 110 |
| 1.1 | General description | 110 |
| 1.2 | Assembly overview - windscreen wiper system | 110 |
| 1.3 | Removing and installing wiper blade | 112 |
| 1.4 | Renewing windscreen wiper rubber | 112 |
| 1.5 | Removing and installing wiper arms | 114 |
| 1.6 | Adjusting wiper arms | 114 |
| 1.7 | Removing and installing wiper motor | 115 |
| 1.8 | Removing and installing rain and light sensor | 121 |
| 2 | Windscreen washer system | 126 |
| 2.1 | General notes | 126 |
| 2.2 | Assembly overview - windscreen washer system | 126 |
| 2.3 | Removing and installing washer fluid reservoir | 128 |
| 2.4 | Removing and installing windscreen washer pump | 132 |
| 2.5 | Removing and installing windscreen washer fluid level sender | 133 |
| 2.6 | Removing and installing washer jets | 133 |
| 2.7 | Adjusting spray jets | 133 |
| 3 | Headlight washer system | 134 |
| 3.1 | General notes | 134 |
| 3.2 | Assembly overview - headlight washer system | 134 |
| 3.3 | Removing and installing headlight washer system pump | 135 |
| 3.4 | Removing and installing washer jets | 136 |
| 3.5 | Adjusting spray jets | 136 |
| 3.6 | Removing and installing pop-up cylinder | 136 |
| 3.7 | Bleeding headlight washer system | 138 |
| 3.8 | Adapting headlight washer system | 138 |
| 4 | Washer fluid lines | 139 |
| 4.1 | Headlight washer system | 139 |
| 4.2 | Hose repair | 139 |
| 94 - Lights, bulbs, switches - exterior | | 140 |
| 1 | Headlights | 141 |
| 1.1 | Assembly overview - headlight | 141 |
| 1.2 | Removing and installing headlights MX1 / MX2 | 150 |
| 1.3 | Adjusting headlights MX1 / MX2 | 154 |
| 1.4 | Adjusting headlight installation position | 154 |
| 1.5 | Converting headlights for use when driving on the left or right | 156 |
| 1.6 | Removing and installing headlight dipped beam bulb M29 / M31 | 163 |
| 1.7 | Removing and installing headlight main beam bulb M30 / M32 | 167 |
| 1.8 | Removing and installing static cornering light bulb | 170 |
| 1.9 | Removing and installing side light bulb M1 / M3 | 174 |
| 1.10 | Removing and installing turn signal bulb M5 / M7 | 177 |
| 1.11 | Removing and installing headlight range control motor V48 / V49 | 180 |
| 1.12 | Headlight holder | 183 |
| 1.13 | Repairing headlight retaining tabs | 184 |
| 1.14 | Removing and installing gas discharge bulb | 188 |
| 1.15 | Removing and installing bulb for daytime running light/side light | 191 |
| 1.16 | Headlight holder | 193 |
| 1.17 | Dip beam screen motor V294 / V295 | 193 |
| 1.18 | Gas discharge bulb control unit J343 / J344 with power output module for headlight J667 / J668 | 193 |
| 1.19 | Cornering light and headlight range control unit J745 | 195 |



| | | |
|-----------|---|------------|
| 1.20 | Vehicle level sender | 196 |
| 1.21 | Removing and installing control unit for daytime running light and side light J860 / J861 | 197 |
| 2 | Fog lights | 198 |
| 2.1 | Assembly overview - fog lights | 198 |
| 2.2 | Removing and installing fog light | 199 |
| 2.3 | Removing and installing fog light bulb L22 / L23 | 200 |
| 2.4 | Checking fog lights | 200 |
| 2.5 | Adjusting fog lights | 201 |
| 3 | Side marker light | 202 |
| 3.1 | Removing and installing side marker bulb (for USA and Canada only) | 202 |
| 4 | Front turn signal lamp | 204 |
| 4.1 | Removing and installing front turn signal | 204 |
| 4.2 | Removing and installing front turn signal bulb M5 / M7 | 205 |
| 4.3 | Checking front turn signal | 206 |
| 5 | Lights in exterior mirror | 207 |
| 5.1 | Assembly overview - lights in exterior mirror | 207 |
| 5.2 | Removing and installing turn signal repeater bulb L131 / L132 | 207 |
| 5.3 | Entry light in exterior mirror W52 / W53 | 208 |
| 6 | Tail lights | 211 |
| 6.1 | General notes | 211 |
| 6.2 | Assembly overview - tail lights in rear lid | 211 |
| 6.3 | Assembly overview - tail lights in body | 214 |
| 6.4 | Removing and installing tail light MX3 / MX4 | 215 |
| 6.5 | Removing and installing tail light cluster in rear lid MX5 / MX6 | 221 |
| 6.6 | Removing and installing brake and tail light bulb M21 / M22 | 229 |
| 6.7 | Removing and installing rear turn signal bulb M6 / M8 | 230 |
| 7 | High-level brake light | 232 |
| 7.1 | General notes | 232 |
| 7.2 | Removing and installing bulb for high-level brake light M25 | 232 |
| 7.3 | Checking high-level brake light bulb M25 | 233 |
| 8 | Number plate light | 234 |
| 8.1 | Removing and installing number plate light X | 234 |
| 8.2 | Checking number plate light X | 235 |
| 9 | Steering column switch module (SCSM) | 236 |
| 9.1 | Assembly overview - steering column switch module (SCSM) | 236 |
| 9.2 | Removing and installing steering column switch module (SCSM) | 238 |
| 9.3 | Removing and installing steering column electronics control unit | 243 |
| 9.4 | Airbag coil connector and return ring with slip ring F138 ► 10.2009 | 249 |
| 9.5 | Segment sender for steering angle sender G85 ► 10.2009 | 250 |
| 10 | Ignition/starter switch and lock cylinder. | 252 |
| 10.1 | Ignition/starter switch | 252 |
| 10.2 | Lock cylinder | 252 |
| 11 | Parking aid | 253 |
| 11.1 | General description | 253 |
| 11.2 | Assembly overview - parking aid | 254 |
| 11.3 | Removing and installing parking aid control unit | 256 |
| 11.4 | Removing and installing front parking aid senders | 258 |
| 11.5 | Removing and installing rear parking aid senders | 263 |
| 11.6 | Repairing sender retainers of parking aid in front bumper cover and in radiator grille | 265 |
| 11.7 | Repairing parking aid sender retainers in rear bumper cover | 267 |
| 11.8 | Parking aid warning buzzer | 269 |
| 12 | Park assist steering | 272 |
| 12.1 | General description | 272 |



| | | |
|--|--|------------|
| 12.2 | Assembly overview - park assist steering | 273 |
| 12.3 | Removing and installing park assist steering control unit | 275 |
| 12.4 | Repairing park assist steering sender retainers in front bumper cover | 276 |
| 12.5 | Removing and installing front parking aid warning buzzer | 277 |
| 12.6 | Removing and installing rear parking aid warning buzzer | 279 |
| 13 | Lane departure warning (Lane Assist) | 280 |
| 13.1 | General description | 280 |
| 13.2 | Assembly overview - lane departure warning | 281 |
| 13.3 | Removing and installing lane departure warning control unit | 281 |
| 13.4 | Removing and installing windscreen heater for lane departure warning | 282 |
| 13.5 | Calibrating lane departure warning camera | 283 |
| 13.6 | Coding lane departure warning control unit | 283 |
| 14 | Entry and start authorisation | 284 |
| 14.1 | Assembly overview - entry and start authorisation aerials and sensors | 284 |
| 14.2 | General description | 286 |
| 14.3 | Emergency starting when communication between ID sender and control unit is defective | 288 |
| 14.4 | Electronic ignition lock D9 | 288 |
| 14.5 | Removing and installing control unit for terminal control and engine start J942 | 288 |
| 14.6 | Convenience system central control unit J393 | 289 |
| 14.7 | Entry and start authorisation aerials and sensors | 290 |
| 14.8 | Checking entry and start system aerials and sensors | 297 |
| 14.9 | Removing and installing rear lid power opening sender G750 / G760 | 301 |
| 14.10 | Adapting entry and start authorisation functions | 302 |
| 96 - Lights, bulbs, switches - interior | 303 | |
| 1 | Lights | 303 |
| 1.1 | Overview of fitting locations - lights in dash panel | 303 |
| 1.2 | Overview of fitting locations - lights in front doors | 305 |
| 1.3 | Overview of fitting locations - lights in rear doors | 306 |
| 1.4 | Overview of fitting locations - lights in luggage compartment | 307 |
| 1.5 | Overview of fitting locations - lights in roof trim | 308 |
| 1.6 | Removing and installing glove compartment light W6 | 308 |
| 1.7 | Removing and installing bulb for glove compartment light W6 | 309 |
| 1.8 | Removing and installing footwell light W9 / W10 | 309 |
| 1.9 | Removing and installing footwell light bulb W9 / W10 | 310 |
| 1.10 | Removing and installing front passenger side airbag deactivated warning lamp K145 | 311 |
| 1.11 | Central locking SAFELOCK function warning lamp K133 | 312 |
| 1.12 | Removing and installing entry light W31 / W32 / W33 / W34 | 313 |
| 1.13 | Removing and installing luggage compartment light W3 | 314 |
| 1.14 | Removing and installing bulb for luggage compartment light W3 | 315 |
| 1.15 | Removing and installing cigarette lighter illumination bulb L28 | 316 |
| 1.16 | Removing and installing illuminated vanity mirror W20 / W14 | 316 |
| 1.17 | Removing and installing vanity mirror light bulb L31 | 317 |
| 1.18 | Removing and installing front interior light WX1 | 317 |
| 1.19 | Removing and installing centre reading light W39 / W40 | 320 |
| 1.20 | Removing and installing rear interior light WX2 | 321 |
| 1.21 | Removing and installing bulb for rear reading light W11 / W12 | 322 |
| 1.22 | Removing and installing light conductor for front sill panel moulding ambient lighting W67 / W68 | 323 |
| 2 | Controls | 326 |
| 2.1 | Fitting locations overview - controls in dash panel | 327 |
| 2.2 | Fitting locations overview - controls in front doors | 329 |
| 2.3 | Fitting locations overview - controls in rear doors | 330 |
| 2.4 | Fitting locations overview - controls in centre console | 331 |
| 2.5 | Fitting locations overview - controls in luggage compartment | 332 |



| | | |
|----------|--|------------|
| 2.6 | Fitting locations overview - controls in roof trim | 333 |
| 2.7 | Removing and installing light switch E1 | 333 |
| 2.8 | Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20 | 334 |
| 2.9 | Removing and installing electronic ignition lock D9 | 335 |
| 2.10 | Removing and installing hazard warning light switch E3 | 337 |
| 2.11 | Removing and installing glove compartment light switch E26 | 340 |
| 2.12 | Removing and installing driver side switch module | 341 |
| 2.13 | Removing and installing front left window regulator switch E40 | 342 |
| 2.14 | Removing and installing rear left window regulator switch in driver door E53 | 342 |
| 2.15 | Removing and installing rear right window regulator switch in driver door E55 | 342 |
| 2.16 | Removing and installing front right window regulator switch in driver door E81 | 343 |
| 2.17 | Removing and installing childproof lock button E318 | 343 |
| 2.18 | Removing and installing mirror adjustment switch E43 | 343 |
| 2.19 | Removing and installing driver side interior locking button for central locking system E308 | 344 |
| 2.20 | Removing and installing rear window regulator switch E52 / E54 | 345 |
| 2.21 | Removing and installing remote release button for fuel filler flap and rear lid E463 | 346 |
| 2.22 | Removing and installing key-operated switch to block release of rear lid remote E232 | 346 |
| 2.23 | Removing and installing window regulator switch in front passenger door E107 | 347 |
| 2.24 | Removing and installing electromechanical parking brake button E538 | 348 |
| 2.25 | Removing and installing auto-hold button E540 | 350 |
| 2.26 | Removing and installing Tyre Pressure Monitoring System button E226 | 350 |
| 2.27 | Removing and installing TCS and ESP button E256 | 350 |
| 2.28 | Removing and installing shock absorber damping adjustment button E387 | 350 |
| 2.29 | Removing and installing rear roller blind switch E149 | 350 |
| 2.30 | Removing and installing parking aid button E266 | 350 |
| 2.31 | Removing and installing park assist steering button E581 | 350 |
| 2.32 | Removing and installing switch module in centre console EX23 / EX30 | 351 |
| 2.33 | Removing and installing luggage compartment light switch F5 | 353 |
| 2.34 | Removing and installing rear lid locking unit F256 | 354 |
| 2.35 | Removing and installing vanity mirror contact switch F147 / F148 | 354 |
| 2.36 | Removing and installing front interior light button E326 , reading light button E457 / E458 | 355 |
| 2.37 | Removing and installing rear reading light button E454 / E455 | 355 |
| 2.38 | Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360 | 355 |
| 2.39 | Removing and installing bonnet contact switch F266 | 356 |
| 2.40 | Removing and installing garage door operating unit E284 | 357 |
| 3 | Immobiliser | 358 |
| 3.1 | General description | 358 |
| 3.2 | Immobiliser control unit J362 | 359 |
| 3.3 | Immobiliser reader unit D1 | 360 |
| 3.4 | Ignition key | 360 |
| 3.5 | Online system test | 361 |
| 4 | Anti-theft alarm (ATA) | 362 |
| 4.1 | General description | 362 |
| 4.2 | Assembly overview - anti-theft alarm (ATA) | 363 |
| 4.3 | Activating and deactivating anti-theft alarm | 364 |
| 4.4 | Interior monitoring sensor G273 | 365 |
| 4.5 | Interior monitor send and receive module 1 G303 | 365 |
| 4.6 | Vehicle inclination sender G384 | 367 |
| 4.7 | Central locking and anti-theft alarm system aerial R47 | 367 |
| 4.8 | Reading alarm sources of anti-theft alarm | 367 |
| 4.9 | Adapting alarm delay on opening driver door | 368 |
| 4.10 | Adapting sensitivity of interior monitoring system | 368 |



| | | |
|------------------------------|--|------------|
| 4.11 | Adapting sensitivity of inclination sensor | 368 |
| 4.12 | Alarm horn H12 | 369 |
| 5 | Lights and controls in front doors | 372 |
| 5.1 | Components - front door locks | 372 |
| 6 | Lights and controls in rear doors | 373 |
| 6.1 | Components - rear door locks | 373 |
| 7 | Lights and controls in the roof trim | 374 |
| 7.1 | Automatic anti-dazzle interior mirror Y7 | 374 |
| 8 | Lights and controls in the centre console | 375 |
| 8.1 | Removing and installing front ashtray illumination bulb | 375 |
| 8.2 | Removing and installing cigarette lighter U1 | 375 |
| 8.3 | Removing and installing storage compartment illumination bulb L120 | 375 |
| 8.4 | Removing and installing DC/AC converter with socket, 12 V-230 V U13 | 377 |
| 9 | Lane change assist | 380 |
| 9.1 | Removing and installing lane change assist warning lamp in exterior mirror K233 / K234 | 380 |
| 9.2 | Removing and installing lane change assist control unit J769 / J770 | 381 |
| 9.3 | Calibrating lane change assist | 382 |
| 9.4 | Calibrating lane change assist control unit J769 / J770 | 387 |
| 97 - Wiring | 390 | |
| 1 | Vehicle diagnosis, testing and information systems | 390 |
| 2 | Relay carriers, fuse holders, electronics boxes | 391 |
| 2.1 | Removing and installing fuse holder in dash panel | 391 |
| 2.2 | Removing and installing electronics box in dash panel | 392 |
| 2.3 | Relay carrier on left of dash panel | 393 |
| 2.4 | Relay carrier on onboard supply control unit J519 | 395 |
| 2.5 | Removing and installing electronics box on left side of engine compartment | 396 |
| 2.6 | Main fuse box | 400 |
| 3 | Select Control units | 401 |
| 3.1 | On-board supply control unit J519 | 401 |
| 3.2 | Data bus diagnostic interface J533 | 407 |
| 3.3 | Convenience system central control unit J393 | 410 |
| 3.4 | Driver door control unit J386 | 416 |
| 3.5 | Front passenger door control unit J387 | 417 |
| 3.6 | Rear left door control unit J388 | 418 |
| 3.7 | Rear right door control unit J389 | 419 |
| 3.8 | Trailer detector control unit J345 | 419 |
| 4 | Connectors | 423 |
| 4.1 | Repairing electrical wiring harnesses and plug-in connections | 423 |