



Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General information	1
1.2 General repair instructions	4
91 - Communication	8
1 Radio/radio navigation systems R / J503	8
1.1 Components of radio/radio navigation systems R / J503	8
1.2 Overview of fitting locations – radio/radio navigation system R / J503	36
1.3 Removing and installing radio/radio navigation system R / J503	52
1.4 Interface for external multimedia units R215	54
1.5 Removing and installing magnetic field sender for compass G197	56
1.6 Pin assignments	57
2 Sound system	78
2.1 Overview of fitting locations - sound system	78
2.2 Removing and installing amplifier R12 for digital sound package	78
2.3 Removing and installing front bass loudspeakers R21 / R23	82
2.4 Removing and installing rear bass loudspeakers R15 / R17	83
2.5 Removing and installing front treble loudspeakers R20 / R22	84
2.6 Removing and installing rear treble loudspeakers R14 / R16	85
3 Aerial systems	87
3.1 Overview of fitting locations - aerial systems	87
3.2 Removing and installing aerial module R108 / R109	91
3.3 Removing and installing roof aerial RX5	92
4 CD changer R41	94
4.1 General information	94
4.2 Removing and installing CD changer R41	94
5 Telephone system	97
5.1 Components of telephone system	97
5.2 Mobile telephone preparation	98
5.3 Overview of fitting locations - telephone system	101
5.4 Removing and installing telephone microphone R38	103
5.5 Removing and installing telephone bracket	104
5.6 Removing and installing telephone transmitter and receiver unit R36 / J412	107
6 Reversing camera	108
6.1 Components of reversing camera system	108
6.2 Overview of fitting locations - reversing camera system	109
6.3 Removing and installing reversing camera R189	109
6.4 Calibrating reversing camera	110
6.5 Removing and installing reversing camera system control unit J772	115
6.6 Renewing video cable	116
7 Multifunction steering wheel	118
7.1 Components of radio/radio navigation system on multifunction steering wheel R / J503	118
7.2 Removing and installing multifunction buttons E440 / E441	119
8 Connection for external multimedia devices	121
8.1 Components of connection for external multimedia units	121
8.2 Connectors, connection for external multimedia devices	126
8.3 Removing and installing connection for external audio sources R199	129
8.4 Removing and installing interface for external multimedia units R215	130
9 Car-Net	133
9.1 General information	133
9.2 Overview of fitting locations - Car-Net services	133



9.3	Removing and installing emergency call module control unit and communication unit J949	134
9.4	Renewing control unit for emergency call module and communication unit J949	136
9.5	Removing and installing emergency button E276	136