



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Assembly overview – lock carrier	1
1.2 Assembly overview - air deflector elements on lock carrier	2
1.3 Service position	3
1.4 Removing and installing lock carrier	7
2 Wings	10
2.1 Assembly overview - wing	10
2.2 Removing and installing wing	10
2.3 Removing and installing wing bracket	13
3 Bulkhead	14
3.1 Assembly overview - plenum chamber bulkhead	14
3.2 Assembly overview - plenum chamber cover	16
3.3 Removing and installing plenum chamber cover	16
55 - Bonnet, rear lid	20
1 Bonnet	20
1.1 Assembly overview - bonnet	20
1.2 Assembly overview - bonnet lock and release components	22
1.3 Assembly overview - release lever and mounting bracket	23
1.4 Removing and installing bonnet	23
1.5 Removing and installing striker pin	26
1.6 Adjusting bonnet	26
1.7 Removing and installing hinge	29
1.8 Removing and installing insulation	31
1.9 Removing and installing gas strut	33
1.10 Removing and installing bonnet lock and Bowden cable	34
1.11 Removing and installing bonnet release lever	38
2 Rear lid	40
2.1 Assembly overview - rear lid	40
2.2 Assembly overview - rear lid hinge	41
2.3 Rear lid emergency release	42
2.4 Removing and installing rear lid	42
2.5 Adjusting rear lid	44
2.6 Removing and installing hinge	48
2.7 Removing and installing gas strut	51
2.8 Removing and installing operating mechanism	53
2.9 Removing and installing rear lid lock	55
2.10 Removing and installing seal	60
3 Tank flap unit	62
3.1 Assembly overview - tank flap unit	62
3.2 Removing and installing tank flap unit	62
3.3 Removing and installing actuator	64
57 - Front doors, door components, central locking	66
1 Door	66
1.1 Assembly overview - door hinges	66
1.2 Removing and installing door	67
1.3 Adjusting door	69
1.4 Adjusting striker pin	71
2 Components	73
2.1 Assembly overview - components	73



2.2	Assembly overview - insulation	74
2.3	Assembly overview - door handle and door lock	75
2.4	Removing and installing components	76
2.5	Removing and installing door handle	79
2.6	Removing and installing door lock	89
2.7	Removing and installing door seal	92
3	Central locking	99
3.1	Overview of fitting locations - central locking	99
3.2	Assembly overview - ignition key battery	101
3.3	Removing and installing ignition key battery	101
58	Rear doors, door components	103
1	Door	103
1.1	Assembly overview - door hinges	103
1.2	Removing and installing door	104
1.3	Adjusting door	106
1.4	Adjusting striker pin	108
2	Components	111
2.1	Assembly overview - door components	111
2.2	Assembly overview - door handle and door lock	114
2.3	Removing and installing door components	115
2.4	Removing and installing door handle	119
2.5	Removing and installing door lock	129
2.6	Removing and installing door seal	132
60	Sunroof	139
1	Sliding sunroof	139
1.1	Function	139
1.2	Assembly overview - sliding sunroof	139
1.3	Assembly overview - roller sun blind	142
1.4	Assembly overview - seals	143
1.5	Removing and installing sliding/tilting sunroof glass panel	143
1.6	Removing and installing carrier unit	145
1.7	Removing and installing sliding/tilting sunroof automatic preselector	154
1.8	Adjusting glass panel	154
1.9	Removing and installing guide plate	156
1.10	Removing and installing cable	157
1.11	Removing and installing swivel mounting	159
1.12	Removing and installing drive for panorama tilting sunroof glass panel	160
1.13	Removing and installing sliding headliner	162
1.14	Removing and installing panel seal	165
63	Bumpers	167
1	Bumper, front	167
1.1	Assembly overview - front bumper	167
1.2	Removing and installing front bumper	173
1.3	Repairing bumper cover	178
1.4	Installing bracket for parking aid system - vehicles ► 01.2011	178
1.5	Installing bracket for parking aid system - vehicles 01.2011 ►	182
2	Bumper, rear	187
2.1	Assembly overview - rear bumper	187
2.2	Removing and installing rear bumper	194
2.3	Repairing bumper cover	196
2.4	Installing bracket for parking aid system - vehicles ► 01.2011	196
2.5	Installing bracket for parking aid system - vehicles 01.2011 ►	201



64 - Glazing	206
1 Repair instructions	206
1.1 Minimum curing periods for bonded windows	206
1.2 Window repair	207
1.3 Installation instructions for bonded windows	207
1.4 Preparing old undamaged windows for glazing	210
1.5 Preparing new windows for glazing	211
1.6 Preparing body flange for glazing	212
2 Windscreen	214
2.1 Assembly overview - windscreen	214
2.2 Removing and installing windscreen	215
3 Rear windscreen	221
3.1 Assembly overview - rear window	221
3.2 Removing and installing rear window	221
4 Door windows	226
4.1 Assembly overview - front door window	226
4.2 Assembly overview - rear door window	227
4.3 Removing and installing front door window	227
4.4 Removing and installing rear door window	230
4.5 Removing and installing fixed rear door window	232
4.6 Adjusting front door window	234
4.7 Adjusting rear door window	241
4.8 Adjusting fixed rear door window	247
5 Window regulator	249
5.1 Removing and installing front window regulator	249
5.2 Removing and installing front window regulator motor	253
5.3 Removing and installing rear window regulator	253
5.4 Removing and installing rear window regulator motor	257
6 Window channels and seals	259
6.1 Removing and installing front window slot seal	259
6.2 Removing and installing rear window slot strip	260
66 - Exterior equipment	262
1 Radiator grille and front trim	262
1.1 Removing and installing radiator grille up to 01.2011	262
1.2 Removing and installing radiator grille on vehicles from 01.2011	263
2 Spoiler	266
2.1 Assembly overview - spoiler	266
3 Mouldings, trims, extensions	272
3.1 Assembly overview - protective side strips on front and rear door	272
3.2 Assembly overview - side member trim	273
3.3 Assembly overview - trim on rear lid	275
3.4 Assembly overview - wheel arch trims	275
3.5 Removing and installing edge moulding	277
3.6 Removing and installing B-pillar trim	279
3.7 Removing and installing number plate carrier	283
3.8 Removing and installing entry moulding	285
3.9 Removing and installing protective side strip	286
3.10 Removing and installing rear lid trim	289
4 Noise insulation	293
4.1 Assembly overview - short noise insulation	293
4.2 Assembly overview - long noise insulation	294
5 Underbody cover	295



5.1	Assembly overview - underbody cladding	295
5.2	Assembly overview - tunnel cross-piece	295
6	Exterior mirror	297
6.1	Assembly overview - exterior mirror	297
6.2	Removing and installing mirror glass	297
6.3	Removing and installing mirror cover	300
6.4	Removing and installing exterior mirror	304
7	Wheel housing liner	306
7.1	Assembly overview - front wheel housing liner	306
7.2	Assembly overview - rear wheel housing liner	307
7.3	Removing and installing front wheel housing liner	307
7.4	Removing and installing rear wheel housing liner	309
8	Lettering and emblems	311
8.1	Dimensions for lettering	311
8.2	Removing and installing emblems	316
9	Special add-on parts	320
9.1	Assembly overview – special add-on parts	320
10	Towing bracket	321
10.1	Assembly overview - towing bracket	321