



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Type plate	1
1.3 Vehicle data sticker	2
2 Safety information	3
3 Moulded foam inserts	4
4 Galvanised body parts	5
4.1 Vehicle body	5
4.2 High- and higher-strength body panels	6
4.3 Hot-formed body panels	6
5 Laser welding	8
6 Body panel gaps/shut lines	9
6.1 Body, front	9
6.2 Body, centre	9
6.3 Body, rear	10
7 Body dimensions	11
7.1 Body, front	11
7.2 Body, centre	15
7.3 Body, rear	23
7.4 Floor panel, front	25
7.5 Floor panel, centre	27
7.6 Floor panel, rear	28
8 Alignment bracket set	30
8.1 Overview	30
9 Portal gauge	31
9.1 Overview	31
50 - Body - front	33
1 Renewing right bracket	33
1.1 Tools	33
1.2 Removing	33
1.3 Installing	35
2 Renewing left bracket	37
2.1 Tools	37
2.2 Removing	37
2.3 Installing	40
3 Renewing retaining bracket (for subframe)	42
3.1 Tools	42
3.2 Removing	42
3.3 Installing	44
4 Renewing bumper bracket	46
4.1 Tools	47
4.2 Removing	47
4.3 Installing	48
5 Renewing upper wheel housing longitudinal member	50
5.1 Tools	51
5.2 Removing	51
5.3 Installing	53
6 Renewing front wheel housing	57
6.1 Tools	58



6.2	Removing	58
6.3	Installing	60
7	Renewing front longitudinal member	69
7.1	Tools	70
7.2	Removing	70
7.3	Installing	73
8	Renewing front longitudinal member - part section	80
8.1	Tools	81
8.2	Removing	81
8.3	Installing	84
9	Repairing threads for securing subframe (suspension subframe)	93
9.1	Tools	94
9.2	Contents of thread repair kit	95
9.3	Repairing thread	96
51 - Body - centre		99
1	Renewing roof - vehicles with no panorama tilting sunroof	99
1.1	Tools	100
1.2	Removing	101
1.3	Installing	104
2	Renewing roof - vehicles with panorama tilting sunroof	116
2.1	Tools	117
2.2	Removing	118
2.3	Installing	121
3	Renewing roof side member	133
3.1	Tools	134
3.2	Removing	134
3.3	Installing	136
4	Renewing front cross member for roof - vehicles with no panorama tilting sunroof	142
4.1	Tools	143
4.2	Removing	143
4.3	Installing	144
5	Renewing front cross member for roof - vehicles with panorama tilting sunroof	146
5.1	Tools	147
5.2	Removing	147
5.3	Installing	148
6	Renewing roof reinforcement, vehicles with panorama tilting sunroof	150
6.1	Tools	151
6.2	Removing	151
6.3	Installing	152
7	Renewing rear roof cross member	155
7.1	Tools	156
7.2	Removing	156
7.3	Installing	157
8	Renewing A-pillar	159
8.1	Tools	160
8.2	Removing	160
8.3	Installing	162
9	Renewing A-pillar reinforcement	168
9.1	Tools	169
9.2	Removing	169
9.3	Installing	171
10	Renewing B-pillar	176
10.1	Tools	176



10.2	Removing	176
10.3	Installing	180
11	Renewing inner B-pillar	187
11.1	Tools	188
11.2	Removing	188
11.3	Installing	189
12	Renewing B-pillar reinforcement	191
12.1	Tools	192
12.2	Removing	192
12.3	Installing	196
13	Renewing side member	206
13.1	Tools	207
13.2	Removing	207
13.3	Installing	208
14	Renewing front side member reinforcement	215
14.1	Tools	216
14.2	Removing	216
14.3	Installing	217
15	Renewing rear side member reinforcement	222
15.1	Tools	223
15.2	Removing	223
15.3	Installing	224
53 - Body - rear		227
1	Renewing cross panel	227
1.1	Tools	228
1.2	Removing	228
1.3	Installing	232
2	Renewing lock carrier	236
2.1	Tools	236
2.2	Removing	236
2.3	Installing	237
3	Renewing tail light mounting	239
3.1	Tools	239
3.2	Removing	239
3.3	Installing	241
4	Renewing rear longitudinal member - part section	245
4.1	Tools	246
4.2	Removing	246
4.3	Installing	248
5	Renewing side panel - part section	253
5.1	Tools	254
5.2	Removing	254
5.3	Installing	256
6	Renewing outer wheel housing liner	261
6.1	Tools	262
6.2	Removing	262
6.3	Installing	265
7	Renewing spare wheel well	269
7.1	Removing	270
7.2	Installing	271

