



Contents

00 - Technical data	1
1 General information	1
1.1 Starting conditions for auxiliary/supplementary heater Thermo Top V/fleece	1
1.2 Notes for vehicles with a start/stop system	2
1.3 Rules for cleanliness when working on auxiliary/supplementary heater Thermo Top V/fleece and fuel system	2
1.4 Type plates	3
2 Safety information	6
2.1 Safety precautions when working on vehicles equipped with auxiliary/supplementary heater Thermo Top V/fleece	6
2.2 Safety measures when working on vehicles with a start/stop system	6
2.3 Safety precautions during work on fuel system	7
3 Repair instructions	8
3.1 Notes on general repairs to vehicles equipped with auxiliary/supplementary heater Thermo Top V/fleece	8
82 - Supplementary heating	9
1 Auxiliary/supplementary heater Thermo Top V/fleece	9
1.1 Overview of fitting locations - auxiliary/supplementary heater	9
1.2 Assembly overview - auxiliary/supplementary heater, exterior	12
1.3 Assembly overview - auxiliary/supplementary heater, interior	13
1.4 Removing and installing auxiliary/supplementary heater Thermo Top V/fleece	16
1.5 Dismantling and assembling auxiliary/supplementary heater Thermo Top V/fleece	20
1.6 Removing and installing air intake silencer	21
1.7 Removing and installing circulation pump V55	22
1.8 Removing and installing silencer with bracket	23
1.9 Removing and installing exhaust system	24
1.10 Removing and installing auxiliary/supplementary heater bracket	25
1.11 Removing and installing cover	26
1.12 Removing and installing auxiliary heater control unit J364	26
1.13 Removing and installing glow plug with flame monitor Q8	27
1.14 Removing and installing temperature sensor G18 and overheating sensor G189	29
1.15 Dismantling and assembling burner unit	29
1.16 Connector pin assignment for auxiliary/supplementary heater Thermo Top V/fleece	30
2 Coolant circuit with auxiliary/supplementary heater Thermo Top V/fleece	38
2.1 Connection diagram - coolant hoses	38
2.2 Removing and installing heater coolant shut-off valve	52
3 Fuel supply system	54
3.1 Overview of fitting locations - fuel supply system	54
3.2 Removing and installing metering pump V54	56
3.3 Checking fuel delivery rate	60
4 Regulation of auxiliary/supplementary heater Thermo Top V/fleece	63
4.1 Functional description	63
5 Other controlling and regulating components	67
5.1 Removing and installing ambient temperature sensor G17	67
5.2 Removing and installing remote control receiver for auxiliary coolant heater R149 for auxiliary/supplementary heater Thermo Top V/fleece	67
5.3 Functional description of remote control for auxiliary/supplementary heater Thermo Top V/fleece	69

