



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 General repair instructions</b>	<b>1</b>
1.1 Tools	1
1.2 Gearbox	1
1.3 Overview	1
1.4 Seals	2
1.5 DSG® oil	3
1.6 Oil filter change - »Yes or no?«	3
1.7 Oil drain and inspection plug A	3
1.8 Nuts and bolts	4
1.9 Electrical components	4
<b>2 Fault finding</b>	<b>5</b>
2.1 General notes on fault finding	5
2.2 Useful information about the "behaviour of the control unit in the event of a gearbox fault"	5
2.3 Special notes on fault finding	6
<b>3 Identification of gearbox</b>	<b>8</b>
3.1 Reading gearbox code letters	8
<b>4 Code - engine allocation</b>	<b>10</b>
4.1 Golf Plus 2009 ▶	10
4.2 Golf Plus 2005 ▶	10
4.3 Golf 2009 ▶	11
4.4 Scirocco 2009 ▶	11
4.5 Golf 2004 ▶	11
4.6 Touran 2003 ▶	12
4.7 Passat 2006 ▶	13
4.8 Eos 2006 ▶	13
4.9 Passat CC 2009 ▶; CC 2010 ▶	14
4.10 Sharan 2011 ▶	14
<b>5 Capacity</b>	<b>15</b>
<b>30 - Clutch</b>	<b>16</b>
<b>1 Clutch</b>	<b>16</b>
1.1 Assembly overview - dual clutch	16
1.2 Removing and installing clutch end cover	18
1.3 Removing dual clutch	24
1.4 Installing dual clutch	25
<b>34 - Controls, housing</b>	<b>31</b>
<b>1 Electrical and electronic components and their locations DSG®</b>	<b>31</b>
1.1 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox installed)	31
1.2 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox removed)	40
1.3 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	47
<b>2 Removing and installing gear oil cooler</b>	<b>48</b>
<b>3 Removing and installing oil pump</b>	<b>51</b>
<b>4 Renewing selector shaft lever oil seal with gearbox removed</b>	<b>55</b>
<b>5 Emergency release of selector lever</b>	<b>57</b>
<b>6 Removing and installing selector lever handle</b>	<b>58</b>
6.1 Moving push-button in the handle to installation position	60



<b>7</b>	<b>Selector mechanism up to 02.2009</b> .....	<b>62</b>
7.1	Overview of selector mechanism up to 02.2009 .....	62
7.2	Removing and installing selector lever cable up to 02.2009 .....	63
7.3	Checking selector lever cable .....	70
7.4	Adjusting selector lever cable .....	70
<b>8</b>	<b>Checking selector mechanism</b> .....	<b>72</b>
8.1	Selector lever in "P" position and ignition switched on .....	72
8.2	Selector lever in "N" position and ignition switched on .....	72
8.3	Selector lever in position "Tiptronic" .....	72
8.4	Ignition and light switched on .....	72
8.5	Selector lever position indicator .....	72
<b>9</b>	<b>Selector mechanism from 03.2009 onwards</b> .....	<b>73</b>
9.1	Overview of selector mechanism in vehicles from 03.2009 onwards .....	73
9.2	Removing and installing selector mechanism, from 03.2009 .....	74
<b>10</b>	<b>Removing and installing gearbox</b> .....	<b>78</b>
10.1	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with 2.0 l petrol engine .....	78
10.2	Removing gearbox, Golf 2009 ▶ , Golf Plus 2009 ▶ with 2.0 l petrol engine .....	85
10.3	Removing gearbox, Golf Plus 2005 ▶ with 1.4 l petrol engine .....	94
10.4	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ diesel engine .....	101
10.5	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with diesel engine, all-wheel drive ..	111
10.6	Removing gearbox, Golf Plus 2009 ▶ with 2.0 l diesel engine .....	120
10.7	Removing gearbox, Golf 2009 ▶ 2.0 l diesel engine .....	128
10.8	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with 3.6 l - V6 engine (all-wheel drive) .....	135
10.9	Removing gearbox, Golf 2004 ▶ with 1.9 l and 2.0 l diesel engine .....	142
10.10	Removing gearbox, Golf 2004 ▶ with 125 kW - 2.0 l diesel engine .....	149
10.11	Removing gearbox, Eos 2006 ▶ , with 3.2 and 3.6 l - V6 engine .....	155
10.12	Removing gearbox, Golf 2004 ▶ with 1.4 l petrol engine .....	162
10.13	Removing gearbox, Golf 2004 ▶ with 2.0 l petrol engine .....	169
10.14	Removing gearbox, Golf 2004 ▶ , with 3.2 l - V6 engine (R32 all-wheel drive) .....	174
10.15	Removing gearbox, Golf Plus 2005 ▶ with 1.9 l and 2.0 l diesel engine, with 2.0 l petrol engine .....	183
10.16	Removing gearbox, Eos 2006 ▶ with 2.0 l petrol engine .....	190
10.17	Removing gearbox, Eos 2005 ▶ with 2.0 l diesel engine .....	197
10.18	Removing gearbox, Touran 2003 ▶ .....	204
10.19	Removing gearbox, Passat 2006 ▶ with 2.0 l diesel engine .....	212
10.20	Removing gearbox, Passat 2006 ▶ with 2.0 l petrol engine .....	220
10.21	Removing gearbox, Passat 2006 ▶ with 3.6 l - V6 engine (all-wheel drive) .....	225
10.22	Removing gearbox, Scirocco 2009 ▶ with 2.0 l diesel engine .....	231
10.23	Removing gearbox, Scirocco 2009 ▶ with 2.0 l petrol engine .....	240
10.24	Removing gearbox, Sharan 2011 ▶ with 2.0 l diesel engine .....	249
10.25	Removing gearbox, Sharan 2011 ▶ with 1.8 l and 2.0 l petrol engine .....	257
10.26	Removing gearbox, Sharan 2011 ▶ with 1.4 l petrol engine .....	266
10.27	Install gearbox .....	273
<b>11</b>	<b>Torque settings »gearbox to engine«</b> .....	<b>275</b>
11.1	Torque settings (ELSA) .....	275
<b>12</b>	<b>Transporting gearbox and securing to assembly stand</b> .....	<b>283</b>
<b>13</b>	<b>Removing and installing bevel box, Golf 2004 ▶ and Passat 2006 ▶</b> .....	<b>284</b>
<b>14</b>	<b>Removing and installing bevel box, Passat CC 2009 ▶ , CC 2010 ▶ with diesel engine</b> ..	<b>289</b>
14.1	Specified torques .....	295
<b>15</b>	<b>Removing and installing bevel box, Passat CC 2009 ▶ , CC 2010 ▶ with 3.6 l V6 engine</b> ..	<b>297</b>
<b>16</b>	<b>Oil and oil filter</b> .....	<b>301</b>
16.1	Oil filter: renewing .....	301
16.2	Checking oil level and topping up .....	302



16.3	Draining and filling oil	305
<b>35</b>	<b>- Gears, shafts</b>	<b>309</b>
1	Currently, no repairs can be made to gears and shafts	309
<b>39</b>	<b>- Final drive - differential</b>	<b>310</b>
1	<b>Overview - seals</b>	<b>310</b>
1.1	Renewing seals for right flange shaft or stub shaft - front-wheel drive	311
2	<b>Renewing oil seal for left flange shaft - front and all-wheel drive</b>	<b>313</b>
2.1	Renewing oil seal for right flange shaft - all-wheel drive	314
2.2	Dismantling and assembling flange shaft	316
3	<b>Renewing oil seal for propshaft drive flange at bevel box</b>	<b>318</b>
4	<b>Assembly overview - Flange shafts and seals on bevel box</b>	<b>324</b>
4.1	Renewing seal on gearbox between bevel box and gearbox	325
4.2	Removing and installing right flange shaft	326
4.3	Renewing seal for right flange shaft on outside of bevel box	328
4.4	Renewing needle bearing (polygon bearing) for right output shaft drive flange	329
4.5	Renewing seal on bevel box between gearbox and bevel box	331
5	<b>Checking and topping up gear oil in bevel box</b>	<b>333</b>
5.1	Checking gear oil in bevel box	333
5.2	Topping up gear oil in bevel box	334

