



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Engine number	1
2 Engine data	2
<b>10 - Removing and installing engine</b>	<b>4</b>
1 Removing and installing engine	4
1.1 Removing engine	5
1.2 Separating gearbox from engine and assembling	19
1.3 Securing engine to assembly stand	22
1.4 Installing engine	23
2 Assembly mountings	26
2.1 Assembly overview - assembly mountings (Golf, Eos, Passat, CC, Scirocco)	26
2.2 Assembly overview - assembly mountings (Tiguan)	28
2.3 Checking adjustment of assembly mountings	30
2.4 Adjusting assembly mountings (Passat 2006 ▶, CC)	30
2.5 Adjusting assembly mountings (Golf, Eos, Scirocco)	35
2.6 Adjusting assembly mounting (Tiguan)	40
<b>13 - Crankshaft group</b>	<b>45</b>
1 Cylinder block (pulley end)	45
1.1 Assembly overview - poly V-belt drive	45
1.2 Removing and installing poly-V belt	48
1.3 Removing and installing tensioner for poly V-belt (Passat 2006 ▶, CC)	49
1.4 Removing and installing tensioner for poly V-belt (Golf, Eos, Scirocco)	54
1.5 Removing and installing tensioner for poly V-belt (Tiguan)	59
1.6 Removing and installing bracket for ancillaries	63
1.7 Removing and installing vibration damper	65
1.8 Renewing oil seal for vibration damper	73
2 Cylinder block, gearbox end	76
2.1 Assembly overview - sealing flange on gearbox side and dual-mass flywheel/drive plate	76
2.2 Removing and installing dual-mass flywheel	77
2.3 Removing and installing drive plate	79
2.4 Removing and installing sealing flange on gearbox side	81
3 Crankshaft	90
3.1 Assembly overview - crankshaft	90
3.2 Pulling needle bearing out of and driving into crankshaft	95
3.3 Crankshaft dimensions	97
3.4 Measuring axial clearance of crankshaft	97
3.5 Measuring radial clearance of crankshaft	98
4 Pistons and conrods	100
4.1 Assembly overview - pistons and conrods	100
4.2 Removing and installing pistons	104
4.3 Checking pistons and cylinder bores	106
4.4 Separating new conrod	108
4.5 Checking radial clearance of conrods	109
<b>15 - Cylinder head, valve gear</b>	<b>110</b>
1 Chain drive	110
1.1 Assembly overview - timing chain covers	110
1.2 Removing and installing camshaft control valve 1 N205	113
1.3 Removing and installing upper timing chain cover	113
1.4 Removing and installing lower timing chain cover (Passat, CC)	116



1.5	Removing and installing lower timing chain cover (Golf, Eos, Scirocco)	124
1.6	Removing and installing bottom timing chain cover (Tiguan)	133
1.7	Camshaft timing chain - exploded view	141
1.8	Removing and installing camshaft timing chain	143
1.9	Assembly overview - drive chain for balance shaft	160
1.10	Removing and installing drive chain for balance shaft	163
1.11	Removing and installing inlet side balance shaft	163
1.12	Removing and installing exhaust side balance shaft	168
1.13	Checking valve timing	171
<b>2</b>	<b>Cylinder head</b>	<b>174</b>
2.1	Assembly overview - cylinder head	174
2.2	Renewing oil non-return valve in cylinder head	178
2.3	Removing and installing engine cover	179
2.4	Removing and installing cylinder head	180
2.5	Checking compression	227
2.6	Removing and installing vacuum pump	229
<b>3</b>	<b>Valve gear</b>	<b>231</b>
3.1	Assembly overview - valve gear	231
3.2	Removing and installing camshaft	234
3.3	Checking axial clearance of camshafts	255
3.4	Renewing valve stem seals	256
3.5	Checking valve guides	267
<b>17</b>	<b>Lubrication</b>	<b>269</b>
<b>1</b>	<b>Sump and oil pump</b>	<b>269</b>
1.1	Assembly overview - sump, oil pump	269
1.2	Removing and installing coarse oil separator	272
1.3	Removing and installing lower part of sump	273
1.4	Removing and installing oil pump	276
1.5	Removing and installing upper part of sump	279
1.6	Removing and installing oil pressure control valve N428 (engine codes CCZA, CCZB, CCZC, CCZD, CDAA, CDAB)	284
<b>2</b>	<b>Engine oil:</b>	<b>286</b>
<b>3</b>	<b>Oil filter, engine oil cooler and oil pressure switch (engine codes CAWA, CAWB, CBFA, CCTA, CCTB, BZB, CGYA)</b>	<b>288</b>
3.1	Assembly overview - oil filter, engine oil cooler and oil pressure switch F1	288
3.2	Removing and installing engine oil cooler	289
3.3	Checking oil pressure and oil pressure switch	291
<b>4</b>	<b>Oil filter, engine oil cooler and oil pressure switch (engine codes CCZA, CCZB, CCZC, CCZD, CDAA, CDAB)</b>	<b>294</b>
4.1	Assembly overview - oil filter, engine oil cooler	294
4.2	Removing and installing engine oil cooler	296
4.3	Removing and installing oil pressure switch F1	297
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	299
4.5	Checking oil pressure and oil pressure switch	300
<b>19</b>	<b>Cooling</b>	<b>305</b>
<b>1</b>	<b>Cooling system</b>	<b>305</b>
1.1	Coolant hose connection diagram	305
1.2	Draining and adding coolant	307
1.3	Checking cooling system for leaks	315
<b>2</b>	<b>Coolant pump, thermostat, coolant pipes</b>	<b>319</b>
2.1	Assembly overview - coolant pump, thermostat	319
2.2	Removing and installing coolant pump with thermostat housing	322
2.3	Detaching coolant pump from thermostat housing/attaching coolant pump to thermostat housing	325



2.4	Removing and installing toothed belt for coolant pump	328
2.5	Renewing oil seal for coolant pump drive	331
2.6	Removing and installing thermostat	333
2.7	Removing and installing coolant temperature sender G62	336
2.8	Assembly overview - coolant pipes	339
2.9	Removing and installing front coolant pipes	340
2.10	Removing and installing small coolant pipe	344
2.11	Continued coolant circulation pump V51 - exploded view	345
2.12	Removing and installing continued coolant circulation pump V51	346
<b>3</b>	<b>Radiator and radiator fans</b>	<b>348</b>
3.1	Assembly overview - radiator, fan cowl and radiator fan (Passat, CC, Golf, Eos, Scirocco)	348
3.2	Installing radiator identification sensor G611, engine code CBFA	349
3.3	Assembly overview - radiator, radiator cowl and radiator fan (Tiguan)	350
3.4	Removing and installing radiator cowl	352
3.5	Removing and installing radiator fan V7 and radiator fan 2 V177	354
3.6	Removing and installing radiator (Passat, CC, Golf, Eos, Scirocco)	354
3.7	Removing and installing radiator (Tiguan)	355
<b>20</b>	<b>Fuel supply system</b>	<b>358</b>
<b>1</b>	<b>Safety precautions</b>	<b>358</b>
1.1	Safety regulations for working on fuel supply	358
<b>2</b>	<b>Rules for cleanliness</b>	<b>360</b>
<b>3</b>	<b>Fuel tank (Passat, CC)</b>	<b>361</b>
3.1	Assembly overview - fuel tank (engine codes BZB, CAWA, CAWB, CGYA, CCZA, CCZB, CDAA, CDAB)	361
3.2	Assembly overview - fuel tank (engine codes CBFA, CCTA, CCTB)	363
3.3	Emptying fuel tank	365
3.4	Removing and installing fuel tank	370
<b>4</b>	<b>Fuel tank (Golf, Scirocco)</b>	<b>376</b>
4.1	Assembly overview - fuel tank (engine codes BZB, CAWA, CAWB, CGYA, CCZA, CCZB, CDAA)	376
4.2	Assembly overview - fuel tank (engine codes CBFA, CCTA, CCTB)	378
4.3	Draining fuel tank (engine codes BZB, CAWA, CAWB, CGYA, CCZA, CCZB, CDAA)	381
4.4	Emptying fuel tank (engine codes CBFA, CCTA, CCTB)	388
4.5	Removing and installing fuel tank	390
<b>5</b>	<b>Fuel tank (Tiguan)</b>	<b>394</b>
5.1	Assembly overview - fuel tank	394
5.2	Emptying fuel tank	397
5.3	Removing and installing fuel tank	401
<b>6</b>	<b>Fuel tank (Eos)</b>	<b>407</b>
6.1	Assembly overview - fuel tank (engine codes CAWA, CAWB, CCZA, CCZB)	407
6.2	Assembly overview - fuel tank (engine codes CBFA, CCTA, CCTB)	410
6.3	Emptying fuel tank	413
6.4	Removing and installing fuel tank	419
<b>7</b>	<b>Repairing fuel supply (Passat, CC)</b>	<b>423</b>
7.1	Removing and installing fuel delivery unit	423
7.2	Removing and installing fuel gauge sender G	428
7.3	Checking fuel pump	429
<b>8</b>	<b>Repairing fuel supply system (Golf, Eos, Scirocco)</b>	<b>451</b>
8.1	Removing and installing fuel delivery unit	451
8.2	Removing and installing fuel gauge sender G	455
8.3	Checking fuel pump G6	456
<b>9</b>	<b>Repairing fuel supply (Tiguan)</b>	<b>482</b>
9.1	Removing and installing fuel delivery unit	482
9.2	Removing and installing fuel gauge sender G	487



9.3	Removing and installing suction-jet pump, fuel filter and pressure limitation valve	488
9.4	Removing and installing fuel gauge sender 2 G169	491
9.5	Removing and installing fuel pump control unit J538	492
9.6	Checking fuel pump	495
<b>10</b>	<b>Electronic power control (EPC)</b>	<b>514</b>
10.1	Assembly overview - accelerator module	514
10.2	Removing and installing accelerator pedal module	514
<b>11</b>	<b>Activated charcoal filter system (Passat, CC, Tiguan)</b>	<b>518</b>
11.1	Assembly overview - activated charcoal filter system (engine codes BZB, CAWA, CAWB, CGYA, CCZA, CCZB, CCZC, CCZD, CDAA, CDAB)	518
11.2	Assembly overview - activated charcoal filter system (engine codes CBFA, CCTA, CCTB)	519
11.3	Checking fuel tank breather (engine codes BZB, CAWA, CAWB, CGYA, CCZA, CCZB, CCZC, CCZD, CDAA, CDAB)	521
11.4	Check fuel system for leaks (engine codes CBFA, CCTA, CCTB)	523
<b>12</b>	<b>Activated charcoal filter system (Golf, Eos, Scirocco with engine codes CAWA, CAWB, BZB, CGYA, CCZA, CCZB, CDAA)</b>	<b>533</b>
12.1	Assembly overview - activated charcoal filter system	533
12.2	Checking fuel tank breather	534
<b>13</b>	<b>Activated charcoal filter system (Golf, Eos with engine code CBFA, CCTA, CCTB)</b>	<b>537</b>
13.1	Overview of activated charcoal filter system	537
13.2	Assembly overview - activated charcoal filter system (Golf)	539
13.3	Assembly overview - activated charcoal filter system (Eos)	540
13.4	Removing and installing activated charcoal filter	541
13.5	Removing and installing fuel system diagnostic pump V144 (Golf)	543
13.6	Removing and installing fuel system diagnostic pump V144 (Eos)	544
13.7	Checking fuel system for leaks	545
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>556</b>
<b>1</b>	<b>Turbocharger</b>	<b>556</b>
1.1	Assembly overview - turbocharger	556
1.2	Fitting hose connections with plug-in connectors	564
1.3	Removing and installing turbocharger	565
1.4	Checking vacuum unit for turbocharger	572
1.5	Adjusting turbocharger vacuum unit (engine codes BZB, CGYA, CDAA, CDAB)	574
1.6	Removing and installing vacuum unit for turbocharger	578
<b>2</b>	<b>Charge air system</b>	<b>580</b>
2.1	Assembly overview - charge air cooling (Passat, CC, Tiguan, Eos)	580
2.2	Assembly overview - charge air cooler (Golf, Scirocco)	581
2.3	Assembly overview - sound generator (Golf, Scirocco)	583
2.4	Actuator for structure-borne sound R214 and control unit for structure-borne sound J869	583
2.5	Turbocharging - overview	585
2.6	Removing and installing charge air cooler (Golf, Eos)	586
2.7	Removing and installing charge air cooler (Passat, CC, Scirocco)	589
2.8	Removing and installing charge air cooler, Tiguan	590
2.9	Removing and installing charge air duct to sound generator (Golf, Scirocco)	591
2.10	Checking charge air system for leaks	593
<b>24</b>	<b>Mixture preparation - injection</b>	<b>596</b>
<b>1</b>	<b>Safety precautions and rules for cleanliness</b>	<b>596</b>
1.1	General information on self-diagnosis	596
<b>2</b>	<b>Injection system</b>	<b>597</b>
2.1	Technical data	597
2.2	Overview of fitting locations	597
2.3	Assembly overview - air filter	603
2.4	Removing and installing air filter housing	605



2.5	Removing and installing air filter element	606
2.6	Removing and installing air mass meter G70	607
2.7	Assembly overview - intake manifold	608
2.8	Assembly overview - fuel rail	610
2.9	Removing and installing intake manifold with fuel rail	612
2.10	Removing and installing injectors	621
2.11	Renewing Teflon seal on injector	625
2.12	Cleaning injectors	628
2.13	Removing and installing fuel pressure sender G247	629
2.14	Removing and installing throttle valve module J338	631
2.15	Cleaning throttle valve module J338	632
2.16	Assembly overview - high-pressure pump with fuel pressure regulating valve N276	634
2.17	Removing and installing high-pressure pump	636
<b>3</b>	<b>Checking components</b>	<b>639</b>
3.1	Checking fuel pressure sender G247	639
3.2	Checking intake manifold change-over	642
<b>4</b>	<b>Engine control unit J623 (Passat, CC up to 11/10)</b>	<b>645</b>
4.1	Removing and installing engine control unit	645
4.2	Removing and installing engine control unit with protective housing	646
<b>5</b>	<b>Engine control unit J623 (Golf, Eos to 11/08)</b>	<b>649</b>
5.1	Removing and installing engine control unit	649
5.2	Removing and installing engine control unit with protective housing	649
<b>6</b>	<b>Engine control unit J623 (Golf, Eos, Scirocco from 11/08; CC from 11/10)</b>	<b>654</b>
6.1	Removing and installing engine control unit	654
6.2	Removing and installing engine control unit with protective housing	656
<b>7</b>	<b>Engine control unit J623 (Tiguan)</b>	<b>660</b>
7.1	Removing and installing engine control unit	660
7.2	Removing and installing engine control unit with protective housing	661
<b>8</b>	<b>Engine control unit J623 (Scirocco to 11/08)</b>	<b>664</b>
8.1	Removing and installing engine control unit	664
8.2	Removing and installing engine control unit with protective housing	665
<b>26</b>	<b>Exhaust system</b>	<b>668</b>
<b>1</b>	<b>Exhaust system (Passat, CC)</b>	<b>668</b>
1.1	Assembly overview - exhaust system (engine codes BZB, CAWA, CAWB, CGYA)	668
1.2	Assembly overview - exhaust system (engine codes CCTA, CCTB, CCZA, CDAA, CDAB)	670
1.3	Assembly overview - exhaust system (engine code CBFA)	672
1.4	Separating centre and rear silencers	674
1.5	Aligning exhaust system free of stress	676
1.6	Installation position and specified torque of clamp	677
1.7	Removing and installing catalytic converters with front exhaust pipe	679
1.8	Checking exhaust system for leaks	682
<b>2</b>	<b>Exhaust system (Golf, Eos, Scirocco)</b>	<b>683</b>
2.1	Assembly overview - exhaust system (engine code CAWB)	683
2.2	Assembly overview - exhaust system (Golf 2004 ►, Eos, Scirocco, engine codes CCTA, CCZA, CCZB)	685
2.3	Assembly overview - exhaust system (engine code CBFA)	687
2.4	Assembly overview - exhaust system (Golf 2009►, engine codes CCZA, CCZB)	689
2.5	Assembly overview - exhaust system (Golf 2009 ►, engine codes CCTA, CDAA)	691
2.6	Separating centre and rear silencers	693
2.7	Aligning exhaust system free of stress	695
2.8	Installation position and specified torque of clamp	696
2.9	Removing and installing catalytic converters with front exhaust pipe	697
2.10	Checking exhaust system for leaks	700
<b>3</b>	<b>Exhaust system (Tiguan)</b>	<b>701</b>



3.1	Assembly overview – exhaust system (engine codes CCTA, CCTB, CCZA, CCZB, CCZC, CCZD) .....	701
3.2	Assembly overview - exhaust system (engine codes CAWB, CCZA) .....	703
3.3	Separating centre and rear silencers .....	705
3.4	Aligning exhaust system free of stress .....	706
3.5	Removing and installing catalytic converters with front exhaust pipe .....	708
3.6	Installation position and specified torque of clamp .....	713
3.7	Checking exhaust system for leaks .....	714
<b>4</b>	<b>Secondary air system - engine code CBFA .....</b>	<b>715</b>
4.1	Assembly overview - secondary air system .....	715
4.2	Removing and installing secondary air pump motor V101 .....	715
4.3	Removing and installing secondary air inlet valve N112 .....	716
<b>28</b>	<b>- Ignition system .....</b>	<b>718</b>
<b>1</b>	<b>Repairing ignition system .....</b>	<b>718</b>
1.1	General notes on ignition system .....	718
1.2	Safety precautions .....	718
1.3	Assembly overview - ignition system .....	719
1.4	Removing and installing ignition coils with output stage .....	719
1.5	Removing and installing knock sensor 1 G61 .....	721
1.6	Removing and installing engine speed sender G28 .....	722
1.7	Test data, spark plugs .....	723