



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>3</b>
2.1 Safety regulations for working on fuel supply	3
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Safety measures when working on vehicles with a start/stop system	4
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the SCR system	4
2.6 Safety precautions when working on exhaust system	5
<b>3 Repair instructions</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	8
3.3 Checking vacuum system	8
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing and installing motor</b>	<b>9</b>
1.1 Removing motor	9
1.2 Separating engine and gearbox	33
1.3 Securing engine on engine and gearbox support	38
1.4 Installing engine	40
<b>2 Assembly mountings</b>	<b>44</b>
2.1 Assembly overview - assembly mountings	44
2.2 Supporting engine in installation position	46
2.3 Adjusting assembly mountings	62
<b>3 Engine cover panel</b>	<b>72</b>
3.1 Removing and installing engine cover	72
<b>13 - Crankshaft group</b>	<b>74</b>
<b>1 Cylinder block (pulley end)</b>	<b>74</b>
1.1 Assembly overview - poly V-belt drive	74
1.2 Removing and installing poly-V belt	78
1.3 Removing and installing tensioner for poly V-belt	83
1.4 Removing and installing bracket for ancillaries	84
1.5 Removing and installing engine bracket	86
1.6 Assembly overview - cylinder block (pulley end)	102
1.7 Renewing crankshaft oil seal - belt pulley end	105
1.8 Removing and installing sealing flange on pulley end	108
<b>2 Cylinder block, gearbox end</b>	<b>113</b>
2.1 Assembly overview - cylinder block, gearbox end	113
2.2 Removing and installing flywheel	114
2.3 Removing and installing sealing flange on gearbox side	116
<b>3 Crankshaft</b>	<b>127</b>
3.1 Assembly overview - crankshaft	127
3.2 Renewing needle bearing in crankshaft	128
3.3 Crankshaft dimensions	130
<b>4 Pistons and conrods</b>	<b>131</b>
4.1 Assembly overview - pistons and conrods	131
4.2 Separating new conrod	136
4.3 Measuring piston projection at TDC	137
4.4 Checking radial clearance of conrods	139



<b>15 - Cylinder head, valve gear</b> .....	<b>140</b>
<b>1 Cylinder head</b> .....	<b>140</b>
1.1 Assembly overview - cylinder head .....	140
1.2 Removing and installing cylinder head .....	144
1.3 Removing and installing cylinder head cover .....	155
1.4 Assembly overview - cylinder head cover .....	159
1.5 Removing and installing vacuum pump .....	161
1.6 Checking compression .....	162
<b>2 Toothed belt drive</b> .....	<b>164</b>
2.1 Assembly overview - toothed belt .....	164
2.2 Removing and installing toothed belt .....	166
<b>3 Valve gear</b> .....	<b>188</b>
3.1 Assembly overview - valve gear .....	188
3.2 Measuring axial play of camshaft .....	190
3.3 Measuring radial play of camshaft .....	191
3.4 Removing and installing camshaft .....	192
3.5 Removing and installing camshaft oil seal .....	201
3.6 Checking hydraulic compensation elements .....	206
3.7 Removing and installing valve stem seals .....	207
<b>4 Inlet and exhaust valves</b> .....	<b>216</b>
4.1 Valve dimensions .....	216
4.2 Reworking valve seats .....	216
4.3 Checking valve guides .....	216
4.4 Checking valves .....	218
<b>17 - Lubrication</b> .....	<b>219</b>
<b>1 Sump, oil pump</b> .....	<b>219</b>
1.1 Assembly overview - sump/oil pump .....	219
1.2 Removing and installing sump .....	225
1.3 Removing and installing oil pump .....	230
1.4 Removing and installing oil level and oil temperature sender .....	233
1.5 Engine oil: .....	234
<b>2 Engine oil cooler</b> .....	<b>235</b>
2.1 Assembly overview - engine oil cooler .....	235
2.2 Removing and installing engine oil cooler .....	236
<b>3 Oil filter, oil pressure switch</b> .....	<b>240</b>
3.1 Assembly overview - oil filter housing, oil pressure switch .....	240
3.2 Removing and installing oil pressure switch .....	241
3.3 Checking oil pressure .....	242
3.4 Checking oil pressure and oil pressure switch .....	243
3.5 Removing and installing oil filter housing .....	244
<b>4 Balancer shaft module</b> .....	<b>249</b>
4.1 Assembly overview - balancer shaft module .....	249
4.2 Removing and installing balance shaft module .....	252
<b>19 - Cooling</b> .....	<b>262</b>
<b>1 Cooling system/coolant</b> .....	<b>262</b>
1.1 Coolant hose connection diagram .....	262
1.2 Draining and adding coolant .....	263
1.3 Checking cooling system for leaks .....	269
<b>2 Coolant pump, regulation of cooling system</b> .....	<b>274</b>
2.1 Assembly overview - coolant pump, thermostat .....	274
2.2 Removing and installing coolant pump .....	274
2.3 Removing and installing 4/2-way valve with thermostat .....	276



2.4	Removing and installing coolant temperature sender	282
<b>3</b>	<b>Coolant pipes</b>	<b>286</b>
3.1	Assembly overview - coolant pipes	286
3.2	Removing and installing coolant pipes	288
<b>4</b>	<b>Radiator, radiator fan</b>	<b>300</b>
4.1	Assembly overview - radiator/radiator fan	300
4.2	Removing and installing radiator	300
4.3	Removing and installing radiator cowl with radiator fan	302
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>304</b>
<b>1</b>	<b>Turbocharger</b>	<b>304</b>
1.1	Assembly overview - turbocharger	304
1.2	Removing and installing turbocharger	306
1.3	Renewing vacuum unit for turbocharger	311
<b>2</b>	<b>Charge air system</b>	<b>318</b>
2.1	Assembly overview - charge air system	318
2.2	Assembly overview - charge-air hose connections	319
2.3	Removing and installing charge air cooler	320
2.4	Removing and installing charge pressure sender	322
2.5	Checking charge air system for leaks	322
<b>23</b>	<b>Mixture preparation - injection</b>	<b>326</b>
<b>1</b>	<b>Injection system</b>	<b>326</b>
1.1	Schematic overview - fuel system	326
1.2	Filling/bleeding fuel system	328
1.3	Checking fuel system for leaks	329
<b>2</b>	<b>Vacuum system</b>	<b>330</b>
2.1	Assembly overview - vacuum system	330
2.2	Checking vacuum system	330
<b>3</b>	<b>Injectors/high-pressure accumulator (rail)</b>	<b>335</b>
3.1	Assembly overview - injectors	335
3.2	Adapting correction values for injectors	338
3.3	Testing jammed-open injectors	339
3.4	Checking return flow rate of injectors with engine running	341
3.5	Checking return flow rate of injectors at starter speed	344
3.6	Removing and installing injectors	346
3.7	Removing and installing high-pressure lines	350
3.8	Removing and installing fuel rail	352
<b>4</b>	<b>Intake manifold</b>	<b>356</b>
4.1	Assembly overview - intake manifold	356
4.2	Removing and installing intake manifold	357
4.3	Removing and installing throttle valve module	361
<b>5</b>	<b>Air filter</b>	<b>364</b>
5.1	Assembly overview - air filter housing	364
5.2	Removing and installing air filter housing	366
<b>6</b>	<b>Senders and sensors</b>	<b>368</b>
6.1	Checking fuel pressure regulating valve	368
6.2	Removing and installing fuel pressure regulating valve	369
6.3	Removing and installing fuel pressure sender	371
6.4	Removing and installing fuel temperature sender G81	374
6.5	Removing and installing differential pressure sensor	375
6.6	Removing and installing air mass meter	377
<b>7</b>	<b>High-pressure pump</b>	<b>378</b>
7.1	Assembly overview - high-pressure pump	378



7.2	Removing and installing high-pressure pump	380
<b>8</b>	<b>Lambda probe</b>	<b>385</b>
8.1	Removing and installing Lambda probe	385
<b>9</b>	<b>Engine control unit</b>	<b>387</b>
9.1	Removing and installing engine control unit	387
9.2	Removing and installing engine control unit with protective housing	397
<b>26</b>	<b>- Exhaust system</b>	<b>414</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>414</b>
1.1	Assembly overview - silencers	414
1.2	Aligning exhaust system free of stress	423
1.3	Installation position of clamp	424
<b>2</b>	<b>Emission control</b>	<b>426</b>
2.1	Assembly overview - emission control	426
2.2	Removing and installing particulate filter	430
2.3	Removing and installing catalytic converter	439
<b>3</b>	<b>SCR system (selective catalytic reduction)</b>	<b>445</b>
3.1	Assembly overview - tank for reducing agent	445
3.2	Draining reducing agent tank	446
3.3	Removing and installing reducing agent tank	450
3.4	Assembly overview - reducing agent supply line	453
3.5	Removing and installing reducing agent supply line	454
3.6	Removing and installing injector for reducing agent	457
3.7	Assembly overview - delivery module for reducing agent	458
3.8	Removing and installing heater element (heater cup)	460
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>465</b>
4.1	Assembly overview - exhaust gas temperature regulation	465
4.2	Removing and installing exhaust gas temperature sender	467
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>473</b>
5.1	Assembly overview - exhaust gas recirculation	473
5.2	Removing and installing exhaust gas recirculation cooler	475
5.3	Checking changeover for exhaust gas recirculation cooler	478
5.4	Checking exhaust gas recirculation cooler for leaks	479
5.5	Cleaning exhaust gas recirculation system	484
<b>28</b>	<b>- Glow plug system</b>	<b>492</b>
<b>1</b>	<b>Glow plug system</b>	<b>492</b>
1.1	Removing and installing glow plug	492
1.2	Removing and installing automatic glow period control unit	494
1.3	Removing and installing Hall sender	495
1.4	Removing and installing engine speed sender	497