



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety regulations for working on fuel supply .....	1
1.2 Safety precautions when working on vehicles with a start/stop system .....	2
1.3 Safety precautions when using testers and measuring instruments during a road test .....	2
1.4 Safety precautions when working on the SCR system .....	2
<b>2 Identification</b> .....	<b>4</b>
2.1 Engine number/engine data .....	4
<b>3 General information</b> .....	<b>5</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system ..	5
<b>20 - Fuel supply system</b> .....	<b>6</b>
<b>1 Procedure should vehicle be misfueled</b> .....	<b>6</b>
1.1 Step 1: engine was started with incorrect fuel .....	6
1.2 Step 2: engine was not started with incorrect fuel .....	7
1.3 Step 3: swarf in fuel delivery unit and fuel tank .....	8
1.4 Step 4: no swarf in fuel delivery unit or fuel tank .....	9
1.5 Step 5: swarf in high-pressure pump .....	9
1.6 Step 6: swarf in high-pressure pump .....	10
<b>2 Fuel</b> .....	<b>11</b>
2.1 Assembly overview - fuel tank .....	11
2.2 Removing and installing fuel tank .....	16
2.3 Emptying fuel tank .....	23
<b>3 Fuel delivery unit, fuel gauge sender</b> .....	<b>33</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender .....	33
3.2 Removing and installing fuel delivery unit, fuel gauge sender .....	34
3.3 Removing and installing fuel gauge sender .....	40
<b>4 Separating plug-in connectors</b> .....	<b>45</b>
<b>5 Fuel filter</b> .....	<b>49</b>
5.1 Assembly overview - fuel filter .....	49
5.2 Removing and installing fuel filter .....	53
<b>6 Accelerator pedal</b> .....	<b>58</b>
6.1 Assembly overview - accelerator module .....	58
6.2 Removing and installing accelerator pedal module .....	58
<b>7 Fuel pump</b> .....	<b>62</b>
7.1 Checking fuel pump .....	62
7.2 Removing and installing fuel pump .....	81
7.3 Removing and installing suction-jet pump .....	83

