



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working with pyrotechnic components	2
1.2 Safety instructions for belt tensioners	3
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.4 Checking seat belts	3
1.5 Safety instructions for airbag	4
1.6 Additional safety instructions for curtain airbag	4
1.7 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	4
1.8 Deactivating the airbag	5
68 - Interior equipment	6
1 Storage compartments/covers	6
1.1 Removing and installing headliner storage compartment	6
1.2 Removing and installing steering column trim	7
1.3 Removing and installing dash panel cover on driver's side	8
1.4 Removing and installing glove compartment	11
1.5 Removing and installing glove compartment opener	13
2 Equipment	14
2.1 Removing and installing roof grab handle	14
2.2 Removing and installing sun visor	15
3 Centre console	18
3.1 Removing and installing centre console	18
3.2 Removing and installing centre console front storage compartment	23
3.3 Removing and installing rear centre console trim	24
3.4 Removing and installing centre console side trims	26
3.5 Removing and installing centre console storage compartment	27
3.6 Removing and installing centre console extension	28
3.7 Removing and installing centre armrest	31
3.8 Removing and installing centre armrest storage compartment	32
3.9 Removing and installing upper part of centre armrest	34
4 Interior mirror	36
4.1 Assembly overview - interior mirror	36
4.2 Removing and installing interior mirror	38
69 - Passenger protection	47
1 Seat belts	47
1.1 Assembly overview - front three-point seat belt	47
1.2 Removing and installing front 3-point seat belt	49
1.3 Removing and installing belt height adjustment	53
1.4 Removing and installing front belt buckle	54
1.5 Assembly overview - rear outer seat belt	56
1.6 Removing and installing rear outer three-point seat belt	56
1.7 Removing and installing rear middle three-point seat belt	58
1.8 Removing and installing rear belt buckle	59
2 Child seat anchors	62
2.1 Testing after accident	62
3 Airbag control unit	63
3.1 Removing and installing airbag control unit	63
4 Driver's airbag	66



4.1	Removing and installing airbag unit with igniter	66
4.2	Removing and installing return spring with slip ring (coil connector)	69
5	Front passenger side airbag	70
5.1	Removing and installing front passenger side airbag unit with igniter	70
6	Side airbags	72
6.1	Removing and installing front side airbag with igniter	72
6.2	Removing and installing rear side airbag with igniter	73
7	Curtain airbags	76
7.1	Removing and installing curtain airbag with igniter	76
8	Airbag crash sensors	79
8.1	Removing and installing front airbag crash sensor	79
8.2	Removing and installing front side airbag crash sensor	82
8.3	Removing and installing rear side airbag crash sensor	91
9	Seat belt verification	94
9.1	Removing and installing seat occupied sensor	94
10	Seat occupied recognition	99
10.1	Installation location overview - seat occupied recognition system	99
10.2	Removing and installing seat occupied recognition	100
70 - Trim, insulation	107	
1	Door trims	107
1.1	Removing and installing door trim at front	107
1.2	Removing and installing rear door trim	111
2	Dash panel	115
2.1	Removing and installing dash panel	115
2.2	Removing and installing dash panel decorative trim	123
2.3	Removing and installing dash panel side cover	129
3	Dash panel central tube	131
3.1	Removing and installing dash panel central tube	131
4	Interior trims	136
4.1	Removing and installing A-pillar trim	136
4.2	Removing and installing B-pillar trim	140
4.3	Removing and installing C-pillar trim	145
4.4	Removing and installing rear shelf	151
4.5	Removing and installing sill moulding	156
4.6	Removing and installing foot rest	162
5	Luggage compartment trims	165
5.1	Removing and installing lock carrier trim	165
5.2	Removing and installing load compartment side trim	166
5.3	Removing and installing rear lid trim	167
6	Roof trims	170
6.1	Removing and installing moulded headliner	170
6.2	Mounting roof reinforcement on body	175
72 - Seat frames	184	
1	Front seats	184
1.1	Removing and installing front seat	184
1.2	Removing and installing front backrest	200
1.3	Removing and installing head restraint	209
1.4	Dismantling and assembling seat pan	211
2	Rear seats	223
2.1	Removing and installing bench seat / individual seats	223
2.2	Removing and installing rear seat backrest	224
2.3	Removing and installing centre armrest	228



74 - Seat - padding, covers	233
1 Front seat covers and padding	233
1.1 Removing and installing seat cover and seat cushion for seat pan	233
1.2 Removing and installing backrest cover and cushion	239
1.3 Renewing heater elements of seat heating	244
2 Rear seat covers and padding	245
2.1 Removing and installing cover and cushion	245



CC 2012 >

General body repairs, interior - Edition 12.2012
