



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 All-wheel drive - notes on performance test	2
2 Identification	3
2.1 Gearbox identification	3
3 Technical data	6
3.1 Allocation gearbox - engine	6
3.2 Capacities	16
3.3 Calculation of gear ratios	17
4 Overview - power transmission	18
4.1 Overview - power transmission - front-wheel drive	18
4.2 Overview - power transmission - all-wheel drive	19
5 Electrical components	22
5.1 Overview of fitting locations - electrical components	22
6 Repair instructions	25
6.1 General repair instructions	25
30 - Clutch	29
1 Clutch mechanism	29
1.1 Overview of fitting locations – clutch mechanism	29
1.2 Assembly overview - pedal cluster	30
1.3 Assembly overview - clutch hydraulics	36
1.4 Assembly overview - clutch release mechanism	44
1.5 Removing and installing bearing bush	46
1.6 Checking clutch master cylinder and clutch slave cylinder	47
1.7 Removing and installing clutch position sender G476	48
1.8 Removing and installing return spring	55
1.9 Removing and installing over-centre spring	58
1.10 Removing and installing clutch pedal	75
1.11 Removing and installing mounting bracket	80
1.12 Removing and installing clutch master cylinder	106
1.13 Removing and installing bleeder	110
1.14 Removing and installing lines for clutch mechanism	114
1.15 Removing and installing clutch slave cylinder together with release bearing	118
1.16 Bleeding clutch mechanism	120
1.17 Repairing clutch release mechanism	121
2 Clutch	123
2.1 Determining make of clutch	123
2.2 Assembly overview - clutch	124
2.3 Removing and installing clutch	127
34 - Controls, housing	143
1 Selector mechanism	143
1.1 Installation position - selector mechanism	143
1.2 Overview - selector mechanism	144
1.3 Assembly overview – gear knob and cover	145
1.4 Assembly overview - gear lever and selector housing, CC, Scirocco, Golf Cabriolet, Passat	147
1.5 Assembly overview - selector cables, CC, Scirocco, Golf Cabriolet, Passat	149
1.6 Assembly overview - selector mechanism, Golf, Golf Estate	151



1.7	Removing and installing gear knob	153
1.8	Dismantling and assembling selector mechanism	161
1.9	Removing and installing selector mechanism	167
1.10	Removing and installing gear selector cable and gate selector cable	173
1.11	Repairing selector mechanism	176
1.12	Adjusting selector mechanism	181
1.13	Checking selector mechanism	186
2	Removing and installing gearbox	187
2.1	Distinguishing between different types of turbo diesel engines	187
2.2	Removing gearbox	188
2.3	Installing gearbox	295
2.4	Specified torques for gearbox	369
3	Assembly mountings	370
3.1	Assembly overview - assembly mountings	370
4	Bevel box	374
4.1	Assembly overview - bevel box	374
4.2	Bevel box differences, Golf and Golf estate	376
4.3	Removing bevel box	377
4.4	Installing bevel box	390
5	Front differential lock	400
5.1	Assembly overview - front differential lock	400
5.2	Allocation of front differential lock	400
5.3	Removing front differential lock	400
5.4	Installing front differential lock	404
6	Transporting gearbox	408
6.1	Transporting gearbox	408
6.2	Transporting front differential lock	409
7	Gear oil	410
7.1	Distinguishing between different manual gearbox types when filling oil	410
7.2	Checking gear oil level	410
8	Securing to engine and gearbox support	415
8.1	Installing manual gearbox to engine and gearbox support	415
8.2	Installing bevel box or front differential lock to engine and gearbox support	416
9	Dismantling and assembling gearbox	418
9.1	Schematic overview - gearbox	418
9.2	Assembly overview - gearbox	421
9.3	Assembly overview - gearbox housing and selector mechanism	423
9.4	Assembly overview - selector unit	425
9.5	Assembly overview - shafts, differential, selector mechanism	426
9.6	Assembly overview - selector forks	430
9.7	Renewing selector shaft seal	431
9.8	Dismantling and assembling gearbox	433
10	Gearbox housing, clutch housing	458
10.1	Assembly overview - gearbox housing	458
10.2	Assembly overview - clutch housing	460
10.3	Repairing gearbox housing	462
10.4	Repairing clutch housing	472
35 - Gears, shafts		476
1	Input shaft	476
1.1	Assembly overview - input shaft	476
1.2	Dismantling and assembling input shaft	477
1.3	Renewing input shaft seal	483
2	Output shaft	485



2.1	Assembly overview - output shaft	485
2.2	Dismantling and assembling output shaft	493
2.3	Adjusting output shaft	554
39	Final drive - differential	566
1	Oil seals	566
1.1	Overview of fitting locations - seals	566
1.2	Renewing left seal	568
1.3	Renewing right seal	572
2	Differential	587
2.1	Assembly overview - differential	587
2.2	Dismantling and assembling differential	592
2.3	Adjusting differential	606
3	Adjustment overview	612
4	Components of bevel box	613
4.1	Assembly overview - components of bevel box	613
4.2	Renewing bevel box seals	619
4.3	Renewing output flange and redetermining thickness of shim	646
4.4	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft	647
5	Components of front differential lock	652
5.1	Assembly overview - components of front differential lock	652
5.2	Checking function	654
5.3	Removing and installing pump V181	654
5.4	Removing and installing coupling for front differential lock	656
5.5	Removing and installing differential lock control unit J647	656
5.6	Renewing seals for front differential lock	657
5.7	Renewing ball bearing for flange shaft	661
6	Gear oil	664
6.1	Checking gear oil level	664
7	Oil for front differential lock	672
7.1	Checking oil level for front differential lock	672
7.2	Draining and filling oil for front differential lock	673

