



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	3
3.1 Allocation gearbox - engine	3
3.2 Capacities	6
3.3 Calculation of gear ratios	6
4 Overview - power transmission	7
5 Electrical components	9
5.1 Overview of fitting locations - electrical components	9
6 Repair instructions	11
6.1 General repair instructions	11
30 - Clutch	14
1 Clutch operation	14
1.1 Overview of fitting locations – clutch mechanism	14
1.2 Assembly overview - pedal cluster	16
1.3 Assembly overview - clutch hydraulics	20
1.4 Assembly overview - clutch release mechanism	26
1.5 Removing and installing bearing bush	27
1.6 Checking clutch master cylinder and clutch slave cylinder	28
1.7 Removing and installing clutch position sender G476	28
1.8 Removing and installing return spring	31
1.9 Removing and installing over-centre spring	33
1.10 Removing and installing clutch pedal	46
1.11 Removing and installing mounting bracket	51
1.12 Removing and installing clutch master cylinder	70
1.13 Removing and installing clutch slave cylinder	73
1.14 Removing and installing lines for clutch mechanism	78
1.15 Bleeding clutch mechanism	80
1.16 Repairing clutch release mechanism	82
2 Clutch	84
2.1 Assembly overview - clutch	84
2.2 Removing and installing clutch	87
34 - Controls, housing	99
1 Selector mechanism	99
1.1 Installation position - selector mechanism	99
1.2 Overview - selector mechanism	101
1.3 Assembly overview - gear knob and cover	102
1.4 Assembly overview - Gear lever and selector housing	104
1.5 Assembly overview - Selector cables	106
1.6 Assembly overview - selector mechanism	108
1.7 Removing and installing gear knob	109
1.8 Dismantling and assembling selector mechanism	115
1.9 Removing and installing selector mechanism	119
1.10 Removing and installing gear selector cable and gate selector cable	124
1.11 Repairing selector mechanism	127
1.12 Adjusting selector mechanism	129
1.13 Checking selector mechanism	133



2	Removing and installing gearbox	134
2.1	Distinguishing between different types of 1.4 l petrol engine, Golf Cabriolet, CC	134
2.2	Removing gearbox	135
2.3	Install gearbox	205
2.4	Specified torques for gearbox	246
3	Assembly mountings	249
3.1	Assembly overview - assembly mountings	249
4	Transporting gearbox	251
5	Gear oil	252
5.1	Checking gear oil level	252
5.2	Draining and filling gear oil	252
6	Installing to engine and gearbox support	255
7	Dismantling and assembling gearbox	256
7.1	Schematic overview - gearbox	256
7.2	Assembly overview - gearbox	258
7.3	Assembly overview - cover for gearbox housing and 5th/6th gear	259
7.4	Assembly overview - gearbox housing and selector mechanism	261
7.5	Assembly overview - selector unit	263
7.6	Assembly overview - shafts, differential, selector mechanism	264
7.7	Assembly overview - selector forks	265
7.8	Repairing selector unit	268
7.9	Renewing oil seal for selector shaft	269
7.10	Repairing selector forks	270
7.11	Removing cover for gearbox housing and 5th and 6th gears	274
7.12	Dismantling and assembling gearbox	281
7.13	Installing cover for gearbox housing and 5th and 6th gears	294
8	Gearbox housing, clutch housing	299
8.1	Assembly overview - gearbox housing and clutch housing	299
8.2	Assembly overview - gearbox housing cover	301
8.3	Repairing gearbox housing	302
8.4	Repairing clutch housing	307
8.5	Repairing gearbox housing cover	308
35 - Gears, shafts		312
1	Input shaft	312
1.1	Assembly overview - input shaft	312
1.2	Dismantling and assembling input shaft	314
1.3	Adjusting input shaft	319
1.4	Renewing input shaft seal	324
2	Output shaft	326
2.1	Assembly overview - output shaft	326
2.2	Dismantling and assembling output shaft	329
2.3	Adjusting output shaft	339
3	Reverse shaft	345
3.1	Assembly overview - reverse shaft	345
3.2	Dismantling and assembling reverse shaft	348
39 - Final drive - differential		351
1	Oil seals	351
1.1	Overview of fitting locations - seals	351
1.2	Renewing left oil seal	352
1.3	Renewing right oil seal	354
2	Differential	358
2.1	Assembly overview - differential	358



2.2	Dismantling and assembling differential	359
2.3	Adjusting differential	365
3	Adjustment overview	369

