



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of bevel box	2
2 General information	3
2.1 Allocation gearbox - engine	3
2.2 Capacities	3
3 Safety information	4
3.1 General safety provisions	4
3.2 Notes on tow-starting/towing	4
4 Repair notes	5
4.1 General repair instructions	5
4.2 Gaskets and seals	6
4.3 Nuts and bolts	6
5 Electrical components	7
5.1 Overview of fitting locations - electrical components	7
32 - Torque converter	12
1 Torque converter	12
1.1 Assembly overview - torque converter	12
1.2 Removing and installing torque converter	13
1.3 Draining torque converter	13
1.4 Removing and installing torque converter radial shaft seal	14
37 - Controls, housing	16
1 Selector mechanism	16
1.1 Assembly overview - selector mechanism	16
1.2 Emergency release from position »P«	17
1.3 Removing and installing selector lever handle	17
1.4 Removing and installing selector mechanism	21
1.5 Checking selector mechanism	25
1.6 Checking and adjusting selector lever cable	26
1.7 Removing and installing multifunction switch	28
1.8 Adjusting multifunction switch	30
1.9 Renewing selector shaft seal	31
2 Removing and installing gearbox	33
2.1 Removing gearbox	33
2.2 Installing gearbox	48
2.3 Specified torques	49
3 Transporting gearbox	51
4 Securing to engine and gearbox support	52
5 Bevel box	54
5.1 Removing bevel box	54
5.2 Installing bevel box	57
6 ATF circuit	60
6.1 Assembly overview - ATF cooler	60
6.2 Removing and installing ATF cooler	61
7 ATF	63
7.1 Checking ATF level	63
7.2 Draining and filling ATF	66



38 - Gears, control	68
1 ATF system	68
1.1 Removing and installing sump	68
1.2 Removing and installing ATF strainer	69
2 Valve body	71
2.1 Assembly overview - valve body	71
2.2 Removing and installing valve body	73
39 - Final drive - differential	86
1 Final drive seals	86
1.1 Renewing oil seal for left flange shaft	86
1.2 Renewing seal for right flange shaft	88
2 Bevel box	92
2.1 Assembly overview - bevel box	92
2.2 Renewing bevel box seals	107
3 Gear oil	114
3.1 Checking gear oil level	114