



Contents

| | |
|--|------------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Gearbox identification | 1 |
| 2 General information | 4 |
| 2.1 Allocation gearbox - engine | 4 |
| 2.2 Capacities | 5 |
| 3 Safety information | 6 |
| 3.1 General safety provisions | 6 |
| 3.2 Safety measures when working on vehicles with a start/stop system | 6 |
| 3.3 Notes on tow-starting/towing | 7 |
| 4 Repair instructions | 8 |
| 4.1 General repair instructions | 8 |
| 4.2 Gaskets and seals | 10 |
| 4.3 Nuts and bolts | 10 |
| 5 Electrical components | 11 |
| 5.1 Overview of fitting locations - electrical components | 11 |
| 30 - Clutch | 13 |
| 1 Clutch | 13 |
| 1.1 Assembly overview - dual clutch | 13 |
| 1.2 Removing and installing clutch end cover | 15 |
| 1.3 Removing dual clutch | 21 |
| 1.4 Installing dual clutch | 22 |
| 34 - Controls, housing | 28 |
| 1 Mechatronic unit | 28 |
| 1.1 Removing and installing mechatronic unit for dual clutch gearbox J743 | 28 |
| 1.2 Removing and installing gearbox input speed sender G182 and clutch temperature sender G509 | 47 |
| 2 Selector mechanism | 49 |
| 2.1 Assembly overview - selector mechanism | 49 |
| 2.2 Emergency release from position P | 50 |
| 2.3 Removing and installing selector lever handle | 51 |
| 2.4 Removing and installing selector mechanism | 54 |
| 2.5 Checking selector mechanism | 58 |
| 2.6 Checking and adjusting selector lever cable | 59 |
| 2.7 Renewing oil seal for selector shaft | 61 |
| 3 Removing and installing gearbox | 64 |
| 3.1 Distinguishing between different types of engines, Golf Cabriolet 2012 ▶ , Tiguan 2008 ▶ , CC 2012 ▶ | 64 |
| 3.2 Removing gearbox | 66 |
| 3.3 Install gearbox | 164 |
| 3.4 Specified torques for gearbox | 169 |
| 4 Transporting gearbox | 171 |
| 5 Installing to engine and gearbox support | 172 |
| 6 Bevel box | 173 |
| 6.1 Removing bevel box | 173 |
| 6.2 Installing bevel box | 186 |
| 7 Dismantling and assembling gearbox | 191 |
| 7.1 Assembly overview - gearbox | 191 |
| 8 Gear oil circuit | 194 |



| | | |
|--|---|------------|
| 8.1 | Removing and installing gear oil cooler | 194 |
| 8.2 | Removing and installing gear oil pump | 196 |
| 8.3 | Removing and installing gear oil filter | 200 |
| 9 | Gear oil | 202 |
| 9.1 | Checking gear oil level | 202 |
| 9.2 | Draining and filling gear oil | 205 |
| 35 - Gears, shafts | | 209 |
| 1 | Currently, no repairs can be made to gears and shafts | 209 |
| 39 - Final drive - differential | | 210 |
| 1 | Final drive seals | 210 |
| 1.1 | Overview of fitting locations - seals | 210 |
| 1.2 | Renewing left oil seal | 210 |
| 1.3 | Renewing right oil seal | 214 |
| 2 | Bevel box | 219 |
| 2.1 | Assembly overview - bevel box | 219 |
| 2.2 | Removing and installing right flange shaft | 220 |
| 2.3 | Renewing needle bearing (polygon bearing) for right output shaft drive flange | 222 |
| 2.4 | Renewing output flange and redetermining thickness of shim, bevel box removed | 224 |
| 2.5 | Renewing seal on gearbox between bevel box and gearbox | 233 |
| 2.6 | Renewing seal for right flange shaft on outside of bevel box | 235 |
| 2.7 | Renewing seal on bevel box between gearbox and bevel box | 236 |
| 2.8 | Renewing oil seal for drive flange and bevel box | 237 |
| 3 | Gear oil | 250 |
| 3.1 | Checking gear oil level | 250 |