



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number, engine data	1
2 Safety instructions	3
2.1 Safety precautions when working on fuel supply system	3
2.2 Safety precautions when working on cooling system	4
2.3 Safety precautions when working on ignition system	5
3 Repair instructions	7
3.1 Rules for cleanliness	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Installing engine	17
2 Assembly mountings	21
2.1 Assembly overview - assembly mountings	21
13 - Crankshaft group	23
1 Cylinder block (pulley end)	23
1.1 Assembly overview - poly V-belt drive	23
1.2 Assembly overview - cylinder block (pulley end)	25
1.3 Removing and installing poly V-belt	28
1.4 Removing and installing ancillary bracket	30
1.5 Removing and installing poly V-belt pulley	31
1.6 Renewing crankshaft oil seal - belt pulley end	33
2 Cylinder block, gearbox end	37
2.1 Assembly overview - cylinder block, gearbox end	37
2.2 Removing and installing sealing flange on gearbox side	38
3 Crankshaft	47
3.1 Assembly overview - crankshaft	47
3.2 Renewing needle bearing in crankshaft	48
3.3 Crankshaft dimensions	49
4 Pistons and conrods	50
4.1 Assembly overview - pistons and conrods	50
4.2 Checking piston and cylinder bore	52
4.3 Separating new conrod	53
4.4 Removing and installing pistons	53
4.5 Removing and installing oil spray jets	54
15 - Cylinder head, valve gear	56
1 Cylinder head	56
1.1 Assembly overview - cylinder head	56
1.2 Removing and installing cylinder head	59
1.3 Removing and installing camshaft housing	61
1.4 Checking compression	67
2 Cover for timing chain	70
2.1 Removing and installing valve timing housing	70
3 Chain drive	74
3.1 Removing and installing timing chain and chain drive for oil pump	74
3.2 Checking valve timing	82
3.3 Adjusting valve timing	85
3.4 Checking timing chain	92



4	Valve gear	100
4.1	Assembly overview - valve gear	100
4.2	Measuring axial clearance of camshaft	101
4.3	Removing and installing valve stem seals	102
5	Inlet and exhaust valves	105
5.1	Reworking valve seats	105
5.2	Checking valve guides	106
17 - Lubrication		107
1	Sump, oil pump	107
1.1	Assembly overview - sump / oil pump	107
1.2	Engine oil	110
1.3	Removing and installing oil sump	110
1.4	Removing and installing oil pump	112
2	Oil filter, oil pressure switch	115
2.1	Checking oil pressure and oil pressure switch	115
19 - Cooling		117
1	Cooling system, coolant	117
1.1	Coolant hose schematic diagram	117
1.2	Assembly overview - engine preheater	119
1.3	Removing and installing engine preheater heater element Z97	120
1.4	Checking cooling system for leaks	122
1.5	Draining and filling coolant	124
2	Coolant pump, regulation of cooling system	130
2.1	Assembly overview - coolant pump, thermostat	130
2.2	Electric coolant pump	132
2.3	Removing and installing coolant pump	133
2.4	Removing and installing coolant pump pulley	140
3	Radiator, radiator fan	148
3.1	Assembly overview - radiator/radiator fan	148
3.2	Removing and installing radiator	149
3.3	Removing and installing radiator cowling	151
3.4	Removing and installing radiator module	152
21 - Turbocharging/supercharging		153
1	Turbocharger	153
1.1	Assembly overview - turbocharger	153
1.2	Removing and installing turbocharger	157
1.3	Checking vacuum unit for turbocharger	162
1.4	Adjusting vacuum unit for turbocharger	164
1.5	Renewing vacuum unit for turbocharger	169
2	Charge air system	172
2.1	Assembly overview - charge air system	172
2.2	Removing and installing charge air cooler	175
2.3	Checking charge air system for leaks	179
3	Supercharger	182
3.1	Assembly overview - supercharger	182
3.2	Removing and installing supercharger	184
3.3	Removing and installing drive unit seal for supercharger	191
24 - Mixture preparation - injection		195
1	Injectors	195
1.1	Assembly overview - fuel rail with injectors	195
1.2	Removing and installing injectors	197



1.3	Renewing seals on injectors	199
2	Air filter	204
2.1	Assembly overview - air filter housing	204
2.2	Removing and installing air filter housing	205
3	Intake manifold	206
3.1	Assembly overview - intake manifold	206
3.2	Removing and installing throttle valve module	211
3.3	Cleaning throttle valve module	213
3.4	Removing and installing regulating flap control unit	214
4	Senders and sensors	217
4.1	Checking fuel pressure sender	217
5	Engine control unit	221
5.1	Removing and installing engine control unit	221
5.2	Removing and installing engine control unit with protective housing	222
6	High-pressure pump	225
6.1	Assembly overview - high-pressure pump	225
6.2	Removing and installing high-pressure pump	226
26	Exhaust system	230
1	Exhaust pipes, silencers	230
1.1	Assembly overview - silencers	230
1.2	Removing and installing front exhaust pipe	232
1.3	Separating exhaust pipes, silencers	233
1.4	Aligning exhaust system free of stress	235
1.5	Installation position of clamp	236
2	Cleansing exhaust emissions	237
2.1	Assembly overview - emission control	237
2.2	Removing and installing catalytic converter	238
28	Ignition system	241
1	Ignition system	241
1.1	Assembly overview - ignition system	241
1.2	Test data, spark plugs	242
1.3	Removing and installing ignition coils with output stage	242
1.4	Removing and installing engine speed sender	244

