



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>3</b>
2.1 Safety regulations for working on fuel supply	3
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Safety measures when working on vehicles with a start/stop system	4
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the SCR system	4
2.6 Safety precautions when working on exhaust system	5
<b>3 Repair instructions</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	7
3.3 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing motor</b>	<b>8</b>
1.1 Removing motor	8
1.2 Separating engine and gearbox	31
1.3 Securing engine on engine and gearbox support	36
1.4 Installing engine	38
<b>2 Assembly mountings</b>	<b>42</b>
2.1 Assembly overview - assembly mountings	42
2.2 Supporting engine in installation position	43
2.3 Adjusting assembly mountings	48
<b>3 Engine cover panel</b>	<b>50</b>
3.1 Removing and installing engine cover	50
<b>13 - Crankshaft group</b>	<b>52</b>
<b>1 Cylinder block (pulley end)</b>	<b>52</b>
1.1 Assembly overview - poly V-belt drive	52
1.2 Removing and installing poly-V belt	56
1.3 Removing and installing tensioner for poly V-belt	61
1.4 Removing and installing bracket for ancillaries	61
1.5 Removing and installing engine bracket	64
1.6 Assembly overview - cylinder block (pulley end)	72
1.7 Removing and installing sealing flange on pulley end	74
1.8 Renewing crankshaft oil seal - belt pulley end	77
<b>2 Cylinder block, gearbox end</b>	<b>81</b>
2.1 Assembly overview - cylinder block, gearbox end	81
2.2 Removing and installing flywheel	82
2.3 Removing and installing sealing flange on gearbox side	84
<b>3 Crankshaft</b>	<b>97</b>
3.1 Assembly overview - crankshaft	97
3.2 Renewing needle bearing in crankshaft	98
3.3 Crankshaft dimensions	101
<b>4 Pistons and conrods</b>	<b>102</b>
4.1 Assembly overview - pistons and conrods	102
4.2 Measuring piston projection at TDC	107
4.3 Separating new conrod	109
4.4 Checking radial clearance of conrods	110



<b>15 - Cylinder head, valve gear</b> .....	<b>111</b>
<b>1 Cylinder head</b> .....	<b>111</b>
1.1 Assembly overview - cylinder head .....	111
1.2 Removing and installing cylinder head .....	115
1.3 Assembly overview - cylinder head cover .....	125
1.4 Removing and installing cylinder head cover .....	127
1.5 Removing and installing vacuum pump .....	131
1.6 Checking compression .....	133
<b>2 Toothed belt drive</b> .....	<b>136</b>
2.1 Assembly overview - toothed belt .....	136
2.2 Removing and installing toothed belt .....	138
<b>3 Valve gear</b> .....	<b>161</b>
3.1 Assembly overview - valve gear .....	161
3.2 Measuring axial play of camshaft .....	163
3.3 Measuring radial play of camshaft .....	164
3.4 Removing and installing camshaft oil seal .....	165
3.5 Removing and installing camshaft .....	172
3.6 Checking hydraulic compensation elements .....	181
3.7 Removing and installing valve stem seals .....	182
<b>4 Inlet and exhaust valves</b> .....	<b>191</b>
4.1 Valve dimensions .....	191
4.2 Reworking valve seats .....	191
4.3 Checking valve guides .....	191
4.4 Checking valves .....	193
<b>17 - Lubrication</b> .....	<b>194</b>
<b>1 Sump, oil pump</b> .....	<b>194</b>
1.1 Assembly overview - sump/oil pump .....	194
1.2 Removing and installing sump .....	200
1.3 Removing and installing oil level and oil temperature sender .....	204
1.4 Removing and installing oil pump .....	206
1.5 Engine oil: .....	207
<b>2 Engine oil cooler</b> .....	<b>209</b>
2.1 Assembly overview - engine oil cooler .....	209
2.2 Removing and installing engine oil cooler .....	210
<b>3 Oil filter, oil pressure switch</b> .....	<b>213</b>
3.1 Assembly overview - oil filter .....	213
3.2 Removing and installing oil filter housing .....	214
3.3 Removing and installing oil pressure switch .....	218
3.4 Checking oil pressure and oil pressure switch .....	219
<b>4 Balancer shaft module</b> .....	<b>222</b>
4.1 Assembly overview - balancer shaft module .....	222
4.2 Removing and installing balance shaft module .....	225
<b>19 - Cooling</b> .....	<b>235</b>
<b>1 Cooling system/coolant</b> .....	<b>235</b>
1.1 Coolant hose connection diagram .....	235
1.2 Checking cooling system for leaks .....	236
1.3 Draining and adding coolant .....	240
<b>2 Coolant pump, regulation of cooling system</b> .....	<b>247</b>
2.1 Assembly overview - coolant pump, thermostat .....	247
2.2 Removing and installing coolant pump .....	247
2.3 Removing and installing 4/2-way valve with thermostat .....	249
2.4 Electric coolant pump .....	255



2.5	Removing and installing coolant temperature sender	260
<b>3</b>	<b>Coolant pipes</b>	<b>265</b>
3.1	Assembly overview - coolant pipes	265
3.2	Removing and installing coolant pipes	267
<b>4</b>	<b>Radiator, radiator fan</b>	<b>279</b>
4.1	Assembly overview - radiator/radiator fan	279
4.2	Removing and installing radiator	279
4.3	Removing and installing radiator cowl with radiator fan	282
4.4	Removing and installing radiator fan	283
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>285</b>
<b>1</b>	<b>Turbocharger</b>	<b>285</b>
1.1	Assembly overview - turbocharger	285
1.2	Removing and installing turbocharger	287
1.3	Renewing vacuum unit for turbocharger	295
<b>2</b>	<b>Charge air system</b>	<b>302</b>
2.1	Assembly overview - charge air system	302
2.2	Removing and installing charge air cooler	303
2.3	Assembly overview - charge-air hose connections	305
2.4	Removing and installing charge pressure sender	306
2.5	Checking charge air system for leaks	307
<b>23</b>	<b>Mixture preparation - injection</b>	<b>311</b>
<b>1</b>	<b>Injection system</b>	<b>311</b>
1.1	Schematic overview - fuel system	311
1.2	Filling/bleeding fuel system	313
1.3	Checking fuel system for leaks	314
<b>2</b>	<b>Injectors/high-pressure accumulator (rail)</b>	<b>315</b>
2.1	Assembly overview - injectors	315
2.2	Adapting correction values for injectors	318
2.3	Testing jammed-open injectors	319
2.4	Removing and installing injectors	321
2.5	Removing and installing fuel rail	325
2.6	Removing and installing high-pressure lines	329
<b>3</b>	<b>High-pressure pump</b>	<b>334</b>
3.1	Assembly overview - high-pressure pump	334
3.2	Removing and installing high-pressure pump	336
<b>4</b>	<b>Senders and sensors</b>	<b>342</b>
4.1	Checking fuel pressure regulating valve	342
4.2	Removing and installing fuel pressure regulating valve	343
4.3	Removing and installing fuel pressure sender	345
4.4	Removing and installing air mass meter	348
4.5	Removing and installing NOx sender 2 G687	349
4.6	Removing and installing differential pressure sensor	349
<b>5</b>	<b>Lambda probe</b>	<b>351</b>
5.1	Removing and installing Lambda probe	351
<b>6</b>	<b>Vacuum system</b>	<b>353</b>
6.1	Vacuum hose connection diagram	353
6.2	Checking vacuum system	354
<b>7</b>	<b>Air filter</b>	<b>357</b>
7.1	Assembly overview - air filter housing	357
7.2	Removing and installing air filter housing	359
<b>8</b>	<b>Intake manifold</b>	<b>362</b>
8.1	Assembly overview - intake manifold	362



8.2	Removing and installing intake manifold	363
8.3	Removing and installing throttle valve module	368
<b>9</b>	<b>Engine control unit</b>	<b>370</b>
9.1	Removing and installing engine control unit	370
<b>26 - Exhaust system</b>		<b>375</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>375</b>
1.1	Assembly overview - silencers	375
1.2	Aligning exhaust system free of stress	378
1.3	Installation position of clamp	379
<b>2</b>	<b>Emission control</b>	<b>381</b>
2.1	Assembly overview - emission control	381
2.2	Removing and installing particulate filter	384
2.3	Removing and installing catalytic converter	393
<b>3</b>	<b>SCR system (selective catalytic reduction)</b>	<b>399</b>
3.1	Assembly overview - tank for reducing agent	399
3.2	Draining reducing agent tank	400
3.3	Removing and installing reducing agent tank	404
3.4	Assembly overview - delivery module for reducing agent	407
3.5	Removing and installing heater element (heater cup)	409
3.6	Assembly overview - reducing agent supply line	414
3.7	Removing and installing reducing agent supply line	415
3.8	Removing and installing injector for reducing agent	418
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>420</b>
4.1	Assembly overview - exhaust gas temperature regulation	420
4.2	Removing and installing parts of exhaust gas temperature regulation	422
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>429</b>
5.1	Assembly overview - exhaust gas recirculation	429
5.2	Checking changeover for exhaust gas recirculation cooler	431
5.3	Removing and installing exhaust gas recirculation cooler	431
5.4	Checking exhaust gas recirculation cooler for leaks	434
5.5	Cleaning exhaust gas recirculation system	440
<b>28 - Glow plug system</b>		<b>448</b>
<b>1</b>	<b>Glow plug system</b>	<b>448</b>
1.1	Removing and installing glow plug	448
1.2	Removing and installing automatic glow period control unit	450
1.3	Removing and installing Hall sender	451
1.4	Removing and installing engine speed sender	452