



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety regulations for working on fuel supply                                      | 1         |
| 1.2 Safety measures when working on vehicles with a start/stop system                  | 1         |
| 1.3 Safety precautions when using testers and measuring instruments during a road test | 2         |
| 1.4 Safety precautions when working on the cooling system                              | 2         |
| 1.5 Safety precautions when working on the SCR system                                  | 2         |
| 1.6 Safety precautions when working on exhaust system                                  | 3         |
| <b>2 Identification</b>  | <b>5</b>  |
| 2.1 Engine number/engine data  | 5         |
| <b>3 Repair notes</b>  | <b>8</b>  |
| 3.1 Rules for cleanliness  | 8         |
| 3.2 Foreign objects in engine  | 8         |
| 3.3 Contact corrosion  | 8         |
| 3.4 Routing and attachment of lines  | 9         |
| 3.5 Fitting radiator and condensers  | 9         |
| <b>4 Technical data</b>  | <b>11</b> |
| 4.1 Coolant  | 12        |
| <b>10 - Removing and installing engine</b>   | <b>14</b> |
| <b>1 Removing and installing engine</b>  | <b>14</b> |
| 1.1 Removing engine  | 14        |
| 1.2 Separating engine and gearbox  | 26        |
| 1.3 Securing engine on engine and gearbox support                                      | 31        |
| 1.4 Installing engine  | 33        |
| <b>2 Assembly mountings</b>  | <b>38</b> |
| 2.1 Assembly overview - assembly mountings   | 38        |
| 2.2 Removing and installing engine mounting  | 44        |
| 2.3 Removing and installing gearbox mounting   | 46        |
| 2.4 Removing and installing pendulum support   | 48        |
| 2.5 Supporting engine in installation position   | 49        |
| 2.6 Adjusting assembly mountings   | 59        |
| 2.7 Checking adjustment of assembly mountings  | 61        |
| <b>3 Engine cover panel</b>  | <b>62</b> |
| 3.1 Removing and installing engine cover   | 62        |
| <b>13 - Crankshaft group</b>   | <b>63</b> |
| <b>1 Cylinder block (pulley end)</b>   | <b>63</b> |
| 1.1 Assembly overview - cylinder block (pulley end)                                    | 63        |
| 1.2 Assembly overview - sealing flange, belt pulley end                                | 65        |
| 1.3 Removing and installing poly-V belt  | 67        |
| 1.4 Removing and installing tensioner for poly V-belt                                  | 68        |
| 1.5 Removing and installing vibration damper   | 69        |
| 1.6 Removing and installing bracket for ancillaries                                    | 70        |
| 1.7 Removing and installing engine support   | 72        |
| 1.8 Removing and installing sealing flange on pulley end                               | 73        |
| 1.9 Renewing caps in cylinder block (pulley end)                                       | 76        |
| <b>2 Cylinder block, gearbox end</b>   | <b>78</b> |
| 2.1 Assembly overview - cylinder block, gearbox end                                    | 78        |
| 2.2 Removing and installing flywheel   | 79        |
| 2.3 Removing and installing sealing flange on gearbox side                             | 82        |
| 2.4 Renewing caps in cylinder block (gearbox end)                                      | 92        |



|           |   |            |
|-----------|---|------------|
| <b>3</b>  | <b>Crankshaft</b> .....   | <b>94</b>  |
| 3.1       | Assembly overview - crankshaft .....  | 94         |
| 3.2       | Crankshaft dimensions .....   | 95         |
| 3.3       | Renewing needle bearing in crankshaft .....                                     | 96         |
| 3.4       | Measuring axial clearance of crankshaft .....                                   | 99         |
| <b>4</b>  | <b>Pistons and conrods</b> .....  | <b>100</b> |
| 4.1       | Assembly overview - pistons and conrods .....                                   | 100        |
| 4.2       | Removing and installing pistons .....   | 104        |
| 4.3       | Measuring piston projection at TDC .....  | 105        |
| 4.4       | Checking pistons and cylinder bores .....                                       | 108        |
| 4.5       | Checking radial clearance of conrods .....                                      | 110        |
| <b>15</b> | <b>- Cylinder head, valve gear</b> .....  | <b>111</b> |
| <b>1</b>  | <b>Cylinder head</b> .....  | <b>111</b> |
| 1.1       | Assembly overview - cylinder head .....   | 111        |
| 1.2       | Assembly overview - cylinder head cover .....                                   | 115        |
| 1.3       | Removing and installing cylinder head .....                                     | 117        |
| 1.4       | Removing and installing cylinder head cover .....                               | 128        |
| 1.5       | Removing and installing injector seals .....                                    | 130        |
| 1.6       | Removing and installing camshaft housing .....                                  | 131        |
| 1.7       | Checking compression .....  | 138        |
| <b>2</b>  | <b>Toothed belt drive</b> .....   | <b>141</b> |
| 2.1       | Assembly overview - toothed belt cover .....                                    | 141        |
| 2.2       | Assembly overview - toothed belt .....  | 141        |
| 2.3       | Removing and installing toothed belt guard .....                                | 143        |
| 2.4       | Removing and installing toothed belt .....                                      | 150        |
| 2.5       | Removing toothed belt from camshaft .....                                       | 164        |
| <b>3</b>  | <b>Valve gear</b> .....   | <b>170</b> |
| 3.1       | Assembly overview - valve gear .....  | 170        |
| 3.2       | Measuring axial play of camshaft .....  | 174        |
| 3.3       | Removing and installing camshaft oil seal .....                                 | 175        |
| 3.4       | Removing and installing camshaft control valve 1 N205 .....                     | 177        |
| 3.5       | Removing and installing camshaft adjuster .....                                 | 177        |
| 3.6       | Checking hydraulic compensation elements .....                                  | 184        |
| 3.7       | Removing and installing valve stem seals .....                                  | 185        |
| <b>4</b>  | <b>Inlet and exhaust valves</b> .....   | <b>196</b> |
| 4.1       | Checking valve guides .....   | 196        |
| 4.2       | Checking valves .....   | 197        |
| 4.3       | Valve dimensions .....  | 197        |
| <b>17</b> | <b>- Lubrication</b> .....  | <b>198</b> |
| <b>1</b>  | <b>Sump, oil pump</b> .....   | <b>198</b> |
| 1.1       | Assembly overview - sump/oil pump .....   | 198        |
| 1.2       | Removing and installing sump .....  | 200        |
| 1.3       | Engine oil: .....   | 205        |
| 1.4       | Removing and installing oil pump .....  | 205        |
| 1.5       | Removing and installing oil level and oil temperature sender G266 .....         | 206        |
| <b>2</b>  | <b>Engine oil cooler</b> .....  | <b>208</b> |
| <b>3</b>  | <b>Oil filter, oil pressure switch</b> .....                                    | <b>209</b> |
| 3.1       | Assembly overview - oil filter housing, oil pressure switch .....               | 209        |
| 3.2       | Removing and installing oil pressure switch F1 .....                            | 211        |
| 3.3       | Removing and installing oil pressure switch for reduced oil pressure F378 ..... | 213        |
| 3.4       | Checking oil pressure .....   | 215        |
| 3.5       | Removing and installing oil filter housing .....                                | 215        |
| 3.6       | Removing and installing oil pressure regulating valve N428 .....                | 218        |



|   |            |
|---|------------|
| <b>19 - Cooling</b>   | <b>220</b> |
| <b>1 Cooling system/coolant</b>   | <b>220</b> |
| 1.1 Connection diagram - coolant hoses                                    | 220        |
| 1.2 Checking cooling system for leaks                                     | 225        |
| 1.3 Draining coolant  | 228        |
| 1.4 Filling with coolant  | 232        |
| 1.5 Checking filling quality of cooling system                            | 245        |
| 1.6 Checking electric vacuum pump VAS 6096/2                              | 247        |
| 1.7 Flushing cooling system   | 248        |
| <b>2 Coolant pump, regulation of cooling system</b>                       | <b>272</b> |
| 2.1 Assembly overview - coolant pump, thermostat                          | 272        |
| 2.2 Assembly overview - electric coolant pump                             | 276        |
| 2.3 Assembly overview - coolant temperature sender                        | 281        |
| 2.4 Removing and installing electric coolant pump                         | 282        |
| 2.5 Removing and installing coolant pump                                  | 296        |
| 2.6 Removing and installing thermostat                                    | 296        |
| 2.7 Checking thermostat   | 300        |
| 2.8 Removing and installing coolant valve for cylinder head N489          | 301        |
| 2.9 Removing and installing coolant temperature sender G62                | 301        |
| <b>3 Coolant pipes</b>  | <b>304</b> |
| 3.1 Assembly overview - coolant pipes                                     | 304        |
| 3.2 Removing and installing coolant pipes                                 | 306        |
| <b>4 Radiator, radiator fan</b>   | <b>320</b> |
| 4.1 Assembly overview - radiator/radiator fan                             | 320        |
| 4.2 Assembly overview - radiator cowl and radiator fan                    | 325        |
| 4.3 Removing and installing radiator                                      | 326        |
| 4.4 Removing and installing water radiator for charge air cooling circuit | 332        |
| 4.5 Removing and installing radiator cowl                                 | 337        |
| 4.6 Removing and installing radiator fan                                  | 341        |
| <b>21 - Turbocharging/supercharging</b>                                   | <b>343</b> |
| <b>1 Turbocharger</b>   | <b>343</b> |
| 1.1 Assembly overview - turbocharger                                      | 343        |
| 1.2 Removing and installing turbocharger                                  | 346        |
| 1.3 Renewing vacuum unit for turbocharger                                 | 352        |
| 1.4 Removing and installing connection for turbocharger                   | 358        |
| <b>2 Charge air system</b>  | <b>361</b> |
| 2.1 Assembly overview - charge air system                                 | 361        |
| 2.2 Removing and installing charge pressure sender G31                    | 364        |
| 2.3 Checking charge air system for leaks                                  | 364        |
| 2.4 Removing and installing air pipe                                      | 367        |
| 2.5 Checking charge air cooler for leaks                                  | 368        |
| <b>23 - Mixture preparation - injection</b>                               | <b>374</b> |
| <b>1 Injection system</b>   | <b>374</b> |
| 1.1 Schematic overview - fuel system                                      | 374        |
| 1.2 Overview of fitting locations - injection system                      | 376        |
| 1.3 Filling/bleeding fuel system  | 382        |
| 1.4 Checking fuel system for leaks  | 383        |
| <b>2 Vacuum system</b>  | <b>384</b> |
| 2.1 Connection diagram - vacuum system                                    | 384        |
| 2.2 Checking vacuum system  | 385        |
| <b>3 Injectors/high-pressure accumulator (rail)</b>                       | <b>386</b> |
| 3.1 Assembly overview - injectors   | 386        |



|           |   |            |
|-----------|---|------------|
| 3.2       | Assembly overview - fuel rail   | 388        |
| 3.3       | Adapting correction values for injectors  | 389        |
| 3.4       | Testing injectors   | 390        |
| 3.5       | Checking return flow rate of injectors with engine running                            | 391        |
| 3.6       | Checking return flow rate of injectors at starter speed                               | 394        |
| 3.7       | Testing jammed-open injectors   | 396        |
| 3.8       | Removing and installing injectors   | 397        |
| 3.9       | Removing and installing high-pressure lines   | 401        |
| 3.10      | Removing and installing fuel rail   | 404        |
| <b>4</b>  | <b>Air filter</b>   | <b>406</b> |
| 4.1       | Assembly overview - air filter housing  | 406        |
| 4.2       | Removing and installing air filter housing  | 410        |
| <b>5</b>  | <b>Intake manifold</b>  | <b>417</b> |
| 5.1       | Assembly overview – intake manifold   | 417        |
| 5.2       | Removing and installing intake manifold   | 421        |
| 5.3       | Removing and installing throttle valve module J338                                    | 426        |
| <b>6</b>  | <b>Senders and sensors</b>  | <b>429</b> |
| 6.1       | Removing and installing fuel pressure regulating valve N276                           | 429        |
| 6.2       | Checking fuel pressure regulating valve N276  | 433        |
| 6.3       | Removing and installing fuel pressure sender G247                                     | 435        |
| 6.4       | Removing and installing air mass meter G70  | 436        |
| 6.5       | Removing and installing pressure differential sender G505                             | 438        |
| 6.6       | Removing and installing exhaust gas pressure sensor 1 G450                            | 439        |
| 6.7       | Removing and installing charge air temperature sender ahead of charge air cooler G810 | 440        |
| 6.8       | Removing and installing charge air temperature sender after charge air cooler G811    | 441        |
| 6.9       | Removing and installing fuel temperature sender G81                                   | 441        |
| 6.10      | Removing and installing control unit for NOx sender GX30                              | 443        |
| 6.11      | Assembly overview - NOx sender control unit GX30                                      | 446        |
| <b>7</b>  | <b>Engine control unit</b>  | <b>448</b> |
| 7.1       | Removing and installing engine control unit J623                                      | 448        |
| 7.2       | Removing and installing engine (motor) control unit J623 with protective housing      | 452        |
| <b>8</b>  | <b>High-pressure pump</b>   | <b>464</b> |
| 8.1       | Assembly overview - high-pressure pump  | 464        |
| 8.2       | Removing and installing high-pressure pump  | 465        |
| <b>9</b>  | <b>Lambda probe</b>   | <b>470</b> |
| 9.1       | Assembly overview - Lambda probe  | 470        |
| 9.2       | Removing and installing Lambda probe  | 473        |
| <b>26</b> | <b>Exhaust system</b>   | <b>479</b> |
| <b>1</b>  | <b>Exhaust pipes and silencers</b>  | <b>479</b> |
| 1.1       | Assembly overview – silencers   | 479        |
| 1.2       | Removing and installing front exhaust pipe  | 484        |
| 1.3       | Separating exhaust pipes from silencers   | 485        |
| 1.4       | Removing and installing silencer  | 488        |
| 1.5       | Aligning exhaust system free of stress  | 492        |
| 1.6       | Checking exhaust system for leaks   | 493        |
| 1.7       | Installation position of clamp  | 494        |
| 1.8       | Assembly overview - front exhaust pipe  | 498        |
| 1.9       | Align end exhaust pipes   | 501        |
| <b>2</b>  | <b>Emission control</b>   | <b>502</b> |
| 2.1       | Assembly overview – emission control  | 502        |
| 2.2       | Removing and installing emission control module                                       | 508        |
| 2.3       | Removing and installing catalytic converter   | 526        |
| 2.4       | Removing and installing exhaust flap control unit J883                                | 526        |



|           |   |            |
|-----------|---|------------|
| <b>3</b>  | <b>SCR system (selective catalytic reduction)</b>                   | <b>528</b> |
| 3.1       | Assembly overview – reducing agent tank                             | 528        |
| 3.2       | Assembly overview - reducing agent supply line                      | 531        |
| 3.3       | Assembly overview - delivery module for reducing agent              | 532        |
| 3.4       | Removing and installing reducing agent tank                         | 533        |
| 3.5       | Removing and installing front section of reducing agent supply line | 540        |
| 3.6       | Removing and installing delivery module for reducing agent          | 542        |
| 3.7       | Removing and installing injector for reduction agent N474           | 545        |
| 3.8       | Removing and installing control unit for reducing-agent heater J891 | 547        |
| 3.9       | Assembly overview - injector for reducing agent N474                | 550        |
| 3.10      | Draining reducing agent tank  | 551        |
| 3.11      | Removing and installing rear section of reducing agent supply line  | 559        |
| 3.12      | Disconnecting reducing agent supply line                            | 561        |
| 3.13      | SCR - resetting learnt values                                       | 564        |
| <b>4</b>  | <b>Exhaust gas temperature regulation</b>                           | <b>565</b> |
| 4.1       | Assembly overview – exhaust gas temperature regulation              | 565        |
| 4.2       | Removing and installing exhaust gas temperature sender 1 G235       | 569        |
| 4.3       | Removing and installing exhaust gas temperature sender 2 G448       | 571        |
| 4.4       | Removing and installing exhaust gas temperature sender 3 G495       | 578        |
| 4.5       | Removing and installing exhaust gas temperature sender 4 G648       | 583        |
| <b>5</b>  | <b>Exhaust gas recirculation</b>                                    | <b>589</b> |
| 5.1       | Assembly overview – exhaust gas recirculation                       | 589        |
| 5.2       | Assembly overview - exhaust gas recirculation valve 1 GX5           | 591        |
| 5.3       | Removing and installing exhaust gas recirculation cooler            | 592        |
| 5.4       | Removing and installing exhaust gas recirculation valve 1 GX5       | 595        |
| 5.5       | Removing and installing exhaust gas recirculation valve 2 GX6       | 597        |
| 5.6       | Checking exhaust gas recirculation cooler for leaks                 | 598        |
| <b>28</b> | <b>Glow plug system</b>   | <b>599</b> |
| <b>1</b>  | <b>Glow plug system</b>   | <b>599</b> |
| 1.1       | Assembly overview - glow plug system                                | 599        |
| 1.2       | Removing and installing glow plug                                   | 600        |
| 1.3       | Removing and installing automatic glow period control unit J179     | 604        |
| 1.4       | Removing and installing Hall sender G40                             | 604        |
| 1.5       | Removing and installing engine speed sender G28                     | 605        |



CC 2012 ➤, Sharan 2016 ➤, Tiguan 2008 ➤

4-cylinder common rail engine (2.0 l, 4V, turbocharger, EA 288) - Edition 06.2021

---