



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on vehicles with a start/stop system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
4 Repair notes	5
4.1 Routing and attaching lines	5
4.2 General repair instructions	5
20 - Fuel supply system	6
1 Fuel	6
1.1 Assembly overview - fuel tank	6
1.2 Emptying fuel tank	14
1.3 Removing and installing fuel tank	26
2 Fuel delivery unit, fuel gauge sender	41
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	41
2.2 Removing and installing fuel delivery unit, fuel gauge sender	43
3 Plug-in connectors	51
3.1 Separating plug-in connectors	51
4 Fuel filter	55
5 Activated charcoal filter with fuel tank leak detection	56
5.1 Assembly overview – activated charcoal filter system	56
5.2 Removing and installing activated charcoal filter	57
5.3 Checking fuel system for leaks	58
6 Activated charcoal filter without fuel tank leak detection	66
6.1 Assembly overview – activated charcoal filter system	66
6.2 Removing and installing activated charcoal filter	66
6.3 Checking fuel tank breather	67
7 Accelerator pedal	70
7.1 Assembly overview - accelerator module	70
7.2 Removing and installing accelerator pedal module GX2	70
8 Fuel pump	73
8.1 Checking fuel system pressurisation pump G6	73
8.2 Removing and installing suction-jet pump	106
9 Senders and sensors	111
9.1 Removing and installing fuel gauge sender G	111
9.2 Removing and installing fuel gauge sender 2 G169	112

