



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Brake test	2
2.1 General notes	2
2.2 Checking vehicles on roller dynamometer, front-wheel drive	2
2.3 Checking vehicles with all-wheel drive	2
2.4 Checking parking brake	3
3 Electrical components	5
3.1 Access to diagnoses	5
4 Technical data	7
4.1 Test and adjustment values	7
45 - Anti-lock brake system	8
1 Safety and repair instructions	8
1.1 Safety information	8
1.2 Repair instructions	8
2 Overview of fitting locations	9
2.1 Overview of fitting locations – ABS/ESP	9
3 Control unit and hydraulic unit	10
3.1 Assembly overview – control unit and hydraulic unit, left-hand drive vehicles	10
3.2 Assembly overview – control unit and hydraulic unit, right-hand drive	14
3.3 Removing and installing ABS control unit [J104]/ABS hydraulic unit [N55], left-hand drive vehicles	16
3.4 Removing and installing ABS control unit [J104]/ABS hydraulic unit [N55], right-hand drive vehicles	22
3.5 Separating control unit from and connecting to hydraulic unit	26
4 Sensors	30
4.1 Assembly overview – speed sensor on front axle	30
4.2 Assembly overview – speed sensors on rear axle	30
4.3 Removing and installing speed sensor on front axle [G45]/[G47]	31
4.4 Removing and installing speed sensor on rear axle [G44]/[G46]	32
4.5 Checking ABS sensor ring	33
46 - Brakes - mechanism	35
1 Safety information and repair notes	35
1.1 Safety information	35
1.2 Repair instructions	35
2 Front brake	36
2.1 Assembly overview – front brake	36
2.2 Removing and installing brake caliper	38
2.3 Removing and installing brake carrier	41
2.4 Removing and installing brake pads, brake pad retaining spring	41
2.5 Removing and installing brake disc	44
2.6 Removing and installing brake splash plate	45
3 Rear brake	47
3.1 Assembly overview – rear brake, multi-link suspension	47
3.2 Removing and installing brake pads	49
3.3 Removing and installing brake caliper	51
3.4 Removing and installing brake carrier	55
3.5 Removing and installing brake disc	55



3.6	Removing and installing splash plate	56
4	Parking brake	58
4.1	Removing and installing parking brake motor [V282]/[V283]	58
5	Brake pedal	60
5.1	Assembly overview – brake pedal, left-hand drive vehicles	60
5.2	Assembly overview – brake pedal, right-hand drive vehicles	61
5.3	Removing and installing mounting bracket, left-hand drive vehicles	62
5.4	Removing and installing mounting bracket, right-hand drive vehicles	63
5.5	Removing and installing mounting of brake pedal on push rod	64
5.6	Separating brake pedal from and joining to brake servo	65
5.7	Removing and installing brake pedal, left-hand drive vehicles	66
5.8	Removing and installing brake pedal, right-hand drive vehicles	68
47 - Brakes - hydraulics	70	
1	Safety information and repair notes	70
1.1	Safety information	70
1.2	Repair instructions	70
2	Front brake caliper	71
2.1	Assembly overview – front brake caliper	71
2.2	Removing and installing brake caliper piston	71
3	Rear brake caliper	76
3.1	Assembly overview - rear brake caliper	76
4	Brake servo and brake master cylinder	77
4.1	Assembly overview – brake servo/brake master cylinder, left-hand drive vehicles	77
4.2	Assembly overview – brake servo/brake master cylinder, right-hand drive vehicles	79
4.3	Removing and installing brake servo [NX6], left-hand drive vehicles	81
4.4	Removing and installing brake servo [NX6], right-hand drive vehicles	84
4.5	Removing and installing brake master cylinder, left-hand drive vehicles	87
4.6	Removing and installing brake master cylinder, right-hand drive vehicles	91
4.7	Removing and installing brake fluid level warning contact [F34]	97
5	Hydraulic system	99
5.1	Brake fluid change	99
5.2	Bleeding hydraulic system	99
5.3	Leak test	100