



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
98 - Assist systems	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Fitting locations	4
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	4
2.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	6
2.3 Overview of fitting locations – senders, sensors and control units in rear section of vehicle	6
3 Adaptive cruise control	8
3.1 Assembly overview - adaptive cruise control	8
3.2 Removing and installing adaptive cruise control unit [J428]	8
3.3 Necessity of calibration	10
3.4 Adjusting/calibrating adaptive cruise control unit	12
4 Lane change assist	16
4.1 Removing and installing lane change assist control unit [J769]/[J770]	16
4.2 Removing and installing front radar sensor control unit for object detection [J1088]/[J1089]	16
4.3 Removing and installing lane change assist warning lamp in exterior mirror	17
5 Reversing camera system	19
5.1 Calibrating reversing camera [R189]	19
5.2 Removing and installing reversing camera [R189]	23
6 Front camera for driver assist systems	25
6.1 Removing and installing front camera for driver assist systems [R242]	25
6.2 Removing and installing windscreen heater for front sensors [Z113]	26
6.3 Calibrating front camera for driver assist systems [R242]	26
7 Overhead view camera	35
7.1 Removing and installing control unit for overhead view camera [J928]	35
7.2 Removing and installing front overhead view camera [R243]	36
7.3 Removing and installing left/right overhead view camera [R244]/[R245]	37
7.4 Removing and installing rear overhead view camera [R246]	38
7.5 Calibrating overhead view camera system	38
8 Parking aid	41
8.1 Removing and installing front parking aid senders [G252]/[G253]/[G254]/[G255]	41
8.2 Removing and installing rear parking aid senders [G203]/[G204]/[G205]/[G206]	42
8.3 Removing and installing parking aid control unit [J446]	44
8.4 Removing and installing parking aid control unit [J446], right-hand drive vehicle	44
8.5 Removing and installing holder for parking aid control unit [J446]	45
9 Parking aid with park assist steering	47
9.1 Removing and installing front parking aid senders [G252]/[G253]/[G254]/[G255]	47
9.2 Removing and installing rear parking aid senders [G203]/[G204]/[G205]/[G206]	48
9.3 Removing and installing front park assist steering senders [G568]/[G569]	50
9.4 Removing and installing rear park assist steering senders [G716]/[G717]	51
9.5 Removing and installing parking aid control unit [J446]	52
9.6 Removing and installing parking aid control unit [J446], right-hand drive vehicle	53



9.7	Removing and installing holder for parking aid control unit [J446]	53
-----	--	----