



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
91 - Communication	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Fitting locations	4
2.1 Overview of fitting locations - components/control units in centre section of vehicle	4
2.2 Overview of fitting locations – components/control units in rear section of vehicle	6
3 Infotainment system	9
3.1 Removing and installing control unit for front display and information control panel [J685]	9
3.2 Removing and installing control unit 1 for information electronics [J794]	10
4 Sound system	12
4.1 Removing and installing front treble loudspeakers [R20]/[R22]	12
4.2 Removing and installing rear treble loudspeakers [R14]/[R16]	12
4.3 Removing and installing mid-range loudspeaker	13
4.4 Removing and installing front bass loudspeakers	14
4.5 Removing and installing rear bass loudspeakers	15
4.6 Removing and installing loudspeaker for emergency call module [R335]	16
5 Sound system, with digital sound package	18
5.1 Removing and installing digital sound package control unit [J525]	18
5.2 Removing and installing front treble loudspeakers [R20]/[R22]	19
5.3 Removing and installing rear treble loudspeakers [R14]/[R16]	19
5.4 Removing and installing mid-range loudspeaker	20
5.5 Removing and installing front bass loudspeakers	21
5.6 Removing and installing rear bass loudspeakers	22
5.7 Removing and installing effect loudspeakers	24
5.8 Removing and installing subwoofer [R211]	24
5.9 Removing and installing loudspeaker for emergency call module [R335]	26
6 Aerials	27
6.1 Removing and installing internet access control unit [J666]	27
6.2 Removing and installing aerial module	28
6.3 Removing and installing frequency modulation (FM) frequency filters [R178]/[R179]	29
6.4 Removing and installing roof aerial [RX5]	29
6.5 Removing and installing LTE aerial	30
7 Online services	32
7.1 Removing and installing emergency call module control unit and communication unit [J949]	32
7.2 Removing and installing emergency battery, telematics [A16]	33
8 External multimedia devices, front and rear	35
8.1 Removing and installing USB connection 1 [U41]	35
8.2 Removing and installing USB charging socket 1 [U37]	35
9 External multimedia devices	37
9.1 Removing and installing USB connection 1 [U41]	37
10 Multifunction steering wheel	38
10.1 Assembly overview – multifunction steering wheel	38



10.2	Removing and installing multifunction buttons in steering wheel [E441]/[E440]	39
10.3	Removing and installing Tiptronic switch in steering wheel [E439]/[E438]	42
10.4	Removing and installing control unit for steering wheel contact detection [J1158]	42
11	Telephone	44
11.1	Removing and installing charging unit 1 for mobile devices [J1146]	44
11.2	Removing and installing aerial amplifier for mobile telephone [R86]	44