



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Electrical components</b>	<b>2</b>
2.1 Access to diagnoses	2
<b>3 Identification</b>	<b>4</b>
3.1 Gearbox identification	4
<b>4 Technical data</b>	<b>5</b>
4.1 Capacities	5
<b>30 - Clutch</b>	<b>6</b>
<b>1 Safety and repair instructions</b>	<b>6</b>
1.1 Safety information	6
1.2 Repair instructions	6
<b>2 Clutch</b>	<b>7</b>
2.1 Renewing input shaft seal	7
<b>3 Clutch mechanism</b>	<b>8</b>
3.1 Assembly overview – clutch engagement mechanism	8
3.2 Removing and installing clutch engagement mechanism	8
<b>34 - Controls, housing</b>	<b>11</b>
<b>1 Safety and repair instructions</b>	<b>11</b>
1.1 Safety information	11
1.2 Repair instructions	11
<b>2 Mechatronic unit</b>	<b>12</b>
2.1 Assembly overview – mechatronic unit	12
2.2 Removing and installing sump	13
2.3 Removing and installing mechatronic unit	16
<b>3 Selector mechanism</b>	<b>20</b>
3.1 Assembly overview – selector mechanism, shift-by-wire, selector lever in centre console	20
3.2 Assembly overview – selector mechanism, shift-by-wire, selector lever at steering column	22
3.3 Assembly overview – selector mechanism, gear knob	24
3.4 Manual release from P position, shift-by-wire, selector lever centre console	26
3.5 Manual release from position P, gear knob	27
3.6 Removing and installing selector lever handle	29
3.7 Bringing interlock button in handle into installation position	31
3.8 Removing and installing selector mechanism	31
3.9 Checking selector mechanism	34
3.10 Removing and installing selector lever cable	38
3.11 Checking and adjusting selector lever cable	41
3.12 Renewing selector shaft seal	44
<b>4 Removing and installing gearbox</b>	<b>46</b>
4.1 Assembly overview – gearbox	46
4.2 Removing and installing gearbox	48
<b>5 Gearbox transport</b>	<b>50</b>
5.1 Transporting gearbox	50
<b>6 Gearbox housing, clutch housing</b>	<b>51</b>
6.1 Removing and installing cap, clamped cap	51
6.2 Removing and installing cap, bolt-on cap	52
6.3 Removing and installing cap, bolt-on cap with slip contact	53



<b>7</b>	<b>Gear oil circuit</b> .....	<b>55</b>
7.1	Assembly overview – gear oil circuit .....	55
7.2	Removing and installing gear oil cooler .....	55
7.3	Removing and installing gear oil filter .....	58
<b>8</b>	<b>Gear oil</b> .....	<b>60</b>
8.1	Assembly overview – oil drain and inspection plugs .....	60
8.2	Checking gear oil level .....	60
8.3	Draining and filling gear oil .....	63
<b>35 - Gears, shafts</b>	.....	<b>67</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>67</b>
1.1	Safety information .....	67
1.2	Repair instructions .....	67
<b>2</b>	<b>Dismantling and assembling gears and shafts</b> .....	<b>68</b>
2.1	Currently, there are no approved repairs for gears and shafts. In the event of damage, renew the entire component. ....	68
<b>39 - Final drive - differential</b>	.....	<b>69</b>
<b>1</b>	<b>Safety and repair instructions</b> .....	<b>69</b>
1.1	Safety information .....	69
1.2	Repair instructions .....	69
<b>2</b>	<b>Seals</b> .....	<b>70</b>
2.1	Assembly overview – seals .....	70
2.2	Renewing left seal .....	70
2.3	Renewing right seal .....	72