



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
3 Identification	4
3.1 Gearbox identification	4
4 Technical data	5
4.1 Capacities	5
30 - Clutch	6
1 Safety and repair instructions	6
1.1 Safety information	6
1.2 Repair instructions	6
2 Clutch	7
2.1 Assembly overview - dual clutch	7
2.2 Removing and installing clutch end cover	7
2.3 Removing dual clutch	11
2.4 Installing dual clutch	13
34 - Controls, housing	22
1 Safety and repair instructions	22
1.1 Safety information	22
1.2 Repair instructions	22
2 Mechatronic unit	23
2.1 Assembly overview – mechatronic unit	23
2.2 Removing and installing oil pan	24
2.3 Removing and installing mechatronic unit	25
3 Bevel box	29
3.1 Assembly overview - bevel box	29
3.2 Removing bevel box	30
3.3 Installing bevel box	33
4 Selector mechanism	35
4.1 Assembly overview – selector mechanism, shift-by-wire, selector lever in centre console	35
4.2 Assembly overview – selector mechanism, shift-by-wire, selector lever at steering column	37
4.3 Assembly overview – selector mechanism, gear knob	39
4.4 Manual release from P position, shift-by-wire, selector lever centre console	41
4.5 Manual release from position P, gear knob	42
4.6 Removing and installing selector lever handle	44
4.7 Bringing interlock button in handle into installation position	46
4.8 Removing and installing selector mechanism	46
4.9 Checking selector mechanism	48
4.10 Removing and installing selector lever cable	52
4.11 Checking and adjusting selector lever cable, clamped cable end-piece	56
4.12 Checking and adjusting selector lever cable, threaded cable end-piece	57
4.13 Renewing selector shaft seal	59
5 Removing and installing gearbox	62
5.1 Specified torques for gearbox	62
5.2 Removing gearbox, vehicles with diesel engine	62
5.3 Removing gearbox, vehicles with petrol engine	69
5.4 Installing gearbox	75



6	Assembly mountings	79
6.1	Assembly overview - assembly mountings	79
7	Gearbox transport	80
7.1	Transporting gearbox	80
8	Securing to engine and gearbox support	81
8.1	Secure gearbox on engine and gearbox support	81
8.2	Securing bevel box/front differential lock to engine and gearbox support	81
9	Gear oil circuit	83
9.1	Assembly overview – gear oil circuit	83
9.2	Removing and installing gear oil cooler	83
9.3	Removing and installing gear oil filter	86
9.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil [V475]	87
10	Gear oil	90
10.1	Assembly overview – oil drain and inspection plugs	90
10.2	Checking gear oil level	90
10.3	Draining and filling gear oil	93
11	Front differential lock	96
11.1	Assembly overview - front differential lock	96
11.2	Removing front differential lock	96
11.3	Installing front differential lock	99
11.4	Removing and installing axle differential lock control unit J647	101
35	Gears, shafts	103
1	Safety and repair instructions	103
1.1	Safety information	103
1.2	Repair instructions	103
2	Dismantling and assembling gears and shafts	104
2.1	Currently, there are no approved repairs for gears and shafts. In the event of damage, renew the entire component.	104
39	Final drive - differential	105
1	Safety and repair instructions	105
1.1	Safety information	105
1.2	Repair instructions	105
2	Gear oil	106
2.1	Checking gear oil level	106
2.2	Draining and filling gear oil	107
3	Differential	110
3.1	Removing and installing right flange shaft	110
3.2	Renewing needle bearing for right flange shaft	111
3.3	Renewing ball bearing for flange shaft	112
4	Components of bevel box	114
4.1	Renewing oil seal for bevel box	114
4.2	Removing and installing output flange	118
4.3	Assembly overview – components of bevel box	121
5	Seals	128
5.1	Overview of fitting locations - oil seals	128
5.2	Renewing left seal	128
5.3	Renewing right seal	130
6	Components of front differential lock	133
6.1	Assembly overview - components of front differential lock	133
6.2	Removing and installing coupling for front differential lock	135
6.3	Removing and installing pump for front differential lock	135
6.4	Checking function	136



6.5	Checking oil level for front differential lock	136
6.6	Draining and filling oil for front differential lock	137
6.7	Renewing seals for front differential lock	139