



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
3 Identification	4
3.1 Gearbox identification	4
4 Technical data	5
4.1 Capacities	5
30 - Clutch	6
1 Safety information and repair notes	6
1.1 Safety information	6
1.2 Repair instructions	6
2 Clutch mechanism	7
2.1 Assembly overview – clutch engagement mechanism	7
2.2 Removing and installing clutch engagement mechanism	9
2.3 Adjusting clutch engagement mechanism	11
2.4 Removing and installing ball-head pin	19
3 Clutch	20
3.1 Assembly overview – dual clutch	20
3.2 Removing dual clutch	20
3.3 Installing dual clutch	23
3.4 Renewing input shaft seal	26
3.5 Renewing oil seal for inner input shaft	27
34 - Controls, housing	29
1 Safety information and repair notes	29
1.1 Safety information	29
1.2 Repair instructions	29
2 Mechatronic unit	30
2.1 Assembly overview – mechatronic unit	30
2.2 Removing and installing mechatronic unit	31
2.3 Renewing clutch actuator piston	36
2.4 Setting mechatronic unit to removal position by hand	39
3 Selector mechanism	41
3.1 Assembly overview – selector mechanism, shift-by-wire, selector lever in centre console	41
3.2 Assembly overview – selector mechanism, shift-by-wire, selector lever at steering column	43
3.3 Assembly overview – selector mechanism, gear knob	45
3.4 Manual release from P position, shift-by-wire, selector lever centre console	47
3.5 Manual release from position P, gear knob	48
3.6 Removing and installing selector lever handle, Golf, Golf Estate	50
3.7 Removing and installing selector lever handle, Passat, Passat Estate	51
3.8 Removing and installing selector lever handle, Touran	53
3.9 Removing and installing selector lever handle, T-Roc, T-Roc Cabriolet	55
3.10 Removing and installing selector lever handle, Polo, Taigo, Virtus, SV	57
3.11 Removing and installing selector lever handle, T-Cross, Taigun	59
3.12 Bringing interlock button in handle into installation position	61
3.13 Removing and installing selector mechanism	62
3.14 Checking selector mechanism	64
3.15 Removing and installing selector lever cable	68



3.16	Checking and adjusting selector lever cable, clamped cable end-piece	71
3.17	Checking and adjusting selector lever cable, bolt-on cable end-piece	73
3.18	Renewing selector shaft seal	75
4	Removing and installing gearbox	76
4.1	Specified torques for gearbox	76
4.2	Removing gearbox	76
4.3	Installing gearbox	80
5	Assembly mountings	83
5.1	Assembly overview – assembly mountings	83
5.2	Removing and installing gearbox bracket	83
6	Gearbox transport	85
6.1	Transporting gearbox	85
7	Securing to engine and gearbox support	86
7.1	Secure gearbox on engine and gearbox support	86
8	Gear oil	87
8.1	Assembly overview – oil drain and inspection plugs	87
8.2	Draining and filling gear oil	87
8.3	Draining and filling hydraulic fluid for mechatronic unit	88
35 - Gears, shafts		90
1	Safety information and repair notes	90
1.1	Safety information	90
1.2	Repair instructions	90
2	Parking lock	91
2.1	Assembly overview – parking lock	91
2.2	Removing and installing cover for parking lock	91
2.3	Removing and installing parking lock	93
39 - Final drive - differential		94
1	Safety information and repair notes	94
1.1	Safety information	94
1.2	Repair instructions	94
2	Seals	95
2.1	Assembly overview – seals	95
2.2	Renewing seal	95
3	Differential	98
3.1	Removing and installing flange shaft	98
3.2	Removing and installing stub shaft	99