



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Technical data	2
2.1 Test and adjustment values	2
3 Electrical components	3
3.1 Access to diagnoses	3
20 - Fuel supply system	4
1 Safety information and repair notes	4
1.1 Safety information	4
1.2 Repair instructions	4
2 Fuel tank, Passat	5
2.1 Assembly overview – fuel tank, front-wheel drive	5
2.2 Assembly overview – fuel tank, all-wheel drive	6
2.3 Emptying fuel tank	8
2.4 Removing and installing fuel tank, front-wheel drive	17
2.5 Removing and installing fuel tank, four-wheel drive	23
2.6 Renewing seal for cap	30
2.7 Checking earth cable on filler neck of fuel tank	31
3 Fuel tank, front-wheel drive, Golf, T-Roc	33
3.1 Assembly overview – fuel tank, torsion beam axle	33
3.2 Assembly overview – fuel tank, multi-link rear suspension	35
3.3 Emptying fuel tank	37
3.4 Removing and installing fuel tank, torsion beam axle	46
3.5 Removing and installing fuel tank, multi-link rear suspension	52
3.6 Renewing seal for cap	59
3.7 Checking earth cable on filler neck of fuel tank	60
4 Fuel tank, all-wheel drive, Golf, T-Roc	62
4.1 Assembly overview - fuel tank	62
4.2 Emptying fuel tank	64
4.3 Removing and installing fuel tank	73
4.4 Renewing seal for cap	80
4.5 Checking earth cable on filler neck of fuel tank	81
5 Fuel tank, all-wheel drive, Tiguan	83
5.1 Assembly overview - fuel tank	83
5.2 Emptying fuel tank	85
5.3 Removing and installing fuel tank	94
5.4 Renewing seal for cap	101
5.5 Checking earth cable on filler neck of fuel tank	102
6 Fuel tank, front-wheel drive, Touran, Tiguan	103
6.1 Assembly overview - fuel tank	103
6.2 Emptying fuel tank	105
6.3 Removing and installing fuel tank	114
6.4 Renewing seal for cap	120
6.5 Checking earth cable on filler neck of fuel tank	121
7 Fuel tank; Fuel tank leak detection	123
7.1 Assembly overview - fuel tank	123
7.2 Emptying fuel tank	125
7.3 Removing and installing fuel tank	134
7.4 Checking earth cable on filler neck of fuel tank	141



8	Fuel delivery unit/fuel gauge sender	143
8.1	Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive ..	143
8.2	Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive ..	144
8.3	Removing and installing fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive	146
8.4	Removing and installing fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive	151
8.5	Removing and installing fuel gauge sender [G]	158
8.6	Removing and installing fuel gauge sender 2 [G169]	161
8.7	Removing and installing assembly opening cover	164
9	Plug-in connectors	166
9.1	Disconnecting plug-in connectors	166
10	Activated charcoal filter with fuel tank leak detection	171
10.1	Connection diagram – activated charcoal filter system	171
10.2	Assembly overview – activated charcoal filter system	172
10.3	Removing and installing activated charcoal filter	174
10.4	Checking fuel system for leaks	176
10.5	Removing and installing fuel system diagnostic pump	186
10.6	Removing and installing air filter for activated charcoal filter	187
10.7	Removing and installing control unit for fuel tank leak detection [J909]	187
11	Activated charcoal filter system	189
11.1	Connection diagram – activated charcoal filter system	189
11.2	Assembly overview – activated charcoal filter system	192
11.3	Removing and installing activated charcoal filter	193
11.4	Checking fuel tank breather	195
12	Accelerator mechanism	202
12.1	Assembly overview – accelerator pedal module	202
12.2	Removing and installing accelerator pedal module [GX2]	202
13	Fuel pump	204
13.1	Checking fuel system pressurisation pump [G6], EA888evo4	204
13.2	Checking fuel system pressurisation pump [G6], EA211, EA888	208
13.3	Connecting test instrument adapter for voltage measurement at fuel delivery unit	219
13.4	Connecting remote control	220
13.5	Removing and installing fuel pump control unit [J538]	222
13.6	Checking suction-jet pump	223
14	Fuel lines	225
14.1	Removing and installing fuel line for auxiliary/supplementary heater	225
14.2	Removing and installing fuel lines	227
15	Senders and sensors	233
15.1	Assembly overview – fuel quality sender	233
15.2	Removing and installing fuel quality sender	233