



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Technical data	2
2.1 Test and adjustment values	2
3 Electrical components	3
3.1 Access to diagnoses	3
20 - Fuel supply system	4
1 Procedure in event of misfuelling	4
1.1 Procedure in event of misfuelling	4
2 Fuel tank, Passat	9
2.1 Assembly overview – fuel tank, front-wheel drive	9
2.2 Removing and installing fuel tank, front-wheel drive	10
2.3 Assembly overview – fuel tank, all-wheel drive	15
2.4 Removing and installing fuel tank, four-wheel drive	17
2.5 Emptying fuel tank	22
2.6 Removing and installing misfuelling prevention device	31
2.7 Deactivating misfuelling prevention device	36
2.8 Renewing seal for cap	37
2.9 Checking earth cable on filler neck of fuel tank	37
3 Fuel tank, front-wheel drive, Golf, T-Roc	39
3.1 Assembly overview – fuel tank, torsion beam axle	39
3.2 Assembly overview – fuel tank, multi-link rear suspension	41
3.3 Emptying fuel tank	43
3.4 Removing and installing fuel tank, torsion beam axle	52
3.5 Removing and installing fuel tank, multi-link rear suspension	60
3.6 Removing and installing misfuelling prevention device	69
3.7 Deactivating misfuelling prevention device	74
3.8 Renewing seal for cap	75
3.9 Checking earth cable on filler neck of fuel tank	75
4 Fuel tank, all-wheel drive, Golf, T-Roc	77
4.1 Assembly overview - fuel tank	77
4.2 Emptying fuel tank	78
4.3 Removing and installing fuel tank	88
4.4 Removing and installing misfuelling prevention device	97
4.5 Deactivating misfuelling prevention device	101
4.6 Renewing seal for cap	102
4.7 Checking earth cable on filler neck of fuel tank	103
5 Fuel tank, all-wheel drive, Tiguan	105
5.1 Assembly overview - fuel tank	105
5.2 Removing and installing fuel tank	107
5.3 Emptying fuel tank	112
5.4 Removing and installing misfuelling prevention device	122
5.5 Deactivating misfuelling prevention device	126
5.6 Renewing seal for cap	127
5.7 Checking earth cable on filler neck of fuel tank	128
6 Fuel tank, front-wheel drive, Touran, Tiguan	130
6.1 Assembly overview - fuel tank	130
6.2 Removing and installing fuel tank	132
6.3 Emptying fuel tank	137



6.4	Removing and installing misfuelling prevention device	147
6.5	Deactivating misfuelling prevention device	151
6.6	Renewing seal for cap	152
6.7	Checking earth cable on filler neck of fuel tank	153
7	Fuel delivery unit, fuel gauge sender	155
7.1	Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive	155
7.2	Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive	156
7.3	Removing and installing fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive	158
7.4	Removing and installing fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive	163
7.5	Removing and installing fuel gauge sender [G]	170
7.6	Removing and installing fuel gauge sender 2 [G169]	173
7.7	Removing and installing assembly opening cover	176
8	Plug-in connectors	178
8.1	Disconnecting plug-in connectors	178
9	Fuel filter	183
9.1	Assembly overview - fuel filter	183
9.2	Removing and installing fuel filter	185
10	Accelerator mechanism	189
10.1	Assembly overview – accelerator pedal module	189
10.2	Removing and installing accelerator pedal module [GX2]	190
11	Fuel pump, EA288	191
11.1	Connecting remote control to fuel delivery unit	191
11.2	Removing and installing fuel pump control unit [J538]	193
11.3	Checking suction-jet pump	194
11.4	Removing and installing suction-jet pump	195
11.5	Checking fuel pressure	195
11.6	Checking fuel delivery rate	200
12	Fuel pump, EA288evo	207
12.1	Connecting remote control to fuel delivery unit	207
12.2	Removing and installing fuel pump control unit [J538]	209
12.3	Checking suction-jet pump	210
12.4	Removing and installing suction-jet pump	211
12.5	Checking fuel pressure	211
12.6	Checking fuel delivery rate	215
13	Fuel lines	222
13.1	Removing and installing fuel line for auxiliary/supplementary heater	222
13.2	Removing and installing fuel lines	224
13.3	Fuel hoses in engine compartment	230
14	Senders and sensors	233
14.1	Removing and installing water separator sender [G63]	233