



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Technical data	2
2.1 Test and adjustment values	2
3 Electrical components	3
3.1 Access to diagnoses	3
20 - Fuel supply system	4
1 Safety information and repair notes	4
1.1 Safety information	4
1.2 Repair instructions	4
2 Fuel tank, Tiguan	5
2.1 Assembly overview - fuel tank	5
2.2 Emptying fuel tank	7
2.3 Removing and installing fuel tank	16
2.4 Removing and installing fuel tank switch-off valve	20
2.5 Renewing seal for cap	21
2.6 Checking earth cable on filler neck of fuel tank	21
3 Fuel tank, Golf	23
3.1 Assembly overview - fuel tank	23
3.2 Emptying fuel tank	25
3.3 Removing and installing fuel tank	34
3.4 Removing and installing fuel tank switch-off valve	38
3.5 Renewing seal for cap	39
3.6 Checking earth cable on filler neck of fuel tank	39
4 Fuel tank, Passat	41
4.1 Assembly overview - fuel tank	41
4.2 Emptying fuel tank	43
4.3 Removing and installing fuel tank	52
4.4 Removing and installing fuel tank switch-off valve	56
4.5 Renewing seal for cap	57
4.6 Checking earth cable on filler neck of fuel tank	58
5 Fuel delivery unit/fuel gauge sender, Tiguan	59
5.1 Assembly overview – fuel delivery unit/fuel gauge sender	59
5.2 Removing and installing fuel delivery unit, fuel gauge sender	59
5.3 Removing and installing fuel gauge sender [G]	63
5.4 Removing and installing assembly opening cover	66
6 Fuel delivery unit/fuel gauge sender, Golf	67
6.1 Assembly overview – fuel delivery unit/fuel gauge sender	67
6.2 Removing and installing fuel delivery unit, fuel gauge sender	67
6.3 Removing and installing fuel gauge sender [G]	71
6.4 Removing and installing assembly opening cover	74
7 Fuel delivery unit/fuel gauge sender, Passat	75
7.1 Assembly overview – fuel delivery unit/fuel gauge sender	75
7.2 Removing and installing fuel delivery unit, fuel gauge sender	76
7.3 Removing and installing fuel gauge sender [G]	79
7.4 Removing and installing assembly opening cover	82
8 Plug-in connectors	84
8.1 Disconnecting plug-in connectors	84



9	Activated charcoal filter system, Tiguan	89
9.1	Connection diagram – activated charcoal filter system	89
9.2	Assembly overview – activated charcoal filter system	89
9.3	Removing and installing activated charcoal filter	90
9.4	Checking fuel tank breather	91
10	Activated charcoal filter system, Golf	98
10.1	Connection diagram – activated charcoal filter system	98
10.2	Assembly overview – activated charcoal filter system	98
10.3	Removing and installing activated charcoal filter	99
10.4	Checking fuel tank breather	100
11	Activated charcoal filter system, Passat	107
11.1	Connection diagram – activated charcoal filter system	107
11.2	Assembly overview – activated charcoal filter system	107
11.3	Removing and installing activated charcoal filter	108
11.4	Checking fuel tank breather	109
12	Accelerator mechanism	114
12.1	Assembly overview – accelerator pedal module	114
12.2	Removing and installing accelerator pedal module [GX2]	115
13	Fuel pump	116
13.1	Checking fuel pressure	116
13.2	Checking fuel delivery rate	121
13.3	Connecting test instrument adapter to fuel delivery unit	127
13.4	Connecting remote control to fuel delivery unit	128
13.5	Removing and installing fuel pump control unit [J538]	130
13.6	Checking suction-jet pump	131
14	Fuel lines	133
14.1	Removing and installing fuel lines	133
14.2	Removing and installing fuel line for auxiliary/supplementary heater	138
15	Senders and sensors	141
15.1	Removing and installing tank pressure sensor	141