

001 - 1.5l petrol engine , DXDB	1-18
1. 1.5l petrol engine , DXDB	1
2. Main relay, Fuse holder B	2
3. Engine/motor control unit	3
4. Accelerator pedal module, Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	4
5. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	5
6. Onboard supply control unit, Engine/motor control unit, Fuel metering valve, Charge air cooling pump	6
7. Starter-alternator, Oil level and oil temperature sender, Data bus diagnostic interface, Engine/motor control unit	7
8. Dual exhaust gas temperature sensor 1, Engine/motor control unit	8
9. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	9
10. Throttle valve module, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	10
11. Intake manifold sender, Engine speed sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	11
12. Engine temperature regulation module, Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit	12
13. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Pressure differential sender for particulate filter, Engine/motor control unit	13
14. Engine/motor control unit, Exhaust camshaft control valve 1, Inlet camshaft control valve 1	14
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3	15
16. Function unit for active oil separation, Engine/motor control unit, Ignition coil 1 with output stage, Exhaust cam actuator for cylinder 3, Spark plug 1	16
17. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	17
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	18
002 - Auxiliary heater , (9M9)	19-22
1. Auxiliary heater , (9M9)	19
2. Auxiliary heater control unit, Fuse holder B, Fuse holder C, Metering pump	20
3. Auxiliary heater control unit	21
4. Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary heater	22
003 - Auxiliary air heater (PTC) , (7E6)	23-24
1. Auxiliary air heater (PTC) , (7E6)	23
2. Low heat output relay, Auxiliary air heater element	24
004 - Heated rear window	25-26
1. Heated rear window	25
2. Heated rear window relay, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Rear window	26
005 - Rain and light sensor	27-28
1. Rain and light sensor	27
2. Rain and light sensor, Onboard supply control unit, Fuse holder C	28
006 - Airbag systems , (0K0),(L0L)	29-42
1. Airbag systems , (0K0),(L0L)	29
2. Airbag control unit, Emergency call module control unit and communication unit, Fuse holder C, Diagnostic connection	30
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Onboard supply control unit, Front roof module	31
4. Airbag control unit, Front passenger airbag unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	32
5. Front passenger side belt switch, Driver seat adjustment operating unit, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side	33
6. Driver side belt switch, Seat occupied sensor on driver side, Airbag control unit, Side airbag igniter on driver side	34
7. Front passenger seat adjustment operating unit, Twin belt buckle, Airbag control unit, Igniter for central airbag for occupant collision protection, driver side	35
8. Belt switch for seat row 2, passenger side, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	36
9. Side airbaa crash sensor on driver side. Side airbaa crash sensor on front passenger side. Airbaa	37

	control unit, Steering column electronics control unit, Airbag igniter on driver side	
	10. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	38
	11. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	39
	12. Airbag control unit, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	40
	13. Airbag control unit, Data bus diagnostic interface, Front seat belt on passenger side, Front passenger seat belt tensioner igniter 1	41
	14. Airbag control unit, Front seat belt on driver side, Driver seat belt tensioner igniter 1	42
007 -	Airbag systems , (OK3),(OK4),(L0L)	43-57
	1. Airbag systems , (OK3),(OK4),(L0L)	43
	2. Airbag control unit, Emergency call module control unit and communication unit, Fuse holder C, Diagnostic connection	44
	3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Onboard supply control unit, Front roof module	45
	4. Airbag control unit, Front passenger airbag unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	46
	5. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side	47
	6. Driver side belt switch, Seat occupied sensor on driver side, Airbag control unit, Side airbag igniter on driver side	48
	7. Twin belt buckle, Belt switch for seat row 2, passenger side, Airbag control unit, Igniter for central airbag for occupant collision protection, driver side	49
	8. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Side airbag crash sensor on driver side, Rear seat occupied sensor, centre, Airbag control unit	50
	9. Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	51
	10. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	52
	11. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	53
	12. Airbag control unit, Data bus diagnostic interface, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	54
	13. Airbag control unit, Front seat belt on passenger side, Front passenger seat belt tensioner igniter 1	55
	14. Airbag control unit, Front seat belt on driver side, Driver seat belt tensioner igniter 1	56
	15. Hybrid battery unit, Battery, 48 V, Airbag control unit, Battery regulation control unit	57
008 -	Airbag systems , (OK0),(L0R)	58-71
	1. Airbag systems , (OK0),(L0R)	58
	2. Airbag control unit, Emergency call module control unit and communication unit, Fuse holder C, Diagnostic connection	59
	3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Onboard supply control unit, Front roof module	60
	4. Airbag control unit, Front passenger airbag unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	61
	5. Seat occupied sensor on driver side, Airbag control unit, Side airbag igniter on driver side, Igniter for central airbag for occupant collision protection, driver side	62
	6. Driver side belt switch, Front passenger side belt switch, Driver seat adjustment operating unit, Seat occupied sensor on front passenger side, Airbag control unit	63
	7. Front passenger seat adjustment operating unit, Twin belt buckle, Belt switch for seat row 2, driver side, Airbag control unit, Side airbag igniter on front passenger side	64
	8. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Side airbag crash sensor on front passenger side, Rear seat occupied sensor, centre, Airbag control unit	65
	9. Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	66
	10. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	67

11. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	68
12. Airbag control unit, Data bus diagnostic interface, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	69
13. Airbag control unit, Front seat belt on passenger side, Front passenger seat belt tensioner igniter 1	70
14. Airbag control unit, Front seat belt on driver side, Driver seat belt tensioner igniter 1	71
009 - Airbag systems , (0K3),(0K4),(L0R)	72-86
1. Airbag systems , (0K3),(0K4),(L0R)	72
2. Airbag control unit, Emergency call module control unit and communication unit, Fuse holder C, Diagnostic connection	73
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Onboard supply control unit, Front roof module	74
4. Airbag control unit, Front passenger airbag unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	75
5. Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side	76
6. Driver side belt switch, Front passenger side belt switch, Airbag control unit, Side airbag igniter on driver side, Igniter for central airbag for occupant collision protection, driver side	77
7. Twin belt buckle, Seat occupied sensor on driver side, Airbag control unit	78
8. Belt switch for seat row 2, driver side, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	79
9. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	80
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit	81
11. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	82
12. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	83
13. Airbag control unit, Front seat belt on passenger side, Front passenger seat belt tensioner igniter 1	84
14. Airbag control unit, Front seat belt on driver side, Driver seat belt tensioner igniter 1	85
15. Hybrid battery unit, Battery, 48 V, Airbag control unit, Battery regulation control unit	86
010 - Assist systems , (JX1)	87-91
1. Assist systems , (JX1)	87
2. Data bus diagnostic interface, Fuse holder C	88
3. Front left radar sensor control unit for object detection	89
4. Front right radar sensor control unit for object detection	90
5. Coupling point on front left bumper	91
011 - Front lid contact switch	92-93
1. Front lid contact switch	92
2. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit	93
012 - USB charging sockets , (U9E),(U9G)	94-96
1. USB charging sockets , (U9E),(U9G)	94
2. Onboard supply control unit, Fuse holder C, USB connection 1, USB charging socket in headlining	95
3. USB charging socket 1	96
013 - Door control units, driver side	97-111
1. Door control units, driver side	97
2. Driver door control unit, Fuse holder C	98
3. Driver door control unit, Central locking SAFELOCK function warning lamp	99
4. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	100
5. Operating unit for window regulator in driver door, Rear lid remote release button, Driver door control unit	101
6. Exterior mirror adjuster, Remote release button for fuel filler flap and rear lid, Driver door control unit	102
7. Central locking button, Driver door control unit, Driver door lock unit	103
8. Driver door control unit, Driver side exterior mirror	104
9. Driver door control unit, Driver side exterior mirror	105
10. Rear driver side door control unit	106

11. Operating unit in rear door, driver side, Rear driver side door control unit, Rear driver side window regulator motor	107
12. Rear driver side door control unit, Rear door lock unit, driver side	108
13. Rear driver side door control unit, Rear door lock unit, driver side	109
14. Rear door lock unit, driver side	110
15. Data bus diagnostic interface	111
014 - Door control units, passenger side	112-121
1. Door control units, passenger side	112
2. Front passenger door control unit, Fuse holder C	113
3. Window regulator switch in front passenger door, Front passenger door control unit	114
4. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor	115
5. Front passenger door control unit, Passenger side exterior mirror	116
6. Operating unit in rear door, passenger side, Front passenger door control unit, Rear passenger side door control unit, Passenger side exterior mirror	117
7. Rear passenger side door control unit	118
8. Rear passenger side door control unit, Rear door lock unit, passenger side, Rear passenger side window regulator motor	119
9. Rear passenger side door control unit, Rear door lock unit, passenger side	120
10. Data bus diagnostic interface	121
015 - Fuel system , DNPB,DUCA,DUCB,DXDB	122-125
1. Fuel system , DNPB,DUCA,DUCB,DXDB	122
2. Fuel delivery unit, Engine/motor control unit, Fuse holder B	123
3. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	124
4. Tank flap release, Onboard supply control unit	125
016 - Fuel system , DXNB,DXPA,DXPB	126-128
1. Fuel system , DXNB,DXPA,DXPB	126
2. Fuel delivery unit, Engine/motor control unit, Fuse holder B	127
3. Tank flap release, Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	128
017 - Radiator fan	129-133
1. Radiator fan	129
2. Fuse holder B, Fuse carrier 4	130
3. Radiator fan	131
4. Engine/motor control unit, Radiator fan	132
5. Coolant shortage indicator sender, Onboard supply control unit, Radiator fan	133
018 - Brake system	134-144
1. Brake system	134
2. Fuse holder B, Fuse holder C, Fuse carrier 4	135
3. ABS control unit	136
4. ABS control unit, Engine/motor control unit, Left parking brake motor	137
5. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	138
6. ABS control unit	139
7. Electromechanical parking brake button, Front right speed sensor, Front left speed sensor, ABS control unit	140
8. Electromechanical parking brake button, Brake servo	141
9. Brake servo	142
10. Front right brake pad wear sender, Onboard supply control unit	143
11. Data bus diagnostic interface	144
019 - Battery, starter and alternator , (0K4),(9G8)	145-150
1. Battery, starter and alternator , (0K4),(9G8)	145
2. Fuse holder A, Fuse holder B, Fuse carrier 4	146
3. Voltage converter (48 V/12 V), Fuse for voltage converter	147
4. Voltage converter (48 V/12 V), Battery, 48 V, Airbag control unit, Data bus diagnostic interface	148
5. Battery, 48 V, Starter-alternator	149
6. Battery, Starter-alternator, Battery monitor control unit	150
020 - Battery, starter and alternator , (0K0),(8GU),(8GV)	151-154
1. Battery, starter and alternator , (0K0),(8GU),(8GV)	151
2. Fuse carrier 4, Fuse holder A, Fuse holder B	152
3. Starter, Alternator with voltage regulator, Data bus diagnostic interface, Fuse holder B	153
4. Battery, Battery monitor control unit	154
021 - Earthing concept in engine compartment	155-169
1. Earthing concept in engine compartment	155
2. ABS control unit, Battery monitor control unit, Brake servo	156
3. Starter-alternator, Alarm horn, Right horn, Auxiliary heater control unit, Engine sound generator control unit, Front right headlight	157
4. Bonnet contact switch 2. Front right brake pad wear sender. Air quality sensor. Engine/motor	158

control unit, Control unit 3 for break-in protection, Refrigerant shut-off valve for heater and air conditioning unit, Refrigerant expansion valve 1, Coolant valve for high-voltage battery	
5. Mechatronic unit for dual clutch gearbox, Radiator fan	159
6. Oil level and oil temperature sender, LED module for charging socket 1, Front left headlight, Relay and fuse carrier 1, Auxiliary hydraulic pump 1 for gearbox oil, Left washer jet heater element, Right washer jet heater element	160
7. Control unit for NOx sender, Control unit 3 for NOx sender, Oil level and oil temperature sender, Particulate sensor, Coolant pump for high-voltage battery	161
8. Bonnet contact switch, Control unit 2 for NOx sender, Fuse holder B, Air conditioner compressor	162
9. Adaptive cruise control unit, Control unit for cornering light and headlight range control, Control unit 2 for break-in protection, Relay and fuse carrier 2, Charge air cooling pump, Radiator blind control motor	163
10. Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	164
11. Charging unit 1 for high-voltage battery, Control unit 1 for activation of charging flap and charging socket, Light conductor for contour lighting in radiator grille, front right, Light conductor for contour lighting in radiator grille, front left, Coolant circulation pump before power and control electronics for electric drive	165
12. Left horn, Air conditioner compressor, High-voltage heater (PTC)	166
13. Function unit for active oil separation, Ignition coil 1 with output stage, Ignition coil 2 with output stage	167
14. Ignition coil 3 with output stage, Ignition coil 4 with output stage, Coolant circulation pump, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit	168
15. Three-phase current drive	169
022 - Earthing concept in interior	170-193
1. Earthing concept in interior	170
2. Fresh air blower control unit, Roof system control unit, Front right footwell light, Glove compartment light	171
3. Driver exterior door handle, Driver door control unit, Driver door opener illumination bulb, Light for left door storage compartment illumination, Light for front left sill panel moulding background lighting	172
4. Control unit for front passenger seat adjustment with memory function, Front right seat backrest fan 1, Rear right footwell light, Front right seat heating, Seat heating for front right seat backrest	173
5. Front passenger seat adjustment operating unit, Front passenger seat massage function button, Control unit for front right massage seat, Control unit for steering wheel contact detection, Valve block 1 in front passenger seat, Front right seat cushion fan 1, Front right seat depth adjustment fan	174
6. Hazard warning lights switch, Operating unit for lighting, 12 V socket 4, Parking lock actuator	175
7. Electromechanical parking brake button, Entry and start authorisation control unit, Control unit for electronic steering column lock, Heater and air conditioning system control unit, Storage compartment illumination bulb, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting	176
8. Operating and display unit for rear air conditioning system, Starter button, Vehicle interior temperature sensor, Control unit for head-up display, USB charging socket 1, USB charging socket in headlining	177
9. Onboard supply control unit, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Light 2 for dash panel background lighting, Light 2 for decorative backlighting in dash panel, passenger side	178
10. Parking aid control unit, Steering column electronics control unit, Data bus diagnostic interface, Dash panel insert, Front left footwell light, Fuse holder C	179
11. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Anti-theft alarm sensor, Front camera for driver assist systems, Diagnostic connection, Front roof module	180
12. Rear interior light, Rear interior light 2, Rear interior light 3, Rear left footwell light, Front left seat heating	181
13. Driver seat adjustment operating unit, Driver seat massage function button, Control unit for seat and steering column adjustment with memory function, Control unit for front left massage seat, Valve block 1 in driver seat, Front left seat backrest fan 1, Front left seat cushion fan 1, Front left seat depth adjustment fan, Seat heating for front left seat backrest	182
14. Rear left exterior door handle, Rear driver side door control unit	183
15. Rear left door storage compartment illumination bulb, Rear left entry light	184
16. Chip card reader control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for overhead view camera, TV tuner, Aerial amplifier for mobile telephone, USB connection 1	185
17. Internet access control unit, Emergency call module control unit and communication unit, Charaina unit 1 for mobile devices. Reversina camera	186

18. Voltage converter (48 V/12 V), Battery, 48 V, Rain and light sensor, Automatic anti-dazzle interior mirror, Heated windscreen	187
19. Front seat belt on driver side, Rear left seat heating, Heated backrest for rear left seat	188
20. Rear right exterior door handle, Rear right seat heating, Heated backrest for rear right seat	189
21. Rear passenger side door control unit, Rear right door storage compartment illumination bulb, Rear right entry light	190
22. Voltage converter, Fuel delivery unit, Fuel pump control unit, Front seat belt on passenger side	191
23. Front passenger door control unit, Front passenger door opener illumination bulb, Light for right door storage compartment illumination, Light for front right sill panel moulding background lighting	192
24. Front passenger exterior door handle	193
023 - Earthing concept in luggage compartment	194-201
1. Earthing concept in luggage compartment	194
2. Battery regulation control unit, Earth connection, in socket wiring harness, Earth connection 7, in main wiring harness, Earth point 1, on right rear wheel housing	195
3. Earth connection, in tail light cluster wiring harness, Earth connection 7, in main wiring harness	196
4. Tank flap release, Earth connection, in tail light cluster wiring harness, Earth connection 6, in main wiring harness, Earth connection 7, in main wiring harness, Earth connection 9, in main wiring harness	197
5. Battery monitor control unit, Earth connection 6, in main wiring harness, Earth point, centre on rear lid, Earth point, rear centre roof frame	198
6. Earth connection 3, in rear wiring harness, Earth connection 6, in rear wiring harness, Earth connection, in towing bracket wiring harness, Earth point, rear left side panel	199
7. Earth connection, in rear lid wiring harness, Earth connection 3, in rear wiring harness, Earth connection 1, in rear lid wiring harness, Earth connection, in rear lid feeder wiring harness	200
8. Earth connection, in rear lid wiring harness, Earth connection 1, in rear lid wiring harness, Earth connection, in rear lid feeder wiring harness	201
024 - Fuses in engine compartment	202-229
1. Fuses in engine compartment	202
2. Fuse holder A	203
3. Fuse holder C, Fuse carrier 4	204
4. Fuse carrier 4	205
5. Power and control electronics for electric drive, Fuse carrier 4	206
6. Relay and fuse carrier 1	207
7. Relay and fuse carrier 2	208
8. Fuse holder B	209
9. Fuse holder B	210
10. Fuse holder B	211
11. Engine sound generator control unit, Fuse holder B	212
12. Fuse holder B	213
13. Fuse holder B, Coolant pump for high-voltage battery	214
14. Fuse holder B	215
15. Fuse holder B	216
16. Air conditioning system relay, Engine component power supply relay, Fuse holder B	217
17. Fuse holder B	218
18. Fuse holder B	219
19. Fuse holder B	220
20. Refrigerant pressure and temperature sender, Pressure sender for refrigerant circuit, Refrigerant expansion valve 1, Air conditioner compressor, High-voltage heater (PTC)	221
21. Charging unit 1 for high-voltage battery, Control unit 1 for activation of charging flap and charging socket, Coolant valve for gearbox, Coolant circulation pump, Coolant circulation pump before power and control electronics for electric drive	222
22. Glow plug 4, Coupling point 1 for engine prewiring harness	223
23. Valve for oil pressure control, Coupling point 1 for engine prewiring harness	224
24. Glow plug 3, Coupling point 1 for engine prewiring harness	225
25. Glow plug 2, Coupling point 1 for engine prewiring harness, Coolant pump for low-temperature circuit	226
26. Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Piston cooling jet control valve	227
27. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6	228
28. Cam adjustment actuator 7, Cam adjustment actuator 8	229
025 - Fuses in interior	230-254
1. Fuses in interior	230
2. Fuse holder A. Fuse holder C. Fuse carrier 4	231

3. Fuse holder C	232
4. Fuse holder C	233
5. Fuse holder C	234
6. Fuse holder C	235
7. Fuse holder C	236
8. Fuse holder C	237
9. Fuse holder C	238
10. Fuse holder C	239
11. Fuse holder C	240
12. Fuse holder C	241
13. Fuse holder C	242
14. Relay for power sockets, Fuse holder C	243
15. Fuse holder C	244
16. Battery regulation control unit, Fuse holder C	245
17. Fuse holder C	246
18. Fuse holder C	247
19. Fuse holder C	248
20. Fuse holder C	249
21. Fuse holder C	250
22. Heated rear window relay, Fuse holder C	251
23. Terminal 15 voltage supply relay, Fuse holder C	252
24. Fuse holder B, Fuse holder C, Maintenance connector for high-voltage system	253
25. Fuse holder C, Fuse carrier 1, Fuse carrier 2	254
026 - 2.0l diesel engine , DXNB,DXPA,DXPB	255-277
1. 2.0l diesel engine , DXNB,DXPA,DXPB	255
2. Fuse holder B	256
3. Fuse holder B	257
4. Fuse holder C, Relay and fuse carrier 1	258
5. Engine/motor control unit	259
6. Onboard supply control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	260
7. Engine/motor control unit, Exhaust flap control unit	261
8. Accelerator pedal module, Air mass measurement module, Exhaust gas temperature sender 4, Engine/motor control unit	262
9. Oil level and oil temperature sender, Engine/motor control unit, Injector 2 for reducing agent, Radiator blind control motor	263
10. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Injector for reducing agent, Glow plug 1, Glow plug 2, Glow plug 4	264
11. Engine/motor control unit, Fuel pressure regulating valve, Coolant regulating valve, Piston cooling jet control valve, Glow plug 3	265
12. Inlet camshaft position sender, Engine/motor control unit, Heater element for crankcase breather, Actuator for engine temperature regulation	266
13. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Fuel pressure sender, Engine/motor control unit	267
14. Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit, Fuel metering valve	268
15. Engine outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust gas recirculation, Charge air temperature sender after charge air cooler, Engine/motor control unit	269
16. Throttle valve module, Coolant temperature sender, Charge air temperature sender before charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	270
17. Exhaust gas recirculation valve 2, Engine/motor control unit, Charge pressure positioner	271
18. Exhaust gas recirculation valve 1, Water separator sender, Engine/motor control unit	272
19. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 4	273
20. Engine/motor control unit, Injector, cylinder 3, Valve for oil pressure control, Auxiliary pump for heating	274
21. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Engine/motor control unit	275
22. Delivery unit for reducing agent metering system, Particulate sensor, Engine/motor control unit, Control unit for reducing agent heater	276
23. Delivery unit for reducing agent metering system, Engine/motor control unit, Brake servo, Radiator fan	277
027 - Anti-theft alarm system , (7AL)	278-279
1. Anti-theft alarm system , (7AL)	278
2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder C	279
028 - Dual clutch gearbox 0GC . (0IJ)	280-284

1. Dual clutch gearbox 0GC , (0IJ)	280
2. Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	281
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	282
4. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil, Parking lock actuator	283
5. Steering column electronics control unit, Data bus diagnostic interface	284
029 - Dual clutch gearbox 0CW , (0EG)	285-288
1. Dual clutch gearbox 0CW , (0EG)	285
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	286
3. Onboard supply control unit, Mechatronic unit for dual clutch gearbox	287
4. Steering column electronics control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Parking lock actuator	288
030 - 12 V sockets	289-290
1. 12 V sockets	289
2. Relay for power sockets, Fuse holder C, 12 V socket 3, 12 V socket 4	290
031 - Adaptive chassis control DCC , (2I2)	291-296
1. Adaptive chassis control DCC , (2I2)	291
2. Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve, Fuse holder C	292
3. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Front left shock absorber damping adjustment valve 2	293
4. Front left vehicle level sender, Front right vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve 2	294
5. Front right body acceleration sender, Electronically controlled damping control unit, Data bus diagnostic interface, Rear left shock absorber damping adjustment valve 2, Rear right shock absorber damping adjustment valve 2	295
6. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit	296
032 - All-wheel drive , (1X1)	297-299
1. All-wheel drive , (1X1)	297
2. All-wheel drive control unit, Fuse holder C	298
3. Data bus diagnostic interface	299
033 - Interior lights , (QQ0),(QQ6)	300-310
1. Interior lights , (QQ0),(QQ6)	300
2. Fuse holder C, Front roof module	301
3. Rear interior light, Front roof module	302
4. Rear interior light 2, Rear interior light 3	303
5. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror	304
6. Glove compartment light switch, Onboard supply control unit, Front right footwell light, Glove compartment light	305
7. Onboard supply control unit, Front left footwell light, Right luggage compartment light	306
8. Onboard supply control unit, Left luggage compartment light	307
9. Driver door control unit, Light for front left sill panel moulding background lighting	308
10. Front passenger door control unit, Rear right footwell light, Light for front right sill panel moulding background lighting	309
11. Rear left footwell light	310
034 - Trailer coupling , (#D0),(#D1),(1M5),(1M6),(1M9)	311-315
1. Trailer coupling , (#D0),(#D1),(1M5),(1M6),(1M9)	311
2. Trailer detector control unit, Fuse holder C	312
3. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface	313
4. Towing bracket release button, Trailer detector control unit, Trailer socket, Towing bracket	314
5. Trailer detector control unit, Trailer socket	315
035 - Adaptive cruise control , (8T3),(QK1)	316-319
1. Adaptive cruise control , (8T3),(QK1)	316
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	317
3. Adaptive cruise control unit, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	318
4. Adaptive cruise control unit	319
036 - Heated windscreen , (4GW)	320-321
1. Heated windscreen , (4GW)	320
2. Heater and air conditioning system control unit, Fuse holder B, Relay and fuse carrier 2, Heated windscreen	321

037 - Interior mirror	322-323
1. Interior mirror	322
2. Driver door control unit, Fuse holder C, Front roof module, Automatic anti-dazzle interior mirror	323
038 - Air conditioning system , (KH7)	324-331
1. Air conditioning system , (KH7)	324
2. Vehicle interior temperature sensor, Fresh air blower control unit, Heater and air conditioning system control unit, Fuse holder C	325
3. Air quality sensor, Pressure sender for refrigerant circuit, Heater and air conditioning system control unit	326
4. Left vent temperature sender, Right vent temperature sender, Heater and air conditioning system control unit, Air conditioner compressor	327
5. Rear vent temperature sender, Footwell vent temperature sender, Evaporator temperature sensor, Heater and air conditioning system control unit, Fresh air and air recirculation flap	328
6. Heater and air conditioning system control unit, Air distribution flap, Front right temperature flap	329
7. Heater and air conditioning system control unit, Front left temperature flap, Defroster flap	330
8. Data bus diagnostic interface, Heater and air conditioning system control unit, Rear temperature flap	331
039 - Data bus diagnostic interface and diagnostic connector	332-334
1. Data bus diagnostic interface and diagnostic connector	332
2. Data bus diagnostic interface, Fuse holder C, Diagnostic connection	333
3. Data bus diagnostic interface, Diagnostic connection	334
040 - Data bus network for ethernet	335-340
1. Data bus network for ethernet	335
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for head-up display, TV tuner, Diagnostic connection	336
3. Adaptive cruise control unit, Data bus diagnostic interface, Internet access control unit, Emergency call module control unit and communication unit, Dash panel insert, Front camera for driver assist systems	337
4. Data bus diagnostic interface, Reversing camera, Front overhead view camera	338
5. Control unit for overhead view camera, Rear overhead view camera, Driver side exterior mirror	339
6. Lane change assist control unit, Lane change assist control unit 2, Control unit for overhead view camera, Passenger side exterior mirror	340
041 - Data bus network for running gear CAN bus	341-343
1. Data bus network for running gear CAN bus	341
2. All-wheel drive control unit, Data bus diagnostic interface	342
3. ABS control unit, Power steering control unit, Brake servo	343
042 - Data bus network for convenience CAN bus	344-350
1. Data bus network for convenience CAN bus	344
2. Trailer detector control unit, Steering column electronics control unit, Data bus diagnostic interface, Rear lid control unit, Roof system control unit	345
3. Control unit for seat and steering column adjustment with memory function, Control unit for front passenger seat adjustment with memory function, Data bus diagnostic interface	346
4. Driver door control unit, Data bus diagnostic interface, Rear driver side door control unit	347
5. Front passenger door control unit, Data bus diagnostic interface, Charging unit 1 for mobile devices	348
6. Onboard supply control unit, Data bus diagnostic interface, Rear passenger side door control unit	349
7. Power and control electronics for electric drive, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Control unit for electronic steering column lock, Control unit for head-up display, Dash panel insert	350
043 - Data bus network for driver assist systems CAN bus	351-356
1. Data bus network for driver assist systems CAN bus	351
2. Parking aid control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2, Control unit for overhead view camera	352
3. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Reversing camera, Front camera for driver assist systems	353
4. Control unit for cornering light and headlight range control	354
5. Adaptive cruise control unit, Front left radar sensor control unit for object detection	355
6. Front right radar sensor control unit for object detection	356
044 - Data bus network for hybrid CAN bus	357-360
1. Data bus network for hybrid CAN bus	357
2. Voltage converter (48 V/12 V), Battery, 48 V, Data bus diagnostic interface, Heater and air conditioning system control unit	358
3. Charging unit 1 for high-voltage battery, Voltage converter (48 V/12 V), Battery regulation control unit	359
4. Power and control electronics for electric drive. Control unit 1 for activation of chardina flap	360

and charging socket	
045 - Data bus network for communication CAN bus	361-362
1. Data bus network for communication CAN bus	361
2. Auxiliary heater control unit, Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	362
046 - Data bus network for infotainment CAN bus	363-364
1. Data bus network for infotainment CAN bus	363
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	364
047 - Data bus network for powertrain CAN bus	365-368
1. Data bus network for powertrain CAN bus	365
2. Data bus diagnostic interface, Engine/motor control unit, Parking lock actuator	366
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	367
4. Starter-alternator, Power and control electronics for electric drive, Control unit for reducing agent heater, Engine sound generator control unit	368
048 - Sound system , (8RI)	369-375
1. Sound system , (8RI)	369
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	370
3. Digital sound package control unit, Control unit 1 for information electronics, Left effect loudspeaker, Right effect loudspeaker, Loudspeaker for emergency call module	371
4. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	372
5. Digital sound package control unit, Front left door loudspeaker, Front right door loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	373
6. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	374
7. Emergency call module control unit and communication unit, Centre loudspeaker 2	375
049 - Sound system , (8RM)	376-379
1. Sound system , (8RM)	376
2. Control unit 1 for information electronics, Front left door loudspeaker, Front right door loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker	377
3. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	378
4. Emergency call module control unit and communication unit, Loudspeaker for emergency call module	379
050 - Dual tone horn	380-381
1. Dual tone horn	380
2. Left horn, Right horn, Horn relay, Fuse holder B	381
051 - Parking aid (PDC) , (7X2),(8A2),(8A5)	382-393
1. Parking aid (PDC) , (7X2),(8A2),(8A5)	382
2. Data bus diagnostic interface, Parking aid loudspeaker, Rear loudspeaker for parking aid, Fuse holder C	383
3. Front right parking aid sender	384
4. Front centre right parking aid sender	385
5. Front centre left parking aid sender	386
6. Front left parking aid sender	387
7.	388
8. Rear left parking aid sender	389
9. Rear centre left parking aid sender	390
10. Rear centre right parking aid sender	391
11. Rear right parking aid sender	392
12. Rear left park assist steering sender, Rear right park assist steering sender	393
052 - Electrically operated rear lid , (3U7),(4E0),(4E6),(4E7),(5I6)	394-399
1. Electrically operated rear lid , (3U7),(4E0),(4E6),(4E7),(5I6)	394
2. Data bus diagnostic interface, Rear lid control unit, Fuse holder C	395
3. Operating unit for rear lid control, Rear lid control unit, Rear lid drive unit	396
4. Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid, Rear lid lock unit	397
5. Onboard supply control unit, Rear lid control unit, Drive unit for luggage compartment cover	398
6. Onboard supply control unit, Rear lid power opening control unit	399
053 - Electromechanical steering , (1N3),(1N5),(1N7)	400-402
1. Electromechanical steering , (1N3),(1N5),(1N7)	400
2. Power steering control unit, Fuse holder B	401
3. Data bus diagnostic interface	402
054 - Front camera for driver assist systems , (6I1),(6I2),(6I6),(QK1)	403-405
1. Front camera for driver assist systems . (6I1).(6I2).(6I6).(QK1)	403

2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	404
3. Data bus diagnostic interface, Front camera for driver assist systems	405
055 - Head-up display , (KS1)	406-408
1. Head-up display , (KS1)	406
2. Data bus diagnostic interface, Control unit for head-up display, Fuse holder C	407
3. Data bus diagnostic interface, Control unit for head-up display	408
056 - DC/AC converter with socket , (9Z3),(9Z4)	409-410
1. DC/AC converter with socket , (9Z3),(9Z4)	409
2. Voltage converter, Fuse holder C, Interior socket, 230 V, 110 V	410
057 - Interior lights , (QQ8),(QQ9)	411-430
1. Interior lights , (QQ8),(QQ9)	411
2. Fuse holder C, Front roof module	412
3. Rear interior light, Front roof module	413
4. Rear interior light 2, Rear interior light 3	414
5. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror	415
6. Glove compartment light switch, Onboard supply control unit, Front left footwell light, Glove compartment light	416
7. Onboard supply control unit, Front right footwell light	417
8. Onboard supply control unit, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Light 2 for dash panel background lighting	418
9. Light 2 for decorative backlighting in dash panel, passenger side	419
10. Rear left footwell light, Rear right footwell light	420
11. Storage compartment illumination bulb, Light 2 for front centre console background lighting, Light 1 for dash panel contour lighting	421
12. Light 1 for front centre console background lighting, Left luggage compartment light, Right luggage compartment light	422
13. Driver door opener illumination bulb, Surround lighting 1 in rear lid, Surround lighting 2 in rear lid	423
14. Light for left door storage compartment illumination, Light 1 for decorative backlighting in front door, driver side	424
15. Front passenger door opener illumination bulb, Light for front left sill panel moulding background lighting	425
16. Light for right door storage compartment illumination, Light 1 for decorative backlighting in front door, passenger side, Light for front right sill panel moulding background lighting	426
17. Rear left door storage compartment illumination bulb	427
18. Light 1 for decorative backlighting in rear left door, Rear left entry light	428
19. Rear right door storage compartment illumination bulb, Rear right entry light	429
20. Light 1 for decorative backlighting in rear right door	430
058 - Air conditioning system , (9AK),(KC5)	431-438
1. Air conditioning system , (9AK),(KC5)	431
2. Vehicle interior temperature sensor, Fresh air blower control unit, Heater and air conditioning system control unit, Fuse holder C	432
3. Air quality sensor, Pressure sender for refrigerant circuit, Heater and air conditioning system control unit	433
4. Left vent temperature sender, Right vent temperature sender, Heater and air conditioning system control unit, Air conditioner compressor	434
5. Footwell vent temperature sender, Evaporator temperature sensor, Data bus diagnostic interface, Heater and air conditioning system control unit	435
6. Heater and air conditioning system control unit, Air distribution flap, Fresh air and air recirculation flap	436
7. Heater and air conditioning system control unit, Front right temperature flap, Defroster flap	437
8. Heater and air conditioning system control unit, Front left temperature flap	438
059 - Headlights , (8IU),(8Q1),(8Q5)	439-446
1. Headlights , (8IU),(8Q1),(8Q5)	439
2. Rear left vehicle level sender, Onboard supply control unit, Fuse holder B, Fuse holder C	440
3. Front left headlight	441
4. Front right headlight	442
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	443
6. Control unit for cornering light and headlight range control, Light conductor for contour lighting in radiator grille, front right, Light conductor for contour lighting in radiator grille, front left	444
7. Control unit for cornering light and headlight range control, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	445
8. Couplina point on front left bumper	446

060 - Headlights , (8IY)	447-449
1. Headlights , (8IY)	447
2. Front left headlight, Fuse holder B	448
3. Onboard supply control unit, Front right headlight	449
061 - Steering column electronics , (2FE)	450-452
1. Steering column electronics , (2FE)	450
2. Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	451
3. Airbag control unit, Steering column electronics control unit	452
062 - Steering column electronics , (2FR),(2PT)	453-455
1. Steering column electronics , (2FR),(2PT)	453
2. Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	454
3. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface	455
063 - Light switch	456-457
1. Light switch	456
2. Operating unit for lighting, Fuse holder C	457
064 - Hazard warning lights switch	458-459
1. Hazard warning lights switch	458
2. Hazard warning lights switch, Onboard supply control unit	459
065 - Mobile telephone systems , (2F0),(2F1),(9WJ),(9ZP),(9ZQ),(9ZX)	460-463
1. Mobile telephone systems , (2F0),(2F1),(9WJ),(9ZP),(9ZQ),(9ZX)	460
2. Charging unit 1 for mobile devices, Aerial amplifier for mobile telephone, Fuse holder C	461
3. Entry and start authorisation control unit, Onboard supply control unit, Charging unit 1 for mobile devices, Aerial amplifier for mobile telephone, Left aerial module	462
4. Data bus diagnostic interface	463
066 - Multifunction steering wheel , (2FE),(2FN),(2FR),(2FT),(2PT)	464-467
1. Multifunction steering wheel , (2FE),(2FN),(2FR),(2FT),(2PT)	464
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	465
3. Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection, Heated steering wheel	466
4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	467
067 - Emergency call module , (NZ2),(NZ4)	468-472
1. Emergency call module , (NZ2),(NZ4)	468
2. Emergency battery, telematics, Data bus diagnostic interface, Fuse holder C	469
3. Emergency assistance call button, Data bus diagnostic interface, Front roof module	470
4. Internet access control unit, Centre loudspeaker 2, Loudspeaker for emergency call module	471
5. Airbag control unit, Roof aerial, LTE aerial 1, LTE aerial 2	472
068 - Internet access , (GW2)	473-475
1. Internet access , (GW2)	473
2. Onboard supply control unit, Internet access control unit, Fuse holder C	474
3. Internet access control unit, Emergency call module control unit and communication unit, Roof aerial, External vehicle communication aerial 2	475
069 - Reducing agent metering system , DXNB,DXPA,DXPB	476-479
1. Reducing agent metering system , DXNB,DXPA,DXPB	476
2. Control unit for reducing agent heater, Fuse holder B, Fuse holder C, Heater for reducing agent line (heater circuit 2)	477
3. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	478
4. Delivery unit for reducing agent metering system, Engine/motor control unit, Injector for reducing agent	479
070 - Tyre Pressure Monitoring System , (7K1),(7K3)	480-481
1. Tyre Pressure Monitoring System , (7K1),(7K3)	480
2. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Fuse holder C	481
071 - Reversing camera (Rear Assist) , (KA2)	482-483
1. Reversing camera (Rear Assist) , (KA2)	482
2. Data bus diagnostic interface, Reversing camera, Fuse holder C	483
072 - Multimedia system	484-490
1. Multimedia system	484
2. Control unit 1 for information electronics, Fuse holder C	485
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	486
4. Control unit 1 for information electronics, Roof aerial, Aerial amplifier	487
5. Control unit 1 for information electronics, Aerial, Radio aerial 2, Front roof module	488
6. TV aerial 1	489

7. TV aerial 2, TV aerial 3	490
073 - Dash panel insert	491-493
1. Dash panel insert	491
2. Data bus diagnostic interface, Dash panel insert, Fuse holder C	492
3. Fuel delivery unit, Ambient temperature sensor, Fuel gauge sender 2, Onboard supply control unit, Dash panel insert	493
074 - Window wash/wipe system, headlight washer system	494-497
1. Window wash/wipe system, headlight washer system	494
2. Windscreen washer fluid level sender, Onboard supply control unit, Fuse holder B, Fuse holder C, Windscreen and rear window washer pump	495
3. Onboard supply control unit, Windscreen wiper, Left washer jet heater element, Right washer jet heater element	496
4. Onboard supply control unit, Rear window wiper motor	497
075 - Sliding sunroof , (3FU)	498-501
1. Sliding sunroof , (3FU)	498
2. Roof system control unit, Fuse holder C	499
3. Roof system control unit, Sliding sunroof motor, Sun blind drive unit	500
4. Sunroof button, Button 1 for roof roller blind, Front roof module	501
076 - Tail light clusters , (8VG)	502-506
1. Tail light clusters , (8VG)	502
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster	503
3. Onboard supply control unit, Centre tail light cluster	504
4. Onboard supply control unit, Centre tail light cluster	505
5. Onboard supply control unit, High-level brake light bulb	506
077 - Tail light clusters , (8VP),(8VQ)	507-510
1. Tail light clusters , (8VP),(8VQ)	507
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster	508
3. Onboard supply control unit, Centre tail light cluster	509
4. Onboard supply control unit, Centre tail light cluster, High-level brake light bulb	510
078 - Seat ventilation , (4D5),(4D7),(4D8),(KU3)	511-514
1. Seat ventilation , (4D5),(4D7),(4D8),(KU3)	511
2. Heater and air conditioning system control unit, Fuse holder C, Front left seat backrest fan 1, Seat heating for front left seat backrest	512
3. Front left seat cushion fan 1, Front right seat backrest fan 1, Front left seat depth adjustment fan, Front left seat heating, Seat heating for front right seat backrest	513
4. Front right seat cushion fan 1, Front right seat depth adjustment fan, Front right seat heating	514
079 - Seat heating , (4A3),(4A4),(4A8)	515-526
1. Seat heating , (4A3),(4A4),(4A8)	515
2. Data bus diagnostic interface, Heater and air conditioning system control unit, Fuse holder C	516
3. Heater and air conditioning system control unit, Front left seat heating	517
4. Heater and air conditioning system control unit, Front left seat heating	518
5. Heater and air conditioning system control unit, Seat heating for front left seat backrest	519
6. Heater and air conditioning system control unit, Front right seat heating	520
7. Heater and air conditioning system control unit, Front right seat heating	521
8. Heater and air conditioning system control unit, Seat heating for front right seat backrest	522
9. Operating and display unit for rear air conditioning system	523
10. Operating and display unit for rear air conditioning system, Heated backrest for rear left seat	524
11. Rear left seat heating, Rear right seat heating	525
12. Heated backrest for rear right seat	526
080 - Toll detection system , (ER5)	527-528
1. Toll detection system , (ER5)	527
2. Toll collection sender, Chip card reader control unit, Control unit 1 for information electronics, Fuse holder C	528
081 - Adjustable seat , (3IA)	529-542
1. Adjustable seat , (3IA)	529
2. Control unit for seat and steering column adjustment with memory function, Fuse holder C, Fuse carrier 1, Fuse carrier 2	530
3. Control unit for seat and steering column adjustment with memory function, Data bus diagnostic interface	531
4. Driver operating unit for memory settings, Control unit for seat and steering column adjustment with memory function, Onboard supply control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor	532
5. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat height adjustment motor	533
6. Driver seat adjustment operating unit, Control unit for front left massage seat	534
7. Control unit for front left massage seat. Valve block 1 in driver seat	535

8. Control unit for front passenger seat adjustment with memory function, Control unit for front left massage seat, Compressor for multicontour driver seat	536
9. Control unit for front passenger seat adjustment with memory function	537
10. Front passenger operating unit for memory settings, Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor	538
11. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor	539
12. Front passenger seat adjustment operating unit, Control unit for front right massage seat	540
13. Control unit for front right massage seat, Valve block 1 in front passenger seat	541
14. Control unit for front right massage seat, Compressor for multicontour front passenger seat	542
082 - Adjustable seat , (1R9),(L0L)	543-550
1. Adjustable seat , (1R9),(L0L)	543
2. Onboard supply control unit, Control unit for front left massage seat, Fuse holder C	544
3. Driver seat massage function button, Control unit for front left massage seat, Valve block 1 in driver seat, Compressor for multicontour driver seat	545
4. Driver seat adjustment operating unit, Control unit for front left massage seat, Driver seat backrest adjustment motor	546
5. Driver seat adjustment operating unit, Control unit for front right massage seat	547
6. Front passenger seat massage function button, Control unit for front right massage seat, Valve block 1 in front passenger seat, Compressor for multicontour front passenger seat	548
7. Front passenger seat adjustment operating unit, Control unit for front right massage seat, Front passenger seat backrest adjustment motor	549
8. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit	550
083 - Assist systems , (79H),(7Y1)	551-554
1. Assist systems , (79H),(7Y1)	551
2. Data bus diagnostic interface, Lane change assist control unit 2, Fuse holder C	552
3. Lane change assist control unit, Lane change assist control unit 2	553
4. Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Passenger side exterior mirror	554
084 - Entry and start authorisation , (4I6),(4I7),(4K5),(4K6)	555-567
1. Entry and start authorisation , (4I6),(4I7),(4K5),(4K6)	555
2. Starter button, Entry and start authorisation control unit, Fuse holder C	556
3. Entry and start authorisation control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	557
4. Entry and start authorisation control unit, Onboard supply control unit	558
5. Driver exterior door handle, Entry and start authorisation control unit	559
6. Driver exterior door handle, Driver door control unit, Entry and start authorisation control unit	560
7. Front passenger exterior door handle, Entry and start authorisation control unit	561
8. Front passenger exterior door handle, Front passenger door control unit, Entry and start authorisation control unit	562
9. Rear left exterior door handle, Entry and start authorisation control unit, Rear driver side door control unit	563
10. Rear right exterior door handle, Entry and start authorisation control unit, Rear passenger side door control unit	564
11. Entry and start authorisation control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Control unit 4 for break-in protection	565
12. Control unit 5 for break-in protection	566
13. Control unit 2 for break-in protection, Control unit 3 for break-in protection	567
085 - Overhead view camera , (KA6)	568-573
1. Overhead view camera , (KA6)	568
2. Data bus diagnostic interface, Control unit for overhead view camera, Fuse holder C	569
3. Control unit for overhead view camera, Front overhead view camera	570
4. Control unit for overhead view camera, Front overhead view camera, Rear overhead view camera	571
5. Control unit for overhead view camera, Coupling point 2 in front left door, Driver side exterior mirror	572
6. Control unit for overhead view camera, Coupling point 2 in front right door, Passenger side exterior mirror	573
086 - 2.0l petrol engine , DNPB	574-593
1. 2.0l petrol engine , DNPB	574
2. Fuse holder B	575
3. Fuse holder B	576
4. Engine/motor control unit. Engine component power supply relav. Fuse holder B. Fuse holder C	577

5. Engine/motor control unit, Brake servo	578
6. Accelerator pedal module, Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit	579
7. Engine speed sender, Knock sensor 1, Coolant temperature sender, Pressure differential sender for particulate filter, Engine/motor control unit	580
8. Intake manifold sender, Charge pressure control module, Hall sender 3, Engine/motor control unit	581
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	582
10. Engine/motor control unit, Coolant valve for gearbox, Coolant circulation pump	583
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	584
12. Oil level and oil temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Ignition coil 4 with output stage, Spark plug 4	585
13. Engine temperature regulation module, Engine/motor control unit, Camshaft control valve 1, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	586
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	587
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	588
16. Throttle valve module, Engine/motor control unit, Fuel metering valve, Piston cooling jet control valve	589
17. Oil pressure switch, Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Engine/motor control unit	590
18. Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Charge pressure sender, Engine/motor control unit	591
19. Onboard supply control unit, Engine/motor control unit, Control unit for reducing agent heater	592
20. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	593
087 - Special vehicle , (F5X),(F6J)	594-624
1. Special vehicle , (F5X),(F6J)	594
2. Fuse holder C, Relay and fuse carrier C for special vehicles, Relay and fuse carrier E for special vehicles	595
3. Battery for special vehicle, Battery regulation control unit, Relay and fuse carrier C for special vehicles, Relay and fuse carrier N for special vehicles	596
4. Relay and fuse carrier J for special vehicles, Fuse carrier 4, Terminal 30 wiring junction	597
5. Relay and fuse carrier H for special vehicles	598
6. Relay and fuse carrier H for special vehicles	599
7. Relay and fuse carrier A for special vehicles, Relay and fuse carrier H for special vehicles, 12 V socket 2 for special vehicles, 12 V socket 3 for special vehicles	600
8. Special vehicle control unit, Relay and fuse carrier A for special vehicles, Relay and fuse carrier K for special vehicles, 12 V socket 4 for special vehicles	601
9. Special vehicle control unit	602
10. Interior lighting central switch button, Ignition bypass button, Button for daytime running light switch-off, Special vehicle control unit	603
11. Main switch for 2-way radio, Special vehicle control unit	604
12. Special vehicle control unit, Coupling point for operating unit for special signals, Diagnostic connection 2	605
13. Special vehicle control unit, Coupling point for operating unit for special signals	606
14. Button for tonal sequence standby, Special vehicle control unit, Coupling point for digital two-way radio	607
15. Button 1 for in-car video surveillance, Button 2 for in-car video surveillance, Special vehicle control unit, Coupling point for in-car video surveillance memory	608
16. Special vehicle control unit, Coupling point for in-car video surveillance memory, 12 V socket for special vehicles, 12 V socket 5 for special vehicles, Display unit for in-car video surveillance	609
17. Special vehicle control unit, Charging station for torch, Charging station for hand-held 2-way radio, Charging station 2 for hand-held 2-way radio, Charging station 3	610
18. Special vehicle control unit, Coupling point for luggage compartment light on special vehicles, Coupling point for interface control unit in special vehicle	611
19. Special vehicle control unit	612
20. Coupling point for warning/indicator lamps in special vehicle, Coupling point for accident data memory	613
21. Coupling point 3 for special vehicles, Coupling point 2 for multifunction unit control unit	614
22. Coupling point 2 for operating unit for special signals, Coupling point for siren system control unit in special vehicle	615
23. Flashing light in windscreen for blue flashing light. Coupling point for front flashing lights	616

in special vehicle, Coupling point for siren system control unit in special vehicle, Coupling point for special signals siren	
24. Coupling point for two-way radio in special vehicle, Coupling point for siren system control unit in special vehicle, Coupling point for additional turn signals of special signal system	617
25. 2-way radio unit microphone, Coupling point for two-way radio in special vehicle	618
26. Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	619
27. Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	620
28. 2-way radio unit microphone 2, Coupling point for blower, Vehicle voltage display	621
29. Flashing light in rear lid, Flashing light 2 in rear lid, Flashing light 3 in rear lid	622
30. Flashing light 4 in rear lid	623
31. Two-way radio loudspeaker volume control 1, Two-way radio loudspeaker volume control 2, Two-way radio loudspeaker, Two-way radio loudspeaker 2, Two-way radio loudspeaker 3, Two-way radio loudspeaker 4	624
088 - Special vehicle , (F6B),(F6E),(F6K)	625-655
1. Special vehicle , (F6B),(F6E),(F6K)	625
2. Fuse holder C, Relay and fuse carrier C for special vehicles, Relay and fuse carrier E for special vehicles	626
3. Battery for special vehicle, Battery regulation control unit, Relay and fuse carrier C for special vehicles, Relay and fuse carrier N for special vehicles	627
4. Relay and fuse carrier J for special vehicles, Fuse carrier 4, Terminal 30 wiring junction	628
5. Relay and fuse carrier H for special vehicles	629
6. Relay and fuse carrier H for special vehicles	630
7. Relay and fuse carrier A for special vehicles, 12 V socket 2 for special vehicles, 12 V socket 3 for special vehicles, 12 V socket 4 for special vehicles	631
8. Special vehicle control unit, Relay for power sockets, Relay and fuse carrier K for special vehicles	632
9. Special vehicle control unit	633
10. Interior lighting central switch button, Ignition bypass button, Button for daytime running light switch-off, Special vehicle control unit	634
11. Main switch for 2-way radio, Special vehicle control unit	635
12. Special vehicle control unit, Coupling point for operating unit for special signals, Diagnostic connection 2	636
13. Front stop command light, Special vehicle control unit, Coupling point 2 on left A-pillar for special vehicles	637
14. Button for tonal sequence standby, Rear stop command light, Special vehicle control unit	638
15. Special vehicle control unit, Coupling point for digital two-way radio	639
16. Special vehicle control unit, Charging station for hand-held 2-way radio, 12 V socket for special vehicles, 12 V socket 5 for special vehicles	640
17. Special vehicle control unit, Charging station for torch, Charging station 2 for hand-held 2-way radio, Charging station 3	641
18. Special vehicle control unit, Coupling point for luggage compartment light on special vehicles, Coupling point for interface control unit in special vehicle	642
19. Coupling point 2 for multifunction unit control unit, Coupling point for accident data memory	643
20. Rotating light and siren system control unit, Coupling point for warning/indicator lamps in special vehicle, Coupling point for accident data memory	644
21. Rotating light and siren system control unit, Magnetic flashing light, Socket for blue flashing light, Socket 2 for blue flashing light, Socket 3 for blue flashing light, Socket 4 for blue flashing light	645
22. Rotating light and siren system control unit, Flashing light in windscreen for blue flashing light, Coupling point for front flashing lights in special vehicle, Coupling point for special signals siren	646
23. Rotating light and siren system control unit, Coupling point 2 for operating unit for special signals, Coupling point for two-way radio in special vehicle	647
24. 2-way radio unit microphone, Coupling point for two-way radio in special vehicle	648
25. 2-way radio unit microphone 2, Coupling point for two-way radio in special vehicle, Coupling point 3 for special vehicles, Vehicle voltage display	649
26. Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	650
27. Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	651
28. Flashing light in rear lid, Flashing light 2 in rear lid, Coupling point for blower	652
29. Flashing light 3 in rear lid, Flashing light 4 in rear lid	653
30. Two-way radio loudspeaker volume control 1, Two-way radio loudspeaker, Two-way radio loudspeaker	654

31. Two-way radio loudspeaker volume control 2, Two-way radio loudspeaker 2, Two-way radio loudspeaker 4	655
089 - 1.5l petrol engine , DUCA,DUCB	656-674
1. 1.5l petrol engine , DUCA,DUCB	656
2. Main relay, Fuse holder B	657
3. Engine/motor control unit, Radiator fan	658
4. Accelerator pedal module, Throttle valve module, Engine/motor control unit	659
5. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Coolant temperature sender for heater, Engine/motor control unit	660
6. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	661
7. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	662
8. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	663
9. Engine temperature regulation module, Radiator outlet coolant temperature sender, Temperature sender after electric drive motor, Engine/motor control unit	664
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	665
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	666
12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug 4, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit	667
13. Function unit for active oil separation, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	668
14. Dual exhaust gas temperature sensor 1, Pressure sensor for activated charcoal filter air flushing, Pressure differential sender for particulate filter, Engine/motor control unit	669
15. Engine/motor control unit, Heater coolant shut-off valve	670
16. Oil level and oil temperature sender, Engine/motor control unit, Coolant circulation pump before power and control electronics for electric drive	671
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Coolant valve for gearbox	672
18. Tank pressure sensor, Onboard supply control unit, Engine/motor control unit, Engine sound generator control unit	673
19. Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuel tank switch-off valve	674
090 - High-voltage system , DUCA,DUCB	675-687
1. High-voltage system , DUCA,DUCB	675
2. Power and control electronics for electric drive, Fuse holder C, Fuse carrier 4	676
3. Coolant shortage indicator sender 2, Power and control electronics for electric drive, Maintenance connector for high-voltage system	677
4. Power and control electronics for electric drive, Three-phase current drive	678
5. Power and control electronics for electric drive, Three-phase current drive	679
6. Hybrid battery unit, Power and control electronics for electric drive, Coupling point on high-voltage battery	680
7. Charging unit 1 for high-voltage battery	681
8. Charging unit 1 for high-voltage battery, Air conditioner compressor, High-voltage heater (PTC)	682
9. Charging unit 1 for high-voltage battery, Control unit 1 for activation of charging flap and charging socket	683
10. Actuator for high-voltage charging flap lock 1, Actuator for high-voltage charging socket lock 1, Control unit 1 for activation of charging flap and charging socket, LED module for charging socket 1	684
11. Control unit 1 for activation of charging flap and charging socket, High-voltage battery charging socket 1	685
12. Data bus diagnostic interface, High-voltage battery charging socket 1	686
13. Data bus diagnostic interface	687
091 - High-voltage battery system , DUCA,DUCB	688-704
1. High-voltage battery system , DUCA,DUCB	688
2. Fuse holder B, Fuse holder C, Coolant pump for high-voltage battery	689
3. Coolant valve for high-voltage battery, Maintenance connector for high-voltage system	690
4. Airbag control unit	691
5. Hybrid battery unit, Coolant temperature sender 1 for high-voltage battery, Coolant temperature sender 2 for high-voltage battery, Battery regulation control unit	692
6. Hybrid battery unit, Battery regulation control unit	693
7. Hybrid battery unit. Power and control electronics for electric drive. Battery regulation control	694

unit, High-voltage battery charging socket 1	
8. Hybrid battery unit, Power and control electronics for electric drive, Battery regulation control unit, Switching unit for high-voltage battery	695
9. Hybrid battery unit, Battery regulation control unit, Switching unit for high-voltage battery	696
10. Hybrid battery unit, Battery regulation control unit, Switching unit for high-voltage battery	697
11. Hybrid battery unit, Module monitor control unit for batteries, Battery regulation control unit, Coupling point in high-voltage battery	698
12. Module monitor control unit for batteries, Battery module 1, Battery module 2	699
13. Module monitor control unit for batteries, Battery module 1, Battery module 2	700
14. Module monitor control unit for batteries, Battery module 1, Battery module 2, Battery module 3, Battery module 4	701
15. Module monitor control unit for batteries, Battery module 3, Battery module 4	702
16. Module monitor control unit for batteries, Battery module 3, Battery module 4	703
17. Module monitor control unit for batteries, Data bus diagnostic interface, Battery module 3, Battery module 4	704
092 - Air conditioning system for models with high-voltage system , DUCA,DUCB	705-713
1. Air conditioning system for models with high-voltage system , DUCA,DUCB	705
2. Air conditioning system relay, Fuse holder B	706
3. Vehicle interior temperature sensor, Fresh air blower control unit, Heater and air conditioning system control unit, Fuse holder C	707
4. Air quality sensor, Refrigerant pressure and temperature sender, Pressure sender for refrigerant circuit, Heater and air conditioning system control unit	708
5. Heater and air conditioning system control unit, Refrigerant shut-off valve for heater and air conditioning unit, Refrigerant expansion valve 1	709
6. Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Evaporator temperature sensor, Heater and air conditioning system control unit	710
7. Footwell vent temperature sender, Heater and air conditioning system control unit, Air distribution flap, Front left temperature flap	711
8. Heater and air conditioning system control unit, Coolant valve for high-voltage battery, Coupling point on high-voltage battery, Fresh air and air recirculation flap	712
9. Air conditioner compressor, High-voltage heater (PTC)	713
093 - Dual clutch gearbox 0DD , DUCA,DUCB	714-718
1. Dual clutch gearbox 0DD , DUCA,DUCB	714
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	715
3. Power and control electronics for electric drive, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	716
4. Onboard supply control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Parking lock actuator	717
5. Steering column electronics control unit, Data bus diagnostic interface	718
094 - Engine sound generator , DUCA,DUCB	719-720
1. Engine sound generator , DUCA,DUCB	719
2. Engine sound generator control unit, Fuse holder B	720
095 - Pilot line for high-voltage system , DUCA,DUCB	721-723
1. Pilot line for high-voltage system , DUCA,DUCB	721
2. Hybrid battery unit, Power and control electronics for electric drive, Battery regulation control unit, Maintenance connector for high-voltage system	722
3. Hybrid battery unit, Battery regulation control unit	723
096 - Fuses in luggage compartment	724-726
1. Fuses in luggage compartment	724
2. Battery, Battery monitor control unit, Data bus diagnostic interface, Fuse holder D	725
3. Relay and fuse carrier 1, Fuse carrier 4	726
097 - Adjustable seat , (1R9),(L0R)	727-734
1. Adjustable seat , (1R9),(L0R)	727
2. Onboard supply control unit, Control unit for front left massage seat, Fuse holder C	728
3. Front passenger seat massage function button, Control unit for front left massage seat, Valve block 1 in front passenger seat, Compressor for multicontour front passenger seat	729
4. Front passenger seat adjustment operating unit, Control unit for front left massage seat, Front passenger seat backrest adjustment motor	730
5. Front passenger seat adjustment operating unit, Control unit for front right massage seat	731
6. Driver seat massage function button, Control unit for front right massage seat, Valve block 1 in driver seat, Compressor for multicontour driver seat	732
7. Driver seat adjustment operating unit, Control unit for front right massage seat, Driver seat backrest adjustment motor	733
8. Driver seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit	734
801 - - Fitting locations: Earth points - 3	735-752

1. Fitting locations: Earth points	735-752
1.1 Earth points in front part of vehicle	737-742
1.1.1 Front from left	737
1.1.2 Front from left, additional earth points for models with hybrid drive system	738
1.1.3 Front from right	739
1.1.4 1.5l petrol engine, DXDB, DUCA, DUCB	740
1.1.5 2.0l petrol engine, DNPB	741
1.1.6 Dual clutch gearbox, ODD	742
1.2 Earth points in middle part of vehicle	743-747
1.2.1 Front left of interior	744
1.2.2 Front right of interior	744
1.2.3 Front middle of interior	745
1.2.4 Steering wheel	746
1.2.5 Roof	747
1.3 Earth points in rear part of vehicle	748-750
1.3.1 Left luggage compartment	749
1.3.2 Luggage compartment left, additional earth points for models with hybrid drive	749
1.3.3 On right in luggage compartment/rear lid	750
1.4 Earth points on vehicle underbody	751-752
1.4.1 Earth point, hybrid battery unit -AX1-	751-752
802 - -Fitting locations: Fuses - 3	753-803
1. Fitting locations: Fuses	753-803
1.1 Fuse holder A -SA-, from October 2023	756-757
1.1.1 Fitting location of fuse holder A -SA-, from October 2023	757
1.1.2 Fuse assignment for fuse holder A -SA-, from October 2023	758
1.2 Fuse holder B -SB-, from October 2023	758-760
1.2.1 Fitting location of fuse holder B -SB-, from October 2023	758
1.2.2 Fuse assignment for fuse holder B -SB-, from October 2023	759-760
1.3 Fuse holder B -SB-, from February 2024	761-765
1.3.1 Fitting location of fuse holder B -SB-, from February 2024	762
1.3.2 Fuse assignment for fuse holder B -SB-, from February 2024	763-765
1.4 Fuse holder C -SC-, from October 2023	766-772
1.4.1 Fitting location of fuse holder C -SC-, left-hand drive models, from October 2023	766-767
1.4.2 Fitting location of fuse holder C -SC-, right-hand drive models, from October 2023	768
1.4.3 Fuse assignment for fuse holder C -SC-, from October 2023	769-772
1.5 Fuse holder C -SC-, from February 2024	773-779
1.5.1 Fitting location of fuse holder C -SC-, left-hand drive models, from February 2024	773-774
1.5.2 Fitting location of fuse holder C -SC-, right-hand drive models, from February 2024	775
1.5.3 Fuse assignment for fuse holder C -SC-, from February 2024	776-779
1.6 Fuse holder D -SD-, for models with hybrid drive system, from April 2024	780-781
1.6.1 Fitting location of fuse holder D -SD-, for models with hybrid drive system, from April 2024	780
1.6.2 Fuse assignment for fuse holder D -SD-, for models with hybrid drive system, from April 2024	781
1.7 Relay and fuse carrier 1 -SR1-, from October 2023	782-783
1.7.1 Fitting location of relay and fuse carrier 1 -SR1-, from October 2023	782-783
1.7.2 Fuse assignment for relay and fuse carrier 1 -SR1-, from October 2023	784
1.8 Individual fuses, from October 2023	784-787
1.8.1 Fitting location of individual fuses, left-hand drive vehicles, from October 2023	784-785
1.8.2 Fitting location of individual fuses, right-hand drive vehicles, from October 2023	786
1.8.3 Fuse assignment for individual fuses, left-hand drive vehicles, from October 2023	787
1.8.4 Fuse assignment for individual fuses, right-hand drive vehicles, from October 2023	788
1.9 Fuse carrier 4 -ST4-, from October 2023	788-789
1.9.1 Fitting location of fuse carrier 4 -ST4-, from October 2023	789
1.9.2 Fuse assignment for fuse carrier 4 -ST4-, from October 2023	790
1.10 Fuse for voltage converter -S412-, from October 2023, for models with 48 V hybrid system	790-791
1.10.1 Fitting location of fuse for voltage converter -S412-, from October 2023, for models with 48 V hybrid system	790
1.10.2 Fuse assignment for fuse for voltage converter -S412-, from October 2023, for models with 48 V hybrid system	791
1.11 High-voltage system fuse 1 -S350-, from April 2024	792-793
1.11.1 Fitting location of high-voltage system fuse 1 -S350-, from April 2024	792
1.11.2 Fuse assignment for high-voltage system fuse 1 -S350-, from April 2024	793
1.12 Relay and fuse carrier A for special vehicles -SRSA-, for models with special equipment, from February 2024	794-795
1.12.1 Fitting location of relay and fuse carrier A for special vehicles -SRSA-, for models with special equipment, from February 2024	794-795
1.12.2 Fuse assignment for relay and fuse carrier A for special vehicles -SRSA-. for models with	796

special equipment, from February 2024	
1.13 Relay and fuse carrier H for special vehicles -SRSH-, for models with special equipment, from February 2024	796-798
1.13.1 Fitting location of relay and fuse carrier H for special vehicles -SRSH-, for models with special equipment, from February 2024	796-797
1.13.2 Fuse assignment for relay and fuse carrier H for special vehicles -SRSH-, for models with special equipment, from February 2024	798
1.14 Relay and fuse carrier N for special vehicles -SRSN-, for models with special equipment, from February 2024	799-800
1.14.1 Fitting location of relay and fuse carrier N for special vehicles -SRSN-, for models with special equipment, from February 2024	799-800
1.14.2 Fuse assignment for relay and fuse carrier N for special vehicles -SRSN-, for models with special equipment, from February 2024	801
1.15 Terminal 30 wiring junction -TV2-, for models with special equipment, from February 2024	801-803
1.15.1 Fitting location of terminal 30 wiring junction -TV2-, for models with special equipment, from February 2024	801
1.15.2 Fuse assignment for terminal 30 wiring junction -TV2-, for models with special equipment, from February 2024	802-803
803 - -Fitting locations: Relays - 3	804-815
1. Fitting locations: Relays	804-815
1.1 Relays on fuse holder B -SB-, from October 2023	806
1.1.1 Relays on fuse holder B -SB-, from October 2023	806
1.2 Relays on fuse holder C -SC-, from October 2023	807-809
1.2.1 Relays on fuse holder C -SC-, left-hand drive models, from October 2023	807-808
1.2.2 Relays on fuse holder C -SC-, right-hand drive models, from October 2023	809
1.3 Relays on relay and fuse carrier 1 -SR1-, from October 2023	810
1.3.1 Relays on relay and fuse carrier 1 -SR1-, from October 2023	810
1.4 Relays on relay and fuse carrier 2 -SR2-, from October 2023	811
1.4.1 Relays on relay and fuse carrier 2 -SR2-, from October 2023	811
1.5 Relays in switching unit for high-voltage battery -SX6-, for models with hybrid drive, from April 2024	812
1.5.1 Relays in switching unit for high-voltage battery -SX6-, for models with hybrid drive, from April 2024	812
1.6 Relays on relay and fuse carrier J for special vehicles -SRSJ-, for models with special equipment, from February 2024	813
1.6.1 Relays on relay and fuse carrier J for special vehicles -SRSJ-, for models with special equipment, from February 2024	813
1.7 Relays on relay and fuse carrier K for special vehicles -SRSK-, for models with special equipment, from February 2024	814-815
1.7.1 Relays on relay and fuse carrier K for special vehicles -SRSK-, for models with special equipment, from February 2024	815
804 - - Fitting locations: front part of vehicle - 3	816-856
1. Fitting locations: front part of vehicle	816-856
1.1 Front, view from front	830-831
1.2 Front, view from left	832-833
1.3 Front, view from left, additional components for vehicles with hybrid drive	834
1.4 Front, view from right	835-836
1.5 1.5l petrol engine, DXDB	837-840
1.5.1 1.5l petrol engine, DXDB, from front	837
1.5.2 1.5l petrol engine, DXDB, from above	838
1.5.3 1.5l petrol engine, DXDB, from right	839
1.5.4 1.5l petrol engine, DXDB, from rear	840
1.6 1.5l petrol engine, DUCA, DUCB	841-844
1.6.1 1.5l petrol engine, DUCA, DUCB, from front	842
1.6.2 1.5l petrol engine, DUCA, DUCB, from above	842
1.6.3 1.5l petrol engine, DUCA, DUCB, from right	843
1.6.4 1.5l petrol engine, DUCA, DUCB, from rear	844
1.7 2.0l petrol engine, DNPB	845-849
1.7.1 2.0l petrol engine, DNPB, from front	846
1.7.2 2.0l petrol engine, DNPB, from above	847
1.7.3 2.0l petrol engine, DNPB, from left	847
1.7.4 2.0l petrol engine, DNPB, from right	848
1.7.5 2.0l petrol engine, DNPB, from rear	849
1.8 2.0l diesel motor, DXNB, DXPA, DXPB	850-852
1.8.1 2.0l diesel motor, DXNB, DXPA, DXPB, from front	851
1.8.2 2.0l diesel motor, DXNB, DXPA, DXPB, from above	851

1.8.3 2.0l diesel motor, DXNB, DXPA, DXPB, from rear	852
1.9 Dual clutch gearbox	853-856
1.9.1 Dual clutch gearbox, 0GC	854
1.9.2 Dual clutch gearbox, 0CW	854
1.9.3 Dual clutch gearbox, 0DD	855-856
805 - - Fitting locations: middle part of vehicle - 3	857-922
1. Fitting locations: middle part of vehicle	857-922
1.1 At front of interior	880-901
1.1.1 Front left of interior, LHD models	880-881
1.1.2 Front left of interior, RHD models	882-883
1.1.3 Left footwell, LHD models	884-885
1.1.4 Right footwell, RHD models	886
1.1.5 Front right of interior, LHD models	887-888
1.1.6 Front right of interior, RHD models	889
1.1.7 Dash panel, LHD models	890
1.1.8 Dash panel, RHD models	891
1.1.9 Steering wheel	892
1.1.10 Steering column	892
1.1.11 Centre console	893-894
1.1.12 Driver seat, left-hand drive models	895
1.1.13 Driver seat, RHD models	896-897
1.1.14 Front passenger seat, left-hand drive models	898-899
1.1.15 Front passenger seat, right-hand drive models	900
1.1.16 Front seat heater, left seat	901
1.1.17 Front seat heater, right seat	901
1.2 Rear interior	902-905
1.2.1 Rear interior, view from left	903-904
1.2.2 Rear interior, view from right	905
1.3 Roof	906-908
1.3.1 Roof, part 1	906
1.3.2 Roof, part 2, with no sliding/tilting sunroof	907
1.3.3 Roof, part 2, with sliding/tilting sunroof	908
1.4 Doors	909-916
1.4.1 Driver door, left-hand drive models	910-911
1.4.2 Driver door, right-hand drive models	912
1.4.3 Front passenger door, left-hand drive models	913
1.4.4 Front passenger door, right-hand drive models	914
1.4.5 Rear left door	915
1.4.6 Rear right door	916
1.5 Heater and air conditioning unit	917-919
1.5.1 Climatronic, KC0, KC5, KH7, 9AK, part 1	917-918
1.5.2 Climatronic, KC0, KC5, KH7, 9AK, part 2	919
1.6 Connector assignments	920-922
1.6.1 Connector assignment: onboard supply control unit -J519-	920
1.6.2 Connector assignment: data bus diagnostic interface -J533-	921-922
806 - - Fitting locations: rear part of vehicle - 3	923-935
1. Fitting locations: rear part of vehicle	923-935
1.1 Rear lid	926-927
1.2 Rear bumper	928
1.3 Rear side, view from left	929
1.4 Rear side, view from right	930
1.5 Rear side, view from right, additional components for models with hybrid drive	931-932
1.6 Connector assignments	933-935
1.6.1 Connector assignment: rear lid power opening control unit -J938-	933
1.6.2 Connector assignment: control unit for overhead view camera -J928-	934-935
807 - -Fitting locations: vehicle underbody - 3	936-942
1. Fitting locations: vehicle underbody	936-942
1.1 Underbody	938-940
1.1.1 Underbody, for models with petrol engine	938
1.1.2 Underbody, for models with diesel engine	939
1.1.3 Underbody, additional components for vehicles with hybrid drive	940
1.2 High-voltage battery system	941-942
808 - -Fitting locations: special vehicles - 3	943-955
1. Fitting locations: special vehicles	943-955
1.1 Special equipment	945-955
1.1.1 Front. view from left	946

1.1.2 Front left of interior	947
1.1.3 Front right of interior	948-949
1.1.4 Rear side, view from left	950
1.1.5 Rear side, view of centre	950
1.1.6 Rear side, view from right	951
1.1.7 Front of roof	952
1.1.8 Roof	953
1.1.9 Rear lid	954-955
830 - -Connector views: parts with prefix A to D - 3	956-967
1. -Connector views: parts with prefix A to D	956-967
1.1 Voltage converter (48 V/12V) -A7-	956-958
1.1.1 1-pin connector -T1aak-	956
1.1.2 1-pin connector -T1aal-	957
1.1.3 3-pin connector -T3dl-	957
1.1.4 3-pin connector -T3g-	958
1.1.5 10-pin connector -T10y-	959
1.2 Voltage converter -A19-	959
1.2.1 22-pin connector -T22a-	959
1.3 Charging unit 1 for high-voltage battery -AX4-	960-963
1.3.1 3-pin connector -T3ax-	960
1.3.2 3-pin connector -T3ay-	961
1.3.3 3-pin connector -T3az-	962
1.3.4 5-pin connector -T5c-	962
1.3.5 8-pin connector -T8c-	963
1.4 Battery, 48 V -AX9-	964
1.4.1 8-pin connector -T8br-	964
1.5 Starter -B-	964
1.5.1 1-pin connector -T1xd-	964
1.6 Starter-alternator -C29-	965
1.6.1 6-pin connector -T6d-	965
1.7 Alternator with voltage regulator -CX1-	966-967
1.7.1 2-pin connector -T2bl-	966-967
831 - -Connector views: parts with prefix E - 3	968-1012
1. -Connector views: parts with prefix E	968-1012
1.1 Driver side belt switch -E24-	969
1.1.1 2-pin connector -T2bn-	969
1.2 Front passenger side belt switch -E25-	970
1.2.1 2-pin connector -T2bo-	970
1.3 Glove compartment light switch -E26-	971
1.3.1 3-pin connector -T3h-	971
1.4 Key operated switch to deactivate airbag on front passenger side -E224-	972
1.4.1 6-pin connector -T6w-	972
1.5 Rear lid remote release button -E233-	973
1.5.1 4-pin connector -T4z-	973
1.6 Rear lid handle release button -E234-	974
1.6.1 2-pin connector -T2bm-	974
1.7 Operating and display unit for rear air conditioning system -E265-	975-976
1.7.1 4-pin connector -T4ee-	975
1.7.2 6-pin connector -T6x-	976
1.8 Starter button -E378-	977
1.8.1 6-pin connector -T6y-	977
1.9 Interior lighting central switch button -E390-	977
1.9.1 6-pin connector -T6z-	977
1.10 Remote release button for fuel filler flap and rear lid -E463-	978
1.10.1 4-pin connector -T4ac-	978
1.11 Driver operating unit for memory settings -E464-	979
1.11.1 6-pin connector -T6af-	979
1.12 Front passenger operating unit for memory settings -E465-	980
1.12.1 6-pin connector -T6ag-	980
1.13 Driver seat adjustment operating unit -E470-	981-982
1.13.1 10-pin connector -T10ae-	981
1.13.2 12-pin connector -T12e-	982
1.14 Front passenger seat adjustment operating unit -E471-	983
1.14.1 10-pin connector -T10af-	983
1.14.2 12-pin connector -T12f-	983
1.15 Ignition bypass button -E489-	984

1.15.1 6-pin connector -T6aa-	984
1.16 1-way radio loudspeaker volume control 2 -E502-	985
1.16.1 4-pin connector -T4al-	985
1.17 2-way radio loudspeaker volume control 2 -E503-	986
1.17.1 4-pin connector -T4af-	986
1.18 Electromechanical parking brake button -E538-	987
1.18.1 10-pin connector -T10ad-	987
1.19 Central locking button -E600-	988
1.19.1 4-pin connector -T4ai-	988
1.20 Button 1 for in-car video surveillance -E610-	989
1.20.1 6-pin connector -T6ab-	989
1.21 Button 2 for in-car video surveillance -E611-	990
1.21.1 6-pin connector -T6ac-	990
1.22 Button for tonal sequence standby -E644-	991
1.22.1 2-pin connector -T2br-	991
1.23 Button for daytime running light switch-off -E652-	992
1.23.1 6-pin connector -T6ad-	992
1.24 Driver seat massage function button -E670-	993
1.24.1 4-pin connector -T4aj-	993
1.25 Front passenger seat massage function button -E671-	994
1.25.1 4-pin connector -T4ak-	994
1.26 Towing bracket release button -E754-	995
1.26.1 4-pin connector -T4ad-	995
1.27 Main switch for 2-way radio -E793-	996
1.27.1 6-pin connector -T6ae-	996
1.28 Hazard warning light switch -EX3-	997
1.28.1 6-pin connector -T6aj-	997
1.29 Driver exterior door handle -EX6-	998-999
1.29.1 8-pin connector -T8ag-	998
1.29.2 8-pin connector -T8ah-	999
1.30 Front passenger exterior door handle -EX7-	1000
1.30.1 8-pin connector -T8ai-	1000
1.30.2 8-pin connector -T8aj-	1000
1.31 Rear left exterior door handle -EX8-	1001-1002
1.31.1 8-pin connector -T8ak-	1001
1.31.2 8-pin connector -T8al-	1002
1.32 Rear right exterior door handle -EX9-	1003
1.32.1 8-pin connector -T8am-	1003
1.32.2 8-pin connector -T8an-	1003
1.33 Exterior mirror adjuster -EX11-	1004
1.33.1 6-pin connector -T6ah-	1004
1.34 Tank flap release -EX13-	1005-1006
1.34.1 2-pin connector -T2bs-	1005
1.34.2 4-pin connector -T4ae-	1006
1.35 Window regulator switch in front passenger door -EX27-	1007
1.35.1 4-pin connector -T4y-	1007
1.36 Operating unit for window regulator in driver door -EX36-	1007
1.36.1 10-pin connector -T10ac-	1007
1.37 Operating unit for rear lid control -EX58-	1008
1.37.1 4-pin connector -T4ah-	1008
1.38 Operating unit for lighting -EX59-	1009-1010
1.38.1 4-pin connector -T4am-	1009-1010
1.39 Operating unit in rear door, front passenger side -EX60-	1011
1.39.1 4-pin connector -T4es-	1011
1.40 Operating unit in rear driver side door -EX61-	1012
1.40.1 4-pin connector -T4ag-	1012
832 - -Connector views: parts with prefix F - 3	1013-1034
1. -Connector views: parts with prefix F	1013-1034
1.1 Oil pressure switch -F22-	1013
1.1.1 1-pin connector -T1du-	1013
1.2 Bonnet contact switch -F266-	1014
1.2.1 2-pin connector -T2bv-	1014
1.3 Rear left vanity mirror contact switch -F298-	1015
1.3.1 2-pin connector -T2bt-	1015
1.4 Rear right vanity mirror contact switch -F299-	1016
1.4.1 2-pin connector -T2bu-	1016

1.5 Bonnet contact switch 2 -F329-	1017
1.5.1 2-pin connector -T2bw-	1017
1.6 Actuator 1 for camshaft adjustment -F366-	1018
1.6.1 2-pin connector -T2r-	1018
1.7 Actuator 2 for camshaft adjustment -F367-	1019
1.7.1 2-pin connector -T2s-	1019
1.8 Actuator 3 for camshaft adjustment -F368-	1020
1.8.1 2-pin connector -T2u-	1020
1.9 Actuator 4 for camshaft adjustment -F369-	1021
1.9.1 2-pin connector -T2v-	1021
1.10 Actuator 5 for camshaft adjustment -F370-	1022
1.10.1 2-pin connector -T2w-	1022
1.11 Actuator 6 for camshaft adjustment -F371-	1023
1.11.1 2-pin connector -T2z-	1023
1.12 Actuator 7 for camshaft adjustment -F372-	1024
1.12.1 2-pin connector -T2aa-	1024
1.13 Actuator 8 for camshaft adjustment -F373-	1025
1.13.1 2-pin connector -T2ab-	1025
1.14 Oil pressure switch for reduced oil pressure -F378-	1026
1.14.1 1-pin connector -T1dx-	1026
1.15 Belt switch for seat row 2, driver side -F390-	1027
1.15.1 2-pin connector -T2bp-	1027
1.16 Belt switch for seat row 2, passenger side -F392-	1028
1.16.1 2-pin connector -T2bq-	1028
1.17 Stage 2 oil pressure switch -F446-	1029
1.17.1 2-pin connector -T2q-	1029
1.18 Actuator for high-voltage charging flap lock 1 -F496-	1030
1.18.1 2-pin connector -T2ak-	1030
1.19 Actuator for high-voltage charging socket lock 1 -F498-	1031
1.19.1 4-pin connector -T4at-	1031
1.20 Twin belt buckle -FX4-	1032-1034
1.20.1 4-pin connector -T4aa-	1032
1.20.2 4-pin connector -T4ab-	1033-1034
833 - -Connector views: parts with prefix G - 3	1035-1159
1. -Connector views: parts with prefix G	1035-1159
1.1 Oil pressure sender -G10-	1039
1.1.1 3-pin connector -T3i-	1039
1.2 Ambient temperature sensor -G17-	1039
1.2.1 2-pin connector -T2co-	1039
1.3 Engine speed sender -G28-	1040
1.3.1 3-pin connector -T3ap-	1040
1.4 Charge pressure sender -G31-	1041
1.4.1 3-pin connector -T3n-	1041
1.5 Coolant shortage indicator sender -G32-	1042
1.5.1 2-pin connector -T2dg-	1042
1.6 Windscreen washer fluid level sender -G33-	1043
1.6.1 2-pin connector -T2dh-	1043
1.7 Front right brake pad wear sender -G35-	1044
1.7.1 2-pin connector -T2dl-	1044
1.8 Hall sender -G40-	1045
1.8.1 3-pin connector -T3f-	1045
1.9 Rear right speed sensor -G44-	1046
1.9.1 2-pin connector -T2dp-	1046
1.10 Front right speed sensor -G45-	1047
1.10.1 2-pin connector -T2dr-	1047
1.11 Rear left speed sensor -G46-	1048
1.11.1 2-pin connector -T2dt-	1048
1.12 Front left speed sensor -G47-	1049
1.12.1 2-pin connector -T2du-	1049
1.13 Knock sensor 1 -G61-	1050-1051
1.13.1 2-pin connector -T2b-	1050
1.13.2 2-pin connector -T2dw-	1051
1.14 Coolant temperature sender -G62-	1052-1053
1.14.1 2-pin connector -T2a-	1052
1.14.2 2-pin connector -T2da-	1053
1.14.3 2-pin connector -T2dv-	1053

1.15 Water separator sender -G63-	1054
1.15.1 3-pin connector -T3bg-	1054
1.16 Rear left vehicle level sender -G76-	1055-1056
1.16.1 3-pin connector -T3bl-	1055
1.16.2 3-pin connector -T3bm-	1056
1.16.3 3-pin connector -T3q-	1057
1.17 Front left vehicle level sender -G78-	1057
1.17.1 3-pin connector -T3z-	1057
1.18 Engine outlet coolant temperature sender -G82-	1058-1059
1.18.1 2-pin connector -T2eb-	1058
1.18.2 2-pin connector -T2ef-	1059
1.19 Radiator outlet coolant temperature sender -G83-	1060
1.19.1 2-pin connector -T2eg-	1060
1.20 Seat occupied sensor on front passenger side -G128-	1060-1061
1.20.1 2-pin connector -T2cm-	1061
1.20.2 2-pin connector -T2cn-	1061
1.21 Left vent temperature sender -G150-	1062
1.21.1 2-pin connector -T2dm-	1062
1.22 Right vent temperature sender -G151-	1063
1.22.1 2-pin connector -T2dn-	1063
1.23 Fuel gauge sender 2 -G169-	1064
1.23.1 3-pin connector -T3aq-	1064
1.24 Rear vent temperature sender -G174-	1065
1.24.1 2-pin connector -T2cp-	1065
1.25 Rear seat occupied sensor on driver side -G177-	1066
1.25.1 2-pin connector -T2cq-	1066
1.26 Rear seat occupied sensor on passenger side -G178-	1067
1.26.1 2-pin connector -T2cr-	1067
1.27 Side airbag crash sensor on driver side -G179-	1068
1.27.1 2-pin connector -T2cs-	1068
1.28 Side airbag crash sensor on front passenger side -G180-	1069
1.28.1 2-pin connector -T2cu-	1069
1.29 Footwell vent temperature sender -G192-	1070
1.29.1 2-pin connector -T2cv-	1070
1.30 Rear left parking aid sender -G203-	1071-1072
1.30.1 3-pin connector -T3r-	1071
1.30.2 3-pin connector -T3s-	1072
1.31 Rear centre left parking aid sender -G204-	1073
1.31.1 3-pin connector -T3t-	1073
1.31.2 3-pin connector -T3u-	1073
1.32 Rear centre right parking aid sender -G205-	1074-1075
1.32.1 3-pin connector -T3v-	1074
1.32.2 3-pin connector -T3w-	1075
1.33 Rear right parking aid sender -G206-	1076
1.33.1 3-pin connector -T3x-	1076
1.33.2 3-pin connector -T3y-	1076
1.34 Exhaust gas temperature sender 1 -G235-	1077
1.34.1 2-pin connector -T2cw-	1077
1.35 Air quality sensor -G238-	1078
1.35.1 3-pin connector -T3ab-	1078
1.36 Coolant temperature sender for heater -G241-	1079
1.36.1 2-pin connector -T2ac-	1079
1.37 Fuel pressure sender -G247-	1080-1081
1.37.1 3-pin connector -T3ac-	1080
1.37.2 3-pin connector -T3d-	1081
1.38 Front right parking aid sender -G252-	1082
1.38.1 3-pin connector -T3ae-	1082
1.38.2 3-pin connector -T3af-	1082
1.39 Front centre right parking aid sender -G253-	1083-1084
1.39.1 3-pin connector -T3ag-	1083
1.39.2 3-pin connector -T3ah-	1084
1.40 Front centre left parking aid sender -G254-	1085
1.40.1 3-pin connector -T3ai-	1085
1.40.2 3-pin connector -T3aj-	1085
1.41 Front left parking aid sender -G255-	1086-1087
1.41.1 3-pin connector -T3ak-	1086

1.41.2 3-pin connector -T3al-	1087
1.42 Rear side airbag crash sensor on driver side -G256-	1088
1.42.1 2-pin connector -T2cy-	1088
1.43 Rear side airbag crash sensor on passenger side -G257-	1088
1.43.1 2-pin connector -T2cz-	1088
1.44 Oil level and oil temperature sender -G266-	1089-1090
1.44.1 3-pin connector -T3am-	1089
1.44.2 3-pin connector -T3c-	1090
1.45 Front airbag crash sensor for driver side -G283-	1091
1.45.1 2-pin connector -T2dc-	1091
1.46 Front airbag crash sensor for front passenger side -G284-	1091
1.46.1 2-pin connector -T2de-	1091
1.47 Front right vehicle level sender -G289-	1092
1.47.1 3-pin connector -T3p-	1092
1.48 Hall sender 3 -G300-	1093
1.48.1 3-pin connector -T3a-	1093
1.49 Evaporator temperature sensor -G308-	1094
1.49.1 2-pin connector -T2df-	1094
1.50 Intake manifold flap potentiometer -G336-	1095
1.50.1 3-pin connector -T3e-	1095
1.51 Front left body acceleration sender -G341-	1096
1.51.1 2-pin connector -T2di-	1096
1.52 Front right body acceleration sender -G342-	1097
1.52.1 2-pin connector -T2dj-	1097
1.53 Rear body acceleration sender -G343-	1098
1.53.1 2-pin connector -T2dk-	1098
1.54 Refrigerant pressure and temperature sender -G395-	1099
1.54.1 4-pin connector -T4n-	1099
1.55 Rain and light sensor -G397-	1100
1.55.1 3-pin connector -T3av-	1100
1.56 Tank pressure sensor -G400-	1101
1.56.1 3-pin connector -T3aa-	1101
1.57 Exhaust gas temperature sender 2 -G448-	1102
1.57.1 2-pin connector -T2dq-	1102
1.58 Exhaust gas pressure sensor 1 -G450-	1103
1.58.1 3-pin connector -T3bc-	1103
1.59 Toll collection sender -G459-	1104
1.59.1 2-pin connector -T2ds-	1104
1.60 Exhaust gas temperature sender 3 -G495-	1105
1.60.1 2-pin connector -T2dv-	1105
1.61 Pressure differential sender -G505-	1106
1.61.1 3-pin connector -T3bb-	1106
1.62 Front left sender for park assist steering on left side of vehicle -G568-	1107
1.62.1 3-pin connector -T3bd-	1107
1.63 Front right sender for park assist steering on right side of vehicle -G569-	1108
1.63.1 3-pin connector -T3be-	1108
1.64 Anti-theft alarm sensor -G578-	1109
1.64.1 4-pin connector -T4as-	1109
1.65 Exhaust gas temperature sender 4 -G648-	1110
1.65.1 2-pin connector -T2ea-	1110
1.66 Temperature sensor 2 for exhaust recirculation -G690-	1111
1.66.1 2-pin connector -T2ec-	1111
1.67 Rear left park assist steering sender -G716-	1112
1.67.1 3-pin connector -T3bj-	1112
1.68 Rear right park assist steering sender -G717-	1113
1.68.1 3-pin connector -T3bk-	1113
1.69 Particulate sensor -G784-	1114
1.69.1 4-pin connector -T4aw-	1114
1.70 Temperature sender after electric drive motor -G788-	1115
1.70.1 2-pin connector -T2ed-	1115
1.71 Pressure sender for refrigerant circuit -G805-	1116
1.71.1 3-pin connector -T3bn-	1116
1.72 Charge air temperature sender before charge air cooler -G810-	1117
1.72.1 2-pin connector -T2do-	1117
1.73 Charge air temperature sender after charge air cooler -G811-	1118
1.73.1 2-pin connector -T2ee-	1118

1.74 Coolant shortage indicator sender 2 -G837-	1119
1.74.1 2-pin connector -T2ex-	1119
1.75 Coolant temperature sender 1 for high-voltage battery -G898-	1120
1.75.1 4-pin connector -T4ay-	1120
1.76 Coolant temperature sender 2 for high-voltage battery -G899-	1121
1.76.1 4-pin connector -T4ax-	1121
1.77 Front stop command light -G954-	1122
1.77.1 4-pin connector -T4aq-	1122
1.78 Rear stop command light -G955-	1123
1.78.1 4-pin connector -T4ao-	1123
1.79 Inlet camshaft position sender -G1002-	1124-1125
1.79.1 3-pin connector -T3j-	1124
1.79.2 3-pin connector -T3k-	1125
1.80 Exhaust camshaft position sender -G1003-	1126
1.80.1 3-pin connector -T3l-	1126
1.81 Rear seat occupied sensor, centre -G1010-	1126
1.81.1 2-pin connector -T2cj-	1126
1.82 Pressure differential sender for particulate filter -G1037-	1127-1128
1.82.1 3-pin connector -T3m-	1127
1.82.2 3-pin connector -T3o-	1128
1.83 Seat occupied sensor on driver side -G1067-	1129
1.83.1 2-pin connector -T2ck-	1129
1.83.2 2-pin connector -T2cl-	1129
1.84 Vehicle interior temperature sensor -G1090-	1130
1.84.1 4-pin connector -T4ap-	1130
1.85 Crash sensor for side airbag in B-pillar, driver side -G1101-	1131
1.85.1 2-pin connector -T2db-	1131
1.86 Crash sensor for side airbag in B-pillar, passenger side -G1102-	1132
1.86.1 2-pin connector -T2dd-	1132
1.87 Coolant temperature sender for charge air cooler -G1130-	1133
1.87.1 2-pin connector -T2ct-	1133
1.88 Fuel delivery unit -GX1-	1134-1136
1.88.1 2-pin connector -T2ei-	1134
1.88.2 3-pin connector -T3de-	1135
1.88.3 4-pin connector -T4az-	1136
1.88.4 5-pin connector -T5f-	1136
1.89 Accelerator pedal module -GX2-	1137
1.89.1 6-pin connector -T6am-	1137
1.90 Throttle valve module -GX3-	1138-1139
1.90.1 5-pin connector -T5h-	1138
1.90.2 6-pin connector -T6an-	1139
1.91 Exhaust gas recirculation valve 1 -GX5-	1140
1.91.1 6-pin connector -T6aq-	1140
1.92 Exhaust gas recirculation valve 2 -GX6-	1140
1.92.1 5-pin connector -T5k-	1140
1.93 Lambda probe 1 after catalytic converter -GX7-	1141
1.93.1 4-pin connector -T4be-	1141
1.94 Intake manifold sender -GX9-	1142-1143
1.94.1 4-pin connector -T4bf-	1142
1.94.2 4-pin connector -T4j-	1143
1.95 Lambda probe 1 before catalytic converter -GX10-	1144
1.95.1 4-pin connector -T4a-	1144
1.95.2 5-pin connector -T5g-	1144
1.96 Delivery unit for reducing agent metering system -GX19-	1145-1146
1.96.1 5-pin connector -T5ag-	1145
1.96.2 7-pin connector -T7b-	1146
1.97 Temperature and pressure sender for low-pressure fuel system -GX20-	1147
1.97.1 4-pin connector -T4ar-	1147
1.98 Charge pressure sender -GX26-	1147
1.98.1 3-pin connector -T3as-	1147
1.99 Control unit for NOx sender -GX30-	1148
1.99.1 5-pin connector -T5n-	1148
1.100 Engine temperature regulation module -GX33-	1149-1150
1.100.1 5-pin connector -T5a-	1149
1.100.2 5-pin connector -T5i-	1150
1.101 Charge pressure control module -GX34-	1151

1.101.1 6-pin connector -T6ao-	1151
1.101.2 6-pin connector -T6e-	1151
1.102 Air mass measurement module -GX35-	1152
1.102.1 3-pin connector -T3bi-	1152
1.103 Dual exhaust gas temperature sensor 1 -GX41-	1153-1154
1.103.1 3-pin connector -T3an-	1153
1.103.2 3-pin connector -T3bp-	1154
1.104 Pressure sensor for activated charcoal filter air flushing -GX44-	1155
1.104.1 4-pin connector -T4bc-	1155
1.104.2 4-pin connector -T4l-	1155
1.105 Control unit 2 for NOx sender -GX46-	1156
1.105.1 5-pin connector -T5o-	1156
1.106 Function unit for active oil separation -GX47-	1157
1.106.1 3-pin connector -T3bs-	1157
1.107 Control unit 3 for NOx sender -GX50-	1158-1159
1.107.1 5-pin connector -T5j-	1158-1159
834 - -Connector views: parts with prefix H to I - 3	1160-1166
1. -Connector views: parts with prefix H to I	1160-1166
1.1 Horn plate -H-	1160-1161
1.1.1 1-pin connector -T1st-	1160
1.1.2 1-pin connector -T1xg-	1161
1.1.3 1-pin connector -T1zf-	1161
1.2 Alarm horn -H12-	1162
1.2.1 3-pin connector -T3br-	1162
1.3 Rear lid warning buzzer -H32-	1163
1.3.1 2-pin connector -T2ej-	1163
1.4 Left horn -H33-	1164
1.4.1 2-pin connector -T2ek-	1164
1.5 Right horn -H34-	1165-1166
1.5.1 2-pin connector -T2el-	1165-1166
835 - -Connector views: parts with prefix J - 3	1167-1282
1. -Connector views: parts with prefix J	1167-1282
1.1 Rotating light and siren system control unit -J23-	1169
1.1.1 12-pin connector -T12k-	1169
1.1.2 32-pin connector -T32b-	1170
1.2 ABS control unit -J104-	1170
1.2.1 46-pin connector -T46a-	1170
1.3 Fresh air blower control unit -J126-	1171
1.3.1 4-pin connector -T4bg-	1171
1.4 Seat and steering column adjustment control unit with memory -J136-	1172-1174
1.4.1 4-pin connector -T4el-	1172
1.4.2 20-pin connector -T20j-	1173
1.4.3 26-pin connector -T26d-	1174
1.4.4 26-pin connector -T26i-	1174
1.5 Airbag control unit -J234-	1175-1177
1.5.1 140-pin connector -T140a-	1175
1.5.2 140-pin connector -T140b-	1176
1.5.3 140-pin connector -T140c-	1177
1.5.4 140-pin connector -T140d-	1177
1.6 Electronically controlled damping control unit -J250-	1178
1.6.1 81-pin connector -T81a-	1178
1.7 Trailer detector control unit -J345-	1179-1181
1.7.1 6-pin connector -T6ce-	1179
1.7.2 10-pin connector -T10ar-	1180
1.7.3 10-pin connector -T10as-	1181
1.7.4 24-pin connector -T24b-	1181
1.8 Auxiliary heater control unit -J364-	1182-1183
1.8.1 2-pin connector -T2jv-	1182
1.8.2 6-pin connector -T6aw-	1183
1.9 Battery monitor control unit -J367-	1184
1.9.1 2-pin connector -T2ko-	1184
1.10 Driver door control unit -J386-	1184-1186
1.10.1 6-pin connector -T6ax-	1185
1.10.2 16-pin connector -T16q-	1185
1.10.3 20-pin connector -T20d-	1186
1.10.4 32-pin connector -T32l-	1187

1.11 Front passenger door control unit -J387-	1187-1189
1.11.1 6-pin connector -T6ay-	1188
1.11.2 16-pin connector -T16r-	1188
1.11.3 20-pin connector -T20e-	1189
1.11.4 32-pin connector -T32m-	1190
1.12 Adaptive cruise control unit -J428-	1190
1.12.1 8-pin connector -T8ap-	1190
1.13 Parking aid control unit -J446-	1191-1192
1.13.1 18-pin connector -T18b-	1191
1.13.2 26-pin connector -T26j-	1192
1.14 Multifunction steering wheel control unit -J453-	1193
1.14.1 6-pin connector -T6ak-	1193
1.15 All-wheel drive control unit -J492-	1193
1.15.1 8-pin connector -T8aq-	1193
1.16 Module monitor control unit for batteries -J497-	1194
1.16.1 12-pin connector -T12l-	1194
1.17 Power steering control unit -J500-	1195-1196
1.17.1 2-pin connector -T2em-	1195
1.17.2 3-pin connector -T3df-	1196
1.18 Tyre Pressure Monitoring System control unit -J502-	1197
1.18.1 4-pin connector -T4bh-	1197
1.19 Entry and start authorisation control unit -J518-	1197
1.19.1 32-pin connector -T32h-	1197
1.20 Onboard supply control unit -J519-	1198-1199
1.20.1 46-pin connector -T46b-	1198
1.20.2 73-pin connector -T73a-	1199
1.20.3 73-pin connector -T73b-	1200
1.21 Front passenger seat adjustment with memory control unit -J521-	1200-1202
1.21.1 4-pin connector -T4ek-	1201
1.21.2 20-pin connector -T20i-	1201
1.21.3 26-pin connector -T26c-	1202
1.21.4 26-pin connector -T26h-	1203
1.22 Digital sound package control unit -J525-	1203-1204
1.22.1 9-pin connector -T9d-	1203
1.22.2 38-pin connector -T38a-	1204
1.23 Steering column electronics control unit -J527-	1205-1206
1.23.1 2-pin connector -T2lt-	1205
1.23.2 12-pin connector -T12n-	1206
1.23.3 20-pin connector -T20b-	1207
1.24 Data bus diagnostic interface -J533-	1207-1213
1.24.1 2-pin connector -T2jw-	1208
1.24.2 2-pin connector -T2kl-	1208
1.24.3 2-pin connector -T2ks-	1209
1.24.4 2-pin connector -T2ku-	1210
1.24.5 2-pin connector -T2ky-	1210
1.24.6 2-pin connector -T2lb-	1211
1.24.7 2-pin connector -T2lc-	1212
1.24.8 2-pin connector -T2ld-	1212
1.24.9 2-pin connector -T2le-	1213
1.24.10 26-pin connector -T26e-	1214
1.25 Fuel pump control unit -J538-	1214-1215
1.25.1 5-pin connector -T5m-	1214
1.25.2 6-pin connector -T6bb-	1215
1.26 Rear lid control unit -J605-	1216-1217
1.26.1 10-pin connector -T10ah-	1216
1.26.2 32-pin connector -T32j-	1217
1.27 Special vehicle control unit -J608-	1218-1220
1.27.1 6-pin connector -T6bc-	1218
1.27.2 12-pin connector -T12o-	1219
1.27.3 20-pin connector -T20h-	1219
1.27.4 40-pin connector -T40a-	1220
1.28 Engine/motor control unit -J623-	1221-1223
1.28.1 60-pin connector -T60a-	1221
1.28.2 60-pin connector -T60b-	1222
1.28.3 91-pin connector -T91a-	1222
1.28.4 94-pin connector -T94a-	1223

1.28.5 105-pin connector -T105a-	1224
1.29 Internet access control unit -J666-	1224-1225
1.29.1 2-pin connector -T2km-	1224
1.29.2 11-pin connector -T11c-	1225
1.30 Chip card reader control unit -J676-	1226-1227
1.30.1 2-pin connector -T2kk-	1226
1.30.2 5-pin connector -T5af-	1227
1.30.3 10-pin connector -T10z-	1228
1.31 Display unit for front information display and operating unit control unit -J685-	1228-1229
1.31.1 5-pin connector -T5ah-	1228
1.31.2 8-pin connector -T8ar-	1229
1.32 Mechatronic unit for dual clutch gearbox -J743-	1230-1232
1.32.1 2-pin connector -T2en-	1230
1.32.2 10-pin connector -T10aq-	1231
1.32.3 16-pin connector -T16g-	1232
1.32.4 25-pin connector -T25a-	1232
1.33 Control unit for cornering light and headlight range control -J745-	1233
1.33.1 32-pin connector -T32f-	1233
1.34 Control unit for electronic steering column lock -J764-	1234
1.34.1 4-pin connector -T4cn-	1234
1.35 Lane change assist control unit -J769-	1235
1.35.1 12-pin connector -T12h-	1235
1.36 Lane change assist control unit 2 -J770-	1236
1.36.1 12-pin connector -T12g-	1236
1.37 Control unit 1 for information electronics -J794-	1237-1243
1.37.1 5-pin connector -T5al-	1237
1.37.2 5-pin connector -T5am-	1238
1.37.3 5-pin connector -T5an-	1239
1.37.4 8-pin connector -T8as-	1240
1.37.5 8-pin connector -T8bs-	1240
1.37.6 8-pin connector -T8bu-	1241
1.37.7 12-pin connector -T12p-	1242
1.37.8 12-pin connector -T12s-	1242
1.37.9 12-pin connector -T12t-	1243
1.38 Control unit for front left massage seat -J803-	1244
1.38.1 10-pin connector -T10ai-	1244
1.39 Control unit for front right massage seat -J804-	1244
1.39.1 10-pin connector -T10aj-	1244
1.40 Battery regulation control unit -J840-	1245-1247
1.40.1 2-pin connector -T2az-	1245
1.40.2 16-pin connector -T16k-	1246
1.40.3 32-pin connector -T32g-	1247
1.40.4 40-pin connector -T40b-	1247
1.41 Exhaust flap control unit -J883-	1248
1.41.1 5-pin connector -T5p-	1248
1.42 Control unit for reducing agent heater -J891-	1249
1.42.1 9-pin connector -T9b-	1249
1.43 Control unit for Head-up Display -J898-	1250
1.43.1 10-pin connector -T10ak-	1250
1.44 Rear driver side door control unit -J926-	1251-1252
1.44.1 6-pin connector -T6az-	1251
1.44.2 16-pin connector -T16n-	1252
1.44.3 20-pin connector -T20f-	1253
1.45 Rear passenger side door control unit -J927-	1253-1255
1.45.1 6-pin connector -T6ba-	1254
1.45.2 16-pin connector -T16o-	1254
1.45.3 16-pin connector -T16s-	1255
1.45.4 20-pin connector -T20g-	1256
1.46 Control unit for overhead view camera -J928-	1256-1260
1.46.1 2-pin connector -T2eo-	1257
1.46.2 2-pin connector -T2jx-	1257
1.46.3 2-pin connector -T2kp-	1258
1.46.4 2-pin connector -T2kt-	1259
1.46.5 2-pin connector -T2kv-	1259
1.46.6 20-pin connector -T20k-	1260
1.47 Rear lid power opening control unit -J938-	1261

1.47.1 4-pin connector -T4av-	1261
1.47.2 4-pin connector -T4ev-	1261
1.48 Engine sound generator control unit -J943-	1262
1.48.1 4-pin connector -T4k-	1262
1.49 Emergency call module control unit and communication unit -J949-	1263-1264
1.49.1 2-pin connector -T2ki-	1263
1.49.2 4-pin connector -T4en-	1264
1.49.3 36-pin connector -T36a-	1265
1.50 Heater and air conditioning system control unit -J979-	1265-1267
1.50.1 16-pin connector -T16j-	1266
1.50.2 16-pin connector -T16l-	1266
1.50.3 20-pin connector -T20c-	1267
1.50.4 22-pin connector -T22g-	1268
1.51 Front left radar sensor control unit for object detection -J1088-	1268
1.51.1 12-pin connector -T12i-	1268
1.52 Front right radar sensor control unit for object detection -J1089-	1269
1.52.1 12-pin connector -T12j-	1269
1.53 Charging unit 1 for mobile devices -J1146-	1270-1271
1.53.1 2-pin connector -T2ke-	1270
1.53.2 6-pin connector -T6bu-	1271
1.54 Control unit 2 for break-in protection -J1192-	1272
1.54.1 6-pin connector -T6ar-	1272
1.55 Control unit 3 for break-in protection -J1193-	1272
1.55.1 6-pin connector -T6as-	1272
1.56 Control unit 4 for break-in protection -J1194-	1273
1.56.1 6-pin connector -T6at-	1273
1.57 Control unit 5 for break-in protection -J1195-	1274
1.57.1 6-pin connector -T6au-	1274
1.58 Control unit 1 for activation of charging flap and charging socket -J1245-	1275-1276
1.58.1 12-pin connector -T12q-	1275
1.58.2 16-pin connector -T16a-	1276
1.59 Roof system control unit -J1355-	1277-1278
1.59.1 4-pin connector -T4ef-	1277
1.59.2 5-pin connector -T5l-	1278
1.59.3 16-pin connector -T16m-	1278
1.60 Power and control electronics for electric drive -JX1-	1279-1282
1.60.1 3-pin connector -T3aw-	1279
1.60.2 6-pin connector -T6b-	1280
1.60.3 9-pin connector -T9e-	1281
1.60.4 28-pin connector -T28a-	1281-1282
836 - -Connector views: parts with prefix K to M - 3	1283-1324
1. -Connector views: parts with prefix K to M	1283-1324
1.1 Central locking SAFELOCK function warning lamp -K133-	1284
1.1.1 2-pin connector -T2ep-	1284
1.2 Front left footwell light -K268-	1285
1.2.1 4-pin connector -T4bj-	1285
1.3 Front right footwell light -K269-	1285
1.3.1 4-pin connector -T4bk-	1285
1.4 Dash panel insert -KX2-	1286
1.4.1 18-pin connector -T18g-	1286
1.5 Driver door opener illumination bulb -L108-	1287
1.5.1 4-pin connector -T4bl-	1287
1.6 Front passenger door opener illumination bulb -L109-	1288
1.6.1 4-pin connector -T4bm-	1288
1.7 Storage compartment illumination bulb -L120-	1289
1.7.1 2-pin connector -T2eq-	1289
1.8 Magnetic flashing light -L139-	1290
1.8.1 2-pin connector -T2cx-	1290
1.9 Rear left door storage compartment illumination bulb -L170-	1291
1.9.1 4-pin connector -T4bo-	1291
1.10 Rear right door storage compartment illumination bulb -L171-	1292
1.10.1 4-pin connector -T4ba-	1292
1.11 Light 1 for front centre console background lighting -L193-	1293
1.11.1 4-pin connector -T4bp-	1293
1.12 Light 2 for front centre console background lighting -L194-	1294
1.12.1 4-pin connector -T4ba-	1294

1.13 Light 1 for dash panel contour lighting -L243-	1295
1.13.1 2-pin connector -T2es-	1295
1.14 Light 2 for dash panel contour lighting -L244-	1296
1.14.1 4-pin connector -T4bu-	1296
1.15 Light 3 for dash panel contour lighting -L245-	1297
1.15.1 4-pin connector -T4bs-	1297
1.16 Light for left door storage compartment illumination -L255-	1298
1.16.1 4-pin connector -T4bz-	1298
1.17 Light for right door storage compartment illumination -L256-	1299
1.17.1 4-pin connector -T4ca-	1299
1.18 LED module for charging socket 1 -L263-	1300
1.18.1 4-pin connector -T4s-	1300
1.19 Light 2 for dashboard background lighting -L293-	1301
1.19.1 4-pin connector -T4cc-	1301
1.20 Light conductor for contour lighting in radiator grille, front right -L362-	1302
1.20.1 2-pin connector -T2et-	1302
1.21 Light conductor for contour lighting in radiator grille, front left -L363-	1303
1.21.1 2-pin connector -T2eu-	1303
1.22 Light 1 for decorative backlighting in front door, driver side -L430-	1304
1.22.1 4-pin connector -T4ce-	1304
1.23 Light 1 for decorative backlighting in front door, passenger side -L440-	1305
1.23.1 4-pin connector -T4cf-	1305
1.24 Light 1 for decorative backlighting in rear left door -L449-	1306
1.24.1 4-pin connector -T4cg-	1306
1.25 Light 2 for decorative backlighting in dash panel, passenger side -L472-	1307
1.25.1 4-pin connector -T4ch-	1307
1.26 Light 1 for decorative backlighting in rear right door -L549-	1308
1.26.1 4-pin connector -T4bn-	1308
1.27 High-level brake light bulb -M25-	1309
1.27.1 2-pin connector -T2ew-	1309
1.28 Flashing light in rear lid -M130-	1310
1.28.1 3-pin connector -T3bt-	1310
1.29 Flashing light 2 in rear lid -M131-	1311
1.29.1 3-pin connector -T3bu-	1311
1.30 Flashing light 3 in rear lid -M132-	1312
1.30.1 3-pin connector -T3bv-	1312
1.31 Flashing light 4 in rear lid -M133-	1313
1.31.1 3-pin connector -T3bw-	1313
1.32 Flashing light in windscreen for blue flashing light -M138-	1314
1.32.1 2-pin connector -T2ev-	1314
1.33 Front left headlight -MX1-	1315
1.33.1 14-pin connector -T14af-	1315
1.34 Front right headlight -MX2-	1316
1.34.1 14-pin connector -T14ag-	1316
1.35 Left tail light cluster -MX3-	1317-1318
1.35.1 4-pin connector -T4ci-	1317
1.35.2 6-pin connector -T6bk-	1318
1.36 Right tail light cluster -MX4-	1319
1.36.1 4-pin connector -T4cj-	1319
1.36.2 6-pin connector -T6bn-	1319
1.37 Centre tail light cluster -MX13-	1320-1324
1.37.1 6-pin connector -T6bf-	1320
1.37.2 6-pin connector -T6bg-	1321
1.37.3 6-pin connector -T6bh-	1322
1.37.4 6-pin connector -T6cf-	1322
1.37.5 6-pin connector -T6cg-	1323
1.37.6 6-pin connector -T6ch-	1324
837 - -Connector views: parts with prefix N - 3	1325-1397
1. -Connector views: parts with prefix N	1325-1397
1.1 Injector, cylinder 1 -N30-	1327-1328
1.1.1 2-pin connector -T2fr-	1327
1.1.2 2-pin connector -T2i-	1328
1.1.3 3-pin connector -T3cc-	1328
1.2 Injector, cylinder 2 -N31-	1329-1330
1.2.1 2-pin connector -T2fu-	1329
1.2.2 2-pin connector -T2l-	1330

1.2.3 3-pin connector -T3cd-	1331
1.3 Injector, cylinder 3 -N32-	1331-1333
1.3.1 2-pin connector -T2ga-	1332
1.3.2 2-pin connector -T2m-	1332
1.3.3 3-pin connector -T3ce-	1333
1.4 Injector, cylinder 4 -N33-	1334-1335
1.4.1 2-pin connector -T2gd-	1334
1.4.2 2-pin connector -T2n-	1335
1.4.3 3-pin connector -T3cf-	1335
1.5 Ignition coil 1 with output stage -N70-	1336
1.5.1 4-pin connector -T4cr-	1336
1.6 Heater element for crankcase breather -N79-	1337
1.6.1 2-pin connector -T2hb-	1337
1.7 Activated charcoal filter solenoid valve 1 -N80-	1338-1339
1.7.1 2-pin connector -T2d-	1338
1.7.2 2-pin connector -T2hf-	1339
1.8 Airbag igniter on driver side -N95-	1340
1.8.1 2-pin connector -T2hh-	1340
1.9 Ignition coil 2 with output stage -N127-	1340
1.9.1 4-pin connector -T4ck-	1340
1.10 Driver seat belt tensioner igniter 1 -N153-	1341
1.10.1 2-pin connector -T2ey-	1341
1.11 Front passenger seat belt tensioner igniter 1 -N154-	1342
1.11.1 2-pin connector -T2ez-	1342
1.12 Rear belt tensioner igniter on driver side -N196-	1343
1.12.1 2-pin connector -T2fa-	1343
1.13 Rear belt tensioner igniter on passenger side -N197-	1344
1.13.1 2-pin connector -T2fb-	1344
1.14 Side airbag igniter on driver side -N199-	1345
1.14.1 3-pin connector -T3by-	1345
1.15 Side airbag igniter on front passenger side -N200-	1346
1.15.1 3-pin connector -T3bz-	1346
1.16 Rear side airbag igniter on driver side -N201-	1347
1.16.1 3-pin connector -T3ca-	1347
1.17 Rear side airbag igniter on passenger side -N202-	1348
1.17.1 3-pin connector -T3cb-	1348
1.18 Camshaft control valve 1 -N205-	1349
1.18.1 2-pin connector -T2f-	1349
1.19 Turbocharger air recirculation valve -N249-	1350
1.19.1 2-pin connector -T2e-	1350
1.20 Driver side curtain airbag igniter -N251-	1351
1.20.1 2-pin connector -T2fe-	1351
1.21 Front passenger side curtain airbag igniter -N252-	1352
1.21.1 2-pin connector -T2ff-	1352
1.22 Fuel pressure regulating valve -N276-	1353
1.22.1 2-pin connector -T2fg-	1353
1.23 Heater coolant shut-off valve -N279-	1354
1.23.1 2-pin connector -T2er-	1354
1.24 Fuel tank shut-off valve -N288-	1355
1.24.1 2-pin connector -T2ae-	1355
1.25 Fuel metering valve -N290-	1356-1357
1.25.1 2-pin connector -T2fl-	1356
1.25.2 2-pin connector -T2fm-	1357
1.25.3 2-pin connector -T2p-	1358
1.26 Ignition coil 3 with output stage -N291-	1358
1.26.1 4-pin connector -T4cl-	1358
1.27 Ignition coil 4 with output stage -N292-	1359
1.27.1 4-pin connector -T4cm-	1359
1.28 Driver side knee airbag igniter -N295-	1360-1361
1.28.1 2-pin connector -T2fn-	1360
1.28.2 2-pin connector -T2fo-	1361
1.29 Igniter for driver side seat belt tensioner 2 -N297-	1362
1.29.1 2-pin connector -T2fp-	1362
1.30 Igniter for front passenger side seat belt tensioner 2 -N298-	1362
1.30.1 2-pin connector -T2fq-	1362
1.31 Intake manifold flap valve -N316-	1363

1.31.1 2-pin connector -T2g-	1363
1.32 Exhaust camshaft control valve 1 -N318-	1364-1365
1.32.1 2-pin connector -T2fy-	1364
1.32.2 2-pin connector -T2h-	1365
1.33 Front left shock absorber damping adjustment valve -N336-	1366
1.33.1 2-pin connector -T2gg-	1366
1.34 Front right shock absorber damping adjustment valve -N337-	1366
1.34.1 2-pin connector -T2gh-	1366
1.35 Rear left shock absorber damping adjustment valve -N338-	1367
1.35.1 2-pin connector -T2gi-	1367
1.36 Rear right shock absorber damping adjustment valve -N339-	1368
1.36.1 2-pin connector -T2gj-	1368
1.37 Valve for oil pressure control -N428-	1369-1370
1.37.1 2-pin connector -T2gl-	1369
1.37.2 2-pin connector -T2y-	1370
1.38 Injector for reducing agent -N474-	1371
1.38.1 2-pin connector -T2gm-	1371
1.39 Valve block 1 in driver seat -N475-	1371
1.39.1 4-pin connector -T4co-	1371
1.40 Valve block 1 in front passenger seat -N477-	1372
1.40.1 4-pin connector -T4cp-	1372
1.41 Coolant valve for gearbox -N488-	1373-1374
1.41.1 2-pin connector -T2c-	1373
1.41.2 2-pin connector -T2eh-	1374
1.42 Actuator for engine temperature regulation -N493-	1375
1.42.1 2-pin connector -T2gq-	1375
1.43 Coolant regulating valve -N515-	1376
1.43.1 2-pin connector -T2gp-	1376
1.44 Piston cooling jet control valve -N522-	1376-1377
1.44.1 2-pin connector -T2gr-	1376
1.44.2 2-pin connector -T2o-	1377
1.45 Refrigerant shut-off valve for heater and air conditioner unit -N541-	1378
1.45.1 2-pin connector -T2ah-	1378
1.46 Inlet cam actuator for cylinder 2 -N583-	1378
1.46.1 3-pin connector -T3cg-	1378
1.47 Exhaust cam actuator for cylinder 2 -N587-	1379
1.47.1 3-pin connector -T3ch-	1379
1.48 Inlet cam actuator for cylinder 3 -N591-	1380
1.48.1 3-pin connector -T3ci-	1380
1.49 Exhaust cam actuator for cylinder 3 -N595-	1381
1.49.1 3-pin connector -T3cj-	1381
1.50 Refrigerant expansion valve 1 -N636-	1382
1.50.1 4-pin connector -T4o-	1382
1.51 Coolant valve for high-voltage battery -N688-	1383
1.51.1 5-pin connector -T5b-	1383
1.52 Inlet camshaft control valve 1 -N727-	1384
1.52.1 2-pin connector -T2gx-	1384
1.53 Igniter for central airbag for occupant collision protection, driver side -N737-	1385
1.53.1 3-pin connector -T3ck-	1385
1.54 Injector 2 for reducing agent -N758-	1386
1.54.1 2-pin connector -T2gz-	1386
1.55 Front left shock absorber damping adjustment valve 2 -N789-	1387
1.55.1 2-pin connector -T2ha-	1387
1.56 Rear left shock absorber damping adjustment valve 2 -N790-	1388
1.56.1 2-pin connector -T2hc-	1388
1.57 Front right shock absorber damping adjustment valve 2 -N791-	1389
1.57.1 2-pin connector -T2hd-	1389
1.58 Rear right shock absorber damping adjustment valve 2 -N792-	1390
1.58.1 2-pin connector -T2he-	1390
1.59 Front passenger airbag unit -NX3-	1391
1.59.1 3-pin connector -T3bx-	1391
1.60 Brake servo -NX6-	1392-1393
1.60.1 2-pin connector -T2jz-	1392
1.60.2 26-pin connector -T26f-	1393
1.61 Front seat belt on passenger side -NX18-	1394
1.61.1 2-pin connector -T2hi-	1394

1.61.2 5-pin connector -T5ai-	1394
1.62 Front seat belt on driver side -NX19-	1395-1397
1.62.1 2-pin connector -T2hj-	1395
1.62.2 5-pin connector -T5aj-	1396-1397
838 - -Connector views: parts with prefix O to Q - 3	1398-1401
1. -Connector views: parts with prefix O to Q	1398-1401
1.1 Glow plug 1 -Q10-	1398
1.1.1 1-pin connector -T1xj-	1398
1.2 Glow plug 2 -Q11-	1399
1.2.1 1-pin connector -T1xk-	1399
1.3 Glow plug 4 -Q13-	1399
1.3.1 1-pin connector -T1xl-	1399
1.4 Glow plug 3 -QX3-	1400-1401
1.4.1 4-pin connector -T4cs-	1400-1401
839 - -Connector views: parts with prefix R - 3	1402-1456
1. -Connector views: parts with prefix R	1402-1456
1.1 Aerial -R11-	1403
1.1.1 2-pin connector -T2kd-	1403
1.2 Rear left treble loudspeaker -R14-	1404-1405
1.2.1 2-pin connector -T2hq-	1404
1.2.2 2-pin connector -T2hr-	1405
1.3 Rear left bass loudspeaker -R15-	1406
1.3.1 4-pin connector -T4ct-	1406
1.4 Rear right treble loudspeaker -R16-	1406-1407
1.4.1 2-pin connector -T2hs-	1407
1.4.2 2-pin connector -T2ht-	1407
1.5 Rear right bass loudspeaker -R17-	1408
1.5.1 4-pin connector -T4cu-	1408
1.6 Front left treble loudspeaker -R20-	1409
1.6.1 2-pin connector -T2hw-	1409
1.7 Front right treble loudspeaker -R22-	1410
1.7.1 2-pin connector -T2ie-	1410
1.8 Aerial amplifier -R24-	1411
1.8.1 4-pin connector -T4ei-	1411
1.9 Two-way radio loudspeaker -R25-	1412
1.9.1 2-pin connector -T2ig-	1412
1.10 TV aerial 1 -R55-	1413
1.10.1 4-pin connector -T4eg-	1413
1.11 TV aerial 2 -R56-	1414
1.11.1 4-pin connector -T4eh-	1414
1.12 TV aerial 3 -R57-	1415
1.12.1 2-pin connector -T2kg-	1415
1.13 Remote control receiver for auxiliary heater -R64-	1416-1417
1.13.1 2-pin connector -T2kb-	1416
1.13.2 6-pin connector -T6bt-	1417
1.14 TV tuner -R78-	1418-1419
1.14.1 2-pin connector -T2kj-	1418
1.14.2 4-pin connector -T4eo-	1419
1.14.3 12-pin connector -T12m-	1419
1.15 Aerial amplifier for mobile telephone -R86-	1420-1421
1.15.1 2-pin connector -T2il-	1420
1.15.2 2-pin connector -T2kf-	1421
1.15.3 4-pin connector -T4em-	1422
1.16 Radio aerial 2 -R93-	1422-1423
1.16.1 2-pin connector -T2kc-	1422
1.16.2 2-pin connector -T2kh-	1423
1.17 Front left mid-range loudspeaker -R103-	1424
1.17.1 2-pin connector -T2hk-	1424
1.18 Front right mid-range loudspeaker -R104-	1425
1.18.1 2-pin connector -T2hl-	1425
1.19 Left aerial module -R108-	1426
1.19.1 2-pin connector -T2ik-	1426
1.20 2-way radio unit microphone -R122-	1427
1.20.1 2-pin connector -T2hn-	1427
1.21 Luggage compartment aerial for entry and start system -R137-	1428
1.21.1 2-pin connector -T2ho-	1428

1.22 Interior aerial 1 for entry and start system -R138-	1429
1.22.1 2-pin connector -T2hp-	1429
1.23 Amplitude modulation (AM) frequency filter -R177-	1430
1.23.1 2-pin connector -T2hu-	1430
1.24 Frequency modulation (FM) frequency filter in negative wire -R178-	1431
1.24.1 1-pin connector -T1zh-	1431
1.25 Frequency modulation (FM) frequency filter in positive wire -R179-	1432
1.25.1 1-pin connector -T1zi-	1432
1.26 Reversing camera -R189-	1433
1.26.1 8-pin connector -T8aw-	1433
1.27 Left aerial for entry and start authorisation -R200-	1434
1.27.1 2-pin connector -T2hx-	1434
1.28 Right aerial for entry and start authorisation -R201-	1435
1.28.1 2-pin connector -T2hy-	1435
1.29 Left effect loudspeaker -R209-	1436
1.29.1 2-pin connector -T2ia-	1436
1.30 Right effect loudspeaker -R210-	1437
1.30.1 2-pin connector -T2ic-	1437
1.31 Centre loudspeaker 2 -R219-	1438
1.31.1 2-pin connector -T2id-	1438
1.32 Front camera for driver assist systems -R242-	1439
1.32.1 16-pin connector -T16h-	1439
1.33 Front overhead view camera -R243-	1440
1.33.1 8-pin connector -T8at-	1440
1.34 Rear overhead view camera -R246-	1441
1.34.1 8-pin connector -T8au-	1441
1.35 Two-way radio loudspeaker 2 -R261-	1442
1.35.1 2-pin connector -T2ih-	1442
1.36 Two-way radio loudspeaker 3 -R262-	1443
1.36.1 2-pin connector -T2ii-	1443
1.37 LTE aerial 2 -R306-	1444
1.37.1 2-pin connector -T2ij-	1444
1.38 Loudspeaker for emergency call module -R335-	1445
1.38.1 2-pin connector -T2hz-	1445
1.39 Two-way radio loudspeaker 4 -R369-	1446
1.39.1 2-pin connector -T2im-	1446
1.40 2-way radio unit microphone 2 -R370-	1447
1.40.1 2-pin connector -T2in-	1447
1.41 External vehicle communication aerial 2 -R394-	1448
1.41.1 2-pin connector -T2hv-	1448
1.42 Front left door loudspeaker -RX2-	1449-1450
1.42.1 2-pin connector -T2ib-	1449
1.42.2 4-pin connector -T4cv-	1450
1.43 Front right door loudspeaker -RX3-	1451
1.43.1 2-pin connector -T2if-	1451
1.43.2 4-pin connector -T4cz-	1451
1.44 Roof aerial -RX5-	1452-1453
1.44.1 2-pin connector -T2hm-	1452
1.44.2 2-pin connector -T2ka-	1453
1.44.3 2-pin connector -T2kq-	1454
1.45 Subwoofer -RX28-	1454-1456
1.45.1 4-pin connector -T4cw-	1454
1.45.2 4-pin connector -T4cy-	1455-1456
840 - -Connector views: parts with prefix S to U - 3	1457-1623
1. -Connector views: parts with prefix S to U	1457-1623
1.1 Fuse holder C -SC-	1460
1.1.1 2-pin connector -T2io-	1460
1.2 Switching unit for high-voltage battery -SX6-	1461-1463
1.2.1 2-pin connector -T2ay-	1461
1.2.2 6-pin connector -T6o-	1462
1.2.3 10-pin connector -T10a-	1462
1.2.4 10-pin connector -T10b-	1463
1.3 Coupling point for trailer harness -TAHLS-	1464
1.3.1 2-pin connector -T2j-	1464
1.3.2 2-pin connector -T2k-	1464
1.4 Coupling point on high-voltage battery -TAHV-	1465-1466

1.4.1 6-pin connector -T6c-	1465
1.4.2 6-pin connector -T6f-	1466
1.4.3 32-pin connector -T32k-	1467
1.5 Coupling point on left A-pillar, bottom -TALU-	1467-1468
1.5.1 1-pin connector -T1sq-	1467
1.5.2 1-pin connector -T1sr-	1468
1.6 Coupling point on left A-pillar for special vehicles -TASLSF-	1469-1470
1.6.1 8-pin connector -T8d-	1469
1.6.2 8-pin connector -T8h-	1470
1.7 Coupling point 2 on left A-pillar for special vehicles -TASLSF2-	1471
1.7.1 8-pin connector -T8k-	1471
1.8 Coupling point for special signal system aerial -TASSA-	1471-1473
1.8.1 2-pin connector -T2bj-	1472
1.8.2 2-pin connector -T2bk-	1472
1.8.3 2-pin connector -T2bx-	1473
1.9 Coupling point for operating unit for special signals -TBESF-	1474
1.9.1 8-pin connector -T8f-	1474
1.10 Coupling point 2 for operating unit for special signals -TBESF2-	1474
1.10.1 6-pin connector -T6r-	1474
1.11 Coupling point for front flashing lights in special vehicle -TBLSFV-	1475
1.11.1 2-pin connector -T2by-	1475
1.12 Coupling point for CAN bus for special signal system -TCANSSA-	1476
1.12.1 2-pin connector -T2bz-	1476
1.13 Coupling point for two-way radio in special vehicle -TFGSF-	1477
1.13.1 17-pin connector -T17f-	1477
1.14 Coupling point 1 for alternator -TGEN1-	1478-1480
1.14.1 8-pin connector -T8g-	1478
1.14.2 8-pin connector -T8i-	1479
1.14.3 8-pin connector -T8j-	1480
1.14.4 8-pin connector -T8m-	1480
1.15 Coupling point on rear left exterior door handle -TGHL-	1481-1482
1.15.1 4-pin connector -T4b-	1481
1.15.2 4-pin connector -T4c-	1482
1.16 Coupling point on rear right exterior door handle -TGHR-	1483
1.16.1 4-pin connector -T4d-	1483
1.16.2 4-pin connector -T4e-	1483
1.17 Coupling point for gearbox oil cooling -TGOK-	1484-1485
1.17.1 5-pin connector -T5d-	1484
1.17.2 5-pin connector -T5e-	1485
1.18 Coupling point on front left exterior door handle -TGVL-	1486
1.18.1 4-pin connector -T4f-	1486
1.18.2 4-pin connector -T4g-	1486
1.19 Coupling point on front right exterior door handle -TGVR-	1487-1488
1.19.1 4-pin connector -T4h-	1487
1.19.2 4-pin connector -T4i-	1488
1.20 Coupling point for roof -TH-	1489
1.20.1 16-pin connector -T16b-	1489
1.20.2 16-pin connector -T16c-	1489
1.21 Coupling point for rear lid -THK-	1490-1492
1.21.1 10-pin connector -T10e-	1490
1.21.2 10-pin connector -T10f-	1491
1.21.3 10-pin connector -T10l-	1492
1.21.4 10-pin connector -T10o-	1492
1.22 Coupling point on rear lid, left -THKL-	1493-1494
1.22.1 2-pin connector -T2ca-	1493
1.22.2 10-pin connector -T10m-	1494
1.22.3 10-pin connector -T10n-	1495
1.23 Coupling point on rear lid, centre -THKM-	1495-1497
1.23.1 2-pin connector -T2t-	1496
1.23.2 2-pin connector -T2x-	1496
1.23.3 6-pin connector -T6s-	1497
1.24 Coupling point on rear lid, right -THKR-	1498
1.24.1 2-pin connector -T2cb-	1498
1.25 Coupling point in luggage compartment, left -THRL-	1498-1499
1.25.1 6-pin connector -T6i-	1499
1.25.2 6-pin connector -T6i-	1499

1.26 Coupling point in luggage compartment, centre -THRM-	1500-1501
1.26.1 2-pin connector -T2cc-	1500
1.26.2 2-pin connector -T2cd-	1501
1.27 Coupling point in luggage compartment, right -THRR-	1502-1505
1.27.1 10-pin connector -T10p-	1502
1.27.2 10-pin connector -T10q-	1503
1.27.3 14-pin connector -T14ad-	1503
1.27.4 14-pin connector -T14d-	1504
1.27.5 14-pin connector -T14e-	1505
1.27.6 14-pin connector -T14f-	1505
1.28 Coupling point in interior, centre -TIM-	1506-1508
1.28.1 4-pin connector -T4m-	1506
1.28.2 4-pin connector -T4u-	1507
1.28.3 17-pin connector -T17aj-	1508
1.28.4 17-pin connector -T17g-	1508
1.29 Coupling point in interior, below left -TIUL-	1509-1518
1.29.1 1-pin connector -T1no-	1510
1.29.2 1-pin connector -T1nz-	1510
1.29.3 17-pin connector -T17h-	1511
1.29.4 17-pin connector -T17i-	1512
1.29.5 17-pin connector -T17j-	1512
1.29.6 17-pin connector -T17k-	1513
1.29.7 17-pin connector -T17l-	1514
1.29.8 17-pin connector -T17m-	1514
1.29.9 17-pin connector -T17n-	1515
1.29.10 17-pin connector -T17o-	1516
1.29.11 17-pin connector -T17p-	1516
1.29.12 17-pin connector -T17q-	1517
1.29.13 17-pin connector -T17r-	1518
1.29.14 17-pin connector -T17s-	1518
1.30 Coupling point in interior, below right -TIUR-	1519-1526
1.30.1 17-pin connector -T17aa-	1520
1.30.2 17-pin connector -T17ab-	1520
1.30.3 17-pin connector -T17ac-	1521
1.30.4 17-pin connector -T17ae-	1522
1.30.5 17-pin connector -T17t-	1522
1.30.6 17-pin connector -T17u-	1523
1.30.7 17-pin connector -T17v-	1524
1.30.8 17-pin connector -T17w-	1524
1.30.9 17-pin connector -T17x-	1525
1.30.10 17-pin connector -T17y-	1526
1.30.11 17-pin connector -T17z-	1526
1.31 Coupling point for luggage compartment light on special vehicles -TKBSF-	1527
1.31.1 2-pin connector -T2ce-	1527
1.32 Coupling point for radiator blind -TKJ-	1528-1529
1.32.1 4-pin connector -T4p-	1528
1.32.2 4-pin connector -T4q-	1529
1.33 Coupling point 1 for steering -TLENK1-	1530-1533
1.33.1 6-pin connector -T6l-	1530
1.33.2 6-pin connector -T6m-	1531
1.33.3 8-pin connector -T8l-	1531
1.33.4 8-pin connector -T8n-	1532
1.33.5 10-pin connector -T10r-	1533
1.33.6 10-pin connector -T10t-	1533
1.34 Coupling point 1 for engine prewiring harness, adapter wire -TMOAD1-	1534-1536
1.34.1 8-pin connector -T8r-	1534
1.34.2 8-pin connector -T8t-	1535
1.34.3 14-pin connector -T14o-	1536
1.34.4 14-pin connector -T14u-	1536
1.35 Coupling point 1 for engine prewiring harness -TMOVO1-	1537-1540
1.35.1 14-pin connector -T14i-	1537
1.35.2 14-pin connector -T14k-	1538
1.35.3 14-pin connector -T14q-	1539
1.35.4 14-pin connector -T14r-	1539
1.35.5 14-pin connector -T14s-	1540
1.36 Coupling point 2 for engine prewiring harness -TMOVO2-	1541

1.36.1 14-pin connector -T14b-	1541
1.36.2 14-pin connector -T14w-	1541
1.37 Coupling point for spare wiring on special vehicles -TRLSF-	1542
1.37.1 12-pin connector -T12d-	1542
1.38 Coupling point 3 for spare wiring on special vehicles -TRLSF3-	1543
1.38.1 12-pin connector -T12c-	1543
1.39 Coupling point 2 in front left door -TS5-	1544-1545
1.39.1 8-pin connector -T8bp-	1544
1.39.2 8-pin connector -T8cd-	1545
1.40 Coupling point 2 in front right door -TS6-	1546
1.40.1 8-pin connector -T8bq-	1546
1.40.2 8-pin connector -T8ce-	1546
1.41 Coupling point for warning/indicator lights in special vehicle -TS22-	1547-1548
1.41.1 2-pin connector -T2bg-	1547
1.41.2 2-pin connector -T2bh-	1548
1.42 Coupling point for blower -TS26-	1549
1.42.1 4-pin connector -T4t-	1549
1.43 Coupling point for digital two-way radio -TS30-	1549
1.43.1 8-pin connector -T8v-	1549
1.44 Coupling point 1 in centre console -TS34-	1550-1552
1.44.1 17-pin connector -T17af-	1550
1.44.2 17-pin connector -T17ag-	1551
1.44.3 17-pin connector -T17ah-	1552
1.44.4 17-pin connector -T17ai-	1552
1.45 Coupling point 2 for multifunction unit control unit -TS59-	1553
1.45.1 10-pin connector -T10x-	1553
1.46 Coupling point for sliding sunroof -TSD-	1554-1555
1.46.1 6-pin connector -T6g-	1554
1.46.2 6-pin connector -T6n-	1555
1.47 Coupling point for special vehicles -TSF1-	1556
1.47.1 2-pin connector -T2ad-	1556
1.47.2 2-pin connector -T2dz-	1556
1.48 Coupling point 3 for special vehicles -TSF3-	1557
1.48.1 2-pin connector -T2af-	1557
1.49 Coupling point 1 for special vehicle, criminal investigation department -TSFK1-	1558-1559
1.49.1 2-pin connector -T2ag-	1558
1.49.2 2-pin connector -T2ai-	1559
1.49.3 2-pin connector -T2dx-	1560
1.50 Coupling point on front left bumper -TSFVL-	1560-1568
1.50.1 2-pin connector -T2al-	1561
1.50.2 2-pin connector -T2ap-	1561
1.50.3 2-pin connector -T2ar-	1562
1.50.4 2-pin connector -T2as-	1563
1.50.5 14-pin connector -T14aa-	1564
1.50.6 14-pin connector -T14ab-	1564
1.50.7 14-pin connector -T14ac-	1565
1.50.8 14-pin connector -T14g-	1566
1.50.9 14-pin connector -T14h-	1566
1.50.10 14-pin connector -T14x-	1567
1.50.11 14-pin connector -T14y-	1568
1.50.12 14-pin connector -T14z-	1568
1.51 Coupling point for siren system control unit in special vehicle -TSGTFASF-	1569
1.51.1 17-pin connector -T17ak-	1569
1.52 Coupling point for rear seat -TSH-	1570-1571
1.52.1 17-pin connector -T17a-	1570
1.52.2 17-pin connector -T17al-	1571
1.53 Coupling point for interface control unit in special vehicle -TSSGSF-	1572
1.53.1 2-pin connector -T2bi-	1572
1.54 Coupling point for special signals siren -TSSS-	1572
1.54.1 4-pin connector -T4v-	1572
1.55 Coupling point for in-car video surveillance memory -TSVE-	1573
1.55.1 16-pin connector -T16e-	1573
1.56 Coupling point for front left seat -TSVL-	1574-1576
1.56.1 17-pin connector -T17am-	1574
1.56.2 17-pin connector -T17an-	1575
1.56.3 17-pin connector -T17b-	1576

1.56.4 17-pin connector -T17c-	1576
1.57 Coupling point for front right seat -TSVR-	1577-1579
1.57.1 17-pin connector -T17ap-	1577
1.57.2 17-pin connector -T17aq-	1578
1.57.3 17-pin connector -T17d-	1579
1.57.4 17-pin connector -T17e-	1579
1.58 Coupling point for special signal system voltage supply -TSVSSA-	1580
1.58.1 2-pin connector -T2aw-	1580
1.59 Coupling point for rear left door -TTHL-	1581-1583
1.59.1 8-pin connector -T8w-	1581
1.59.2 8-pin connector -T8x-	1582
1.59.3 27-pin connector -T27a-	1583
1.59.4 27-pin connector -T27b-	1583
1.60 Coupling point for rear right door -TTHR-	1584-1586
1.60.1 8-pin connector -T8y-	1584
1.60.2 8-pin connector -T8z-	1585
1.60.3 27-pin connector -T27c-	1586
1.60.4 27-pin connector -T27d-	1586
1.61 Coupling point for front left door -TTVL-	1587-1589
1.61.1 8-pin connector -T8ab-	1587
1.61.2 8-pin connector -T8ac-	1588
1.61.3 33-pin connector -T33a-	1589
1.61.4 33-pin connector -T33b-	1589
1.62 Coupling point for front right door -TTVR-	1590-1592
1.62.1 8-pin connector -T8ad-	1590
1.62.2 8-pin connector -T8ae-	1591
1.62.3 33-pin connector -T33c-	1592
1.62.4 33-pin connector -T33d-	1592
1.63 Coupling point for accident data recorder -TUDS-	1593-1594
1.63.1 4-pin connector -T4w-	1593
1.63.2 18-pin connector -T18a-	1594
1.64 Pilot line connector 1 -TV44-	1595
1.64.1 2-pin connector -T2am-	1595
1.65 Pilot line connector 2 -TV45-	1595
1.65.1 2-pin connector -T2aq-	1595
1.66 Maintenance connector for high-voltage system -TW-	1596
1.66.1 4-pin connector -T4r-	1596
1.67 Coupling point in plenum chamber -TWK-	1597-1598
1.67.1 6-pin connector -T6p-	1597
1.67.2 6-pin connector -T6q-	1598
1.68 Coupling point for additional turn signals of special signal system -TZBLSSA-	1599
1.68.1 4-pin connector -T4x-	1599
1.69 Trailer socket -U10-	1599
1.69.1 13-pin connector -T13a-	1599
1.70 Interior socket, 230 V, 110 V -U11-	1600
1.70.1 10-pin connector -T10am-	1600
1.71 12 V socket 3 -U19-	1601
1.71.1 3-pin connector -T3cm-	1601
1.72 12 V socket 4 -U20-	1602
1.72.1 3-pin connector -T3cn-	1602
1.73 Charging station for torch -U23-	1603
1.73.1 4-pin connector -T4df-	1603
1.74 Charging station for hand-held 2-way radio -U24-	1604
1.74.1 4-pin connector -T4dg-	1604
1.75 Charging station 2 for hand-held 2-way radio -U28-	1605
1.75.1 4-pin connector -T4dh-	1605
1.76 Diagnostic connection -U31-	1606
1.76.1 16-pin connector -T16d-	1606
1.77 USB charging socket 1 -U37-	1607
1.77.1 4-pin connector -T4di-	1607
1.78 USB connection 1 -U41-	1608-1609
1.78.1 4-pin connector -T4dk-	1608
1.78.2 5-pin connector -T5ak-	1609
1.79 Diagnostic connection 2 -U64-	1610
1.79.1 18-pin connector -T18h-	1610
1.80 Charaina station 3 -U74-	1610

1.80.1 4-pin connector -T4dl-	1610
1.81 12 V socket for special vehicles -U83-	1611
1.81.1 3-pin connector -T3co-	1611
1.82 12 V socket 2 for special vehicles -U84-	1612
1.82.1 3-pin connector -T3cp-	1612
1.83 12 V socket 3 for special vehicles -U85-	1613
1.83.1 3-pin connector -T3cq-	1613
1.84 12 V socket 4 for special vehicles -U86-	1614
1.84.1 1-pin connector -T1sw-	1614
1.85 Socket for blue flashing light -U87-	1615
1.85.1 2-pin connector -T2cf-	1615
1.86 Socket 2 for blue flashing light -U88-	1616
1.86.1 2-pin connector -T2cg-	1616
1.87 Socket 3 for blue flashing light -U89-	1617
1.87.1 2-pin connector -T2ch-	1617
1.88 Socket 4 for blue flashing light -U90-	1618
1.88.1 2-pin connector -T2ci-	1618
1.89 USB charging socket in headlining -U104-	1619
1.89.1 4-pin connector -T4de-	1619
1.90 12 V socket 5 for special vehicles -U115-	1620
1.90.1 3-pin connector -T3cl-	1620
1.91 High-voltage battery charging socket 1 -UX4-	1621-1623
1.91.1 5-pin connector -T5q-	1621
1.91.2 8-pin connector -T8o-	1622-1623
841 - -Connector views: parts with prefix V - 3	1624-1691
1. -Connector views: parts with prefix V	1624-1691
1.1 Sliding sunroof motor -V1-	1626
1.1.1 8-pin connector -T8ay-	1626
1.2 Rear window wiper motor -V12-	1627
1.2.1 4-pin connector -T4dn-	1627
1.3 Driver seat longitudinal adjustment motor -V28-	1627
1.3.1 5-pin connector -T5t-	1627
1.4 Front passenger seat longitudinal adjustment motor -V31-	1628
1.4.1 5-pin connector -T5u-	1628
1.5 Driver seat backrest adjustment motor -V45-	1629
1.5.1 5-pin connector -T5v-	1629
1.6 Front passenger seat backrest adjustment motor -V46-	1630
1.6.1 5-pin connector -T5w-	1630
1.7 Coolant circulation pump -V50-	1631
1.7.1 3-pin connector -T3b-	1631
1.8 Metering pump -V54-	1632
1.8.1 2-pin connector -T2jc-	1632
1.9 Windscreen and rear window washer pump -V59-	1633
1.9.1 2-pin connector -T2jb-	1633
1.10 Driver side window regulator motor -V147-	1634
1.10.1 3-pin connector -T3cs-	1634
1.11 Front passenger side window regulator motor -V148-	1635
1.11.1 3-pin connector -T3ct-	1635
1.12 Charge air cooling pump -V188-	1636
1.12.1 3-pin connector -T3cu-	1636
1.13 Driver seat rake adjustment motor -V243-	1637
1.13.1 5-pin connector -T5x-	1637
1.14 Front passenger seat rake adjustment motor -V244-	1638
1.14.1 5-pin connector -T5y-	1638
1.15 Driver seat height adjustment motor -V245-	1639
1.15.1 5-pin connector -T5z-	1639
1.16 Front passenger seat height adjustment motor -V246-	1640
1.16.1 5-pin connector -T5aa-	1640
1.17 Left parking brake motor -V282-	1641
1.17.1 2-pin connector -T2iw-	1641
1.18 Right parking brake motor -V283-	1642
1.18.1 2-pin connector -T2ix-	1642
1.19 Compressor for multicontour driver seat -V439-	1643-1644
1.19.1 2-pin connector -T2iz-	1643
1.19.2 2-pin connector -T2jax-	1644
1.20 Compressor for multicontour front passenger seat -V440-	1645

1.20.1 2-pin connector -T2ja-	1645
1.21 Charge pressure positioner -V465-	1646
1.21.1 6-pin connector -T6be-	1646
1.22 Coolant pump for high-temperature circuit -V467-	1646
1.22.1 3-pin connector -T3bo-	1646
1.23 Coolant pump for low-temperature circuit -V468-	1647
1.23.1 3-pin connector -T3ar-	1647
1.24 Rear driver side window regulator motor -V471-	1648
1.24.1 3-pin connector -T3cv-	1648
1.25 Rear passenger side window regulator motor -V472-	1649
1.25.1 3-pin connector -T3cw-	1649
1.26 Auxiliary hydraulic pump 1 for gearbox oil -V475-	1650
1.26.1 4-pin connector -T4do-	1650
1.27 Auxiliary pump for heating -V488-	1651
1.27.1 3-pin connector -T3cy-	1651
1.28 Coolant circulation pump before power and control electronics for electric drive -V508-	1652
1.28.1 3-pin connector -T3ad-	1652
1.29 Front left seat backrest fan 1 -V512-	1653
1.29.1 8-pin connector -T8bb-	1653
1.30 Front left seat cushion fan 1 -V514-	1654
1.30.1 8-pin connector -T8bc-	1654
1.31 Front right seat backrest fan 1 -V516-	1655
1.31.1 8-pin connector -T8bd-	1655
1.32 Front right seat cushion fan 1 -V518-	1656
1.32.1 8-pin connector -T8be-	1656
1.33 Radiator blind control motor -V544-	1657
1.33.1 4-pin connector -T4dp-	1657
1.34 Coolant pump for high-voltage battery -V590-	1658
1.34.1 3-pin connector -T3ao-	1658
1.35 Parking lock actuator -V682-	1659
1.35.1 8-pin connector -T8ao-	1659
1.36 Front left seat depth adjustment fan -V724-	1660
1.36.1 4-pin connector -T4dr-	1660
1.37 Front right seat depth adjustment fan -V725-	1661
1.37.1 4-pin connector -T4ds-	1661
1.38 Driver side exterior mirror -VX4-	1662-1663
1.38.1 3-pin connector -T3dr-	1662
1.38.2 8-pin connector -T8cf-	1663
1.39 Passenger side exterior mirror -VX5-	1664
1.39.1 3-pin connector -T3ds-	1664
1.39.2 8-pin connector -T8cg-	1664
1.40 Trailer towing coupling -VX15-	1665
1.40.1 6-pin connector -T6cb-	1665
1.41 Power latching for rear lid -VX16-	1666
1.41.1 4-pin connector -T4dt-	1666
1.42 Driver door lock unit -VX21-	1667
1.42.1 8-pin connector -T8bf-	1667
1.43 Front passenger door lock unit -VX22-	1668
1.43.1 8-pin connector -T8bg-	1668
1.44 Rear lid lock unit -VX25-	1669
1.44.1 4-pin connector -T4an-	1669
1.45 Air distribution flap -VX33-	1670
1.45.1 6-pin connector -T6bz-	1670
1.46 Front left temperature flap -VX34-	1671
1.46.1 6-pin connector -T6bx-	1671
1.47 Front right temperature flap -VX35-	1672
1.47.1 6-pin connector -T6by-	1672
1.48 Defroster flap -VX47-	1673
1.48.1 6-pin connector -T6bv-	1673
1.49 Three-phase current drive -VX54-	1674
1.49.1 8-pin connector -T8b-	1674
1.50 Radiator fan -VX57-	1675-1676
1.50.1 4-pin connector -T4du-	1675
1.50.2 4-pin connector -T4dv-	1676
1.50.3 4-pin connector -T4ej-	1677
1.51 Windscreen wiper -VX58-	1677-1678

1.51.1 4-pin connector -T4dm-	1677
1.51.2 4-pin connector -T4ew-	1678
1.52 Drive unit for luggage compartment cover -VX68-	1679
1.52.1 8-pin connector -T8a-	1679
1.53 Rear lid drive unit -VX69-	1680
1.53.1 10-pin connector -T10ao-	1680
1.54 Air conditioner compressor -VX81-	1681-1683
1.54.1 2-pin connector -T2fj-	1681
1.54.2 2-pin connector -T2jy-	1682
1.54.3 3-pin connector -T3at-	1683
1.54.4 3-pin connector -T3bf-	1683
1.55 Rear door lock unit, driver side -VX83-	1684-1685
1.55.1 8-pin connector -T8bh-	1684
1.55.2 8-pin connector -T8ca-	1685
1.55.3 8-pin connector -T8cb-	1686
1.56 Rear door lock unit, front passenger side -VX84-	1686-1687
1.56.1 8-pin connector -T8bi-	1686
1.56.2 8-pin connector -T8cc-	1687
1.57 Rear temperature flap -VX95-	1688
1.57.1 6-pin connector -T6bw-	1688
1.58 Fresh air and air recirculation flap -VX96-	1689
1.58.1 6-pin connector -T6ca-	1689
1.59 Sun blind drive unit -VX455-	1690-1691
1.59.1 8-pin connector -T8ba-	1690-1691
842 - -Connector views: parts with prefix W to Z - 3	1692-1729
1. -Connector views: parts with prefix W to Z	1692-1729
1.1 Glove compartment light -W6-	1693
1.1.1 2-pin connector -T2jk-	1693
1.2 Left luggage compartment light -W18-	1694
1.2.1 2-pin connector -T2jf-	1694
1.3 Rear left entry light -W33-	1694
1.3.1 2-pin connector -T2ji-	1694
1.4 Rear right entry light -W34-	1695
1.4.1 2-pin connector -T2jj-	1695
1.5 Right luggage compartment light -W35-	1696
1.5.1 2-pin connector -T2mc-	1696
1.6 Rear left footwell light -W45-	1697
1.6.1 4-pin connector -T4dy-	1697
1.7 Rear right footwell light -W46-	1698
1.7.1 4-pin connector -T4dz-	1698
1.8 Rear left illuminated vanity mirror -W49-	1699
1.8.1 2-pin connector -T2je-	1699
1.9 Rear right illuminated vanity mirror -W50-	1700
1.9.1 2-pin connector -T2jd-	1700
1.10 Surround lighting 1 in rear lid -W61-	1701
1.10.1 2-pin connector -T2jl-	1701
1.11 Surround lighting 2 in rear lid -W62-	1702
1.11.1 2-pin connector -T2jm-	1702
1.12 Light for front left sill panel moulding background lighting -W129-	1703
1.12.1 2-pin connector -T2jg-	1703
1.13 Light for front right sill panel moulding background lighting -W130-	1704
1.13.1 2-pin connector -T2jh-	1704
1.14 Rear interior light -WX2-	1705
1.14.1 7-pin connector -T7c-	1705
1.15 Front roof module -WX3-	1706
1.15.1 26-pin connector -T26g-	1706
1.16 Rear interior light 2 -WX4-	1707
1.16.1 5-pin connector -T5ac-	1707
1.17 Rear interior light 3 -WX5-	1708
1.17.1 5-pin connector -T5ad-	1708
1.18 Automatic anti-dazzle interior mirror -Y7-	1709
1.18.1 8-pin connector -T8bl-	1709
1.19 Vehicle voltage display -Y11-	1709
1.19.1 2-pin connector -T2jp-	1709
1.20 Display unit for in-car video surveillance -Y27-	1710
1.20.1 2-pin connector -T2ia-	1710

1.21 Heated windscreen -Z2-	1711-1712
1.21.1 1-pin connector -T1xv-	1711
1.21.2 1-pin connector -T1zs-	1712
1.22 Heated backrest for rear left seat -Z11-	1713
1.22.1 2-pin connector -T2at-	1713
1.23 Heated backrest for rear right seat -Z13-	1713
1.23.1 2-pin connector -T2au-	1713
1.24 Left washer jet heater element -Z20-	1714
1.24.1 2-pin connector -T2js-	1714
1.25 Right washer jet heater element -Z21-	1715
1.25.1 2-pin connector -T2jt-	1715
1.26 Auxiliary air heater element -Z35-	1716
1.26.1 3-pin connector -T3dd-	1716
1.27 Heater for reducing agent line (heater circuit 2) -Z104-	1717
1.27.1 2-pin connector -T2jr-	1717
1.28 Windscreen heater for front sensors -Z113-	1718
1.28.1 2-pin connector -T2ju-	1718
1.29 Rear left seat heating -ZX10-	1719
1.29.1 4-pin connector -T4ec-	1719
1.30 Front left seat heating -ZX11-	1720-1721
1.30.1 4-pin connector -T4ea-	1720
1.30.2 8-pin connector -T8bm-	1721
1.31 Rear right seat heating -ZX12-	1722
1.31.1 4-pin connector -T4ed-	1722
1.32 Front right seat heating -ZX13-	1722-1723
1.32.1 4-pin connector -T4eb-	1723
1.32.2 8-pin connector -T8bn-	1723
1.33 High-voltage heater (PTC) -ZX17-	1724-1725
1.33.1 3-pin connector -T3au-	1724
1.33.2 3-pin connector -T3ba-	1725
1.34 Seat heating for front left seat backrest -ZX25-	1726
1.34.1 4-pin connector -T4dw-	1726
1.34.2 8-pin connector -T8bj-	1726
1.35 Seat heating for front right seat backrest -ZX26-	1727-1729
1.35.1 4-pin connector -T4dx-	1727
1.35.2 8-pin connector -T8bk-	1728-1729