



Contents

1	List of engines	1
2	Service work	2
2.1	Information about flexible or fixed service	2
2.2	Service tables	5
3	General information	13
3.1	General warnings for working on high-voltage system	13
3.2	Raising vehicle with lifting platform or trolley jack	13
3.3	Entries in service schedule	13
3.4	Severe operating conditions	14
3.5	Connecting vehicle diagnostic tester	14
3.6	Countries with hot climate	15
3.7	Country overview for diesel not compliant with EN 590/EN 15940	16
3.8	Country overview for petrol not compliant with EN 228	17
3.9	Engine code and engine number	18
3.10	Countries with high levels of dust	18
3.11	Type plate	19
3.12	Shortened intervals for spark plug replacement	19
4	Descriptions of work	24
4.1	Swivel joints and suspension link mountings: inspecting	26
4.2	All-wheel drive coupling: changing oil	27
4.3	Automatic headlight control and static cornering light: checking function	30
4.4	Battery (12V): checking battery terminal clamps for secure seating	31
4.5	Battery (12V): checking	34
4.6	Status of battery (12V): reading - sending diagnosis protocol via online connection	35
4.7	Front passenger front airbag: checking key switch and "ON/OFF function"	35
4.8	Tyres: checking condition, wear pattern, tyre pressure and tread depth	36
4.9	Brake system: changing brake fluid	42
4.10	Brake system and shock absorbers: inspecting for leaks and damage	46
4.11	Brake fluid level: checking	47
4.12	Brakes, front and rear: checking thickness of brake pads and condition of brake discs ..	48
4.13	Diesel fuel filter: draining	50
4.14	Diesel fuel filter: renewing	51
4.15	Diesel particulate filter: checking	53
4.16	Dual clutch gearbox ODD: changing gear oil	53
4.17	Dual clutch gearbox OGC: changing gear oil	53
4.18	Electric windows: checking positioning (open and close functions)	53
4.19	Fault memory of all systems: reading with vehicle diagnostic tester , correcting possible faults according to repair guidelines	54
4.20	Boots: inspecting	54
4.21	Interior filter: cleaning housing and renewing filter element	55
4.22	Interior and exterior body: inspecting for corrosion with doors and flaps open	58
4.23	Poly V-belt: renew	58
4.24	Poly V-belt: checking condition	58
4.25	Poly V-belt and tensioning roller for belt-driven starter-alternator: renew	59
4.26	Poly V-belt and tensioning roller for belt-driven starter-alternator: check	59
4.27	Cooling system: checking anti-freeze protection and coolant level	61
4.28	Checking LED headlights	63
4.29	Checking matrix LED headlights in scope of inspection	65
4.30	Checking matrix LED headlights in scope of repair	68
4.31	Air filter: clean housing and renew filter element	71
4.32	Multi-purpose additive for diesel fuel: adding	75
4.33	Multi-purpose additive for petrol fuel: add	77
4.34	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	78



4.35	Engine cover panel “top”: removing and installing	79
4.36	Motor compartment cover (noise insulation) “bottom”: removing and installing	81
4.37	Engine oil level: check	81
4.38	Engine oil: draining; renewing oil filter and filling	83
4.39	Engine oil: capacities and specifications	90
4.40	Panorama sliding roof with rear panorama roof	91
4.41	Road test: performing (driving behaviour, noises, air conditioner etc.)	94
4.42	Wheel securing bolts: tighten to specified torque	94
4.43	Reducing agent (AdBlue®/DEF): replenishing	96
4.44	Reducing agent (AdBlue®/DEF): changing	99
4.45	Tyre Pressure Loss Indicator: calibrating	100
4.46	Tyre repair set: checking	100
4.47	Window wash/wipe system: functional check	101
4.48	Sliding sunroof drains at front: check for blockage, clean if necessary	104
4.49	Service interval display: Reset	104
4.50	Service interval display: recoding	105
4.51	Track rods: checking clearance, attachment and boots	106
4.52	Transport mode: switching off	106
4.53	Transportation devices: removing blocking pieces	107
4.54	Time and date: set	108
4.55	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	108
4.56	Toothed belt (petrol engines): renewing	108
4.57	Camshaft drive toothed belt (diesel engines): renewing	108
4.58	Renewing spark plugs	109
5	Exhaust emissions test	113
5.1	Exhaust emissions test for petrol engines	113
5.2	Exhaust emissions test for diesel engines	115
6	00 Periodic Technical Inspection (PTI)	120
7	Glossary	124
8	---Change history---	127