



Contents

1	Engine list	1
2	Service work	4
2.1	Information about flexible or fixed service	4
2.2	Service tables	6
3	General information	21
3.1	Raising vehicle with lifting platform or trolley jack	21
3.2	Stickers	23
3.3	Entries in service schedule	24
3.4	Connecting vehicle diagnostic tester	25
3.5	Vehicle identification number	26
3.6	Vehicle data sticker	26
3.7	Severe operating conditions	27
3.8	Countries with hot climate	28
3.9	Country overview for diesel not compliant with EN 590	28
3.10	Country overview for petrol not compliant with EN 228	29
3.11	Engine code and engine number	30
3.12	RME fuel (biodiesel)	31
3.13	Countries with high levels of dust	31
3.14	Identification plate	32
3.15	Shortened intervals for spark plug replacement	33
3.16	Jacking up mode: switching self-levelling suspension off and on	36
4	Descriptions of work	38
4.1	Removable towing bracket: checking	40
4.2	Driving light assist: checking function	43
4.3	Transfer box, front and rear final drive, automatic gearbox: checking oil level	44
4.4	Automatic gearbox: checking ATF level and topping up if necessary	44
4.5	Swivel joints and suspension link mountings: inspecting	45
4.6	Battery: checking battery terminal clamps for secure seating	45
4.7	Battery: checking with battery tester (always refer to workshop manual)	48
4.8	User profile: allocating to ignition key, entering name of customer	49
4.9	Tyres: checking condition, wear pattern, tread depth, tyre pressure and age	50
4.10	Brake fluid: changing	58
4.11	Brake fluid level (dependent upon brake pad/lining wear): check.	62
4.12	Brake system and shock absorbers: inspecting for leaks and damage	64
4.13	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	65
4.14	The infotainment system	67
4.15	Electric windows: checking positioning (open and close functions)	70
4.16	Vehicle keys: checking function	70
4.17	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	71
4.18	Front passenger airbag: checking activation/deactivation	71
4.19	Bonnet catch hook: grease.	72
4.20	Changed tyre pressure values: storing using infotainment	73
4.21	Boots: inspecting	74
4.22	Gearbox mounting: renewing	74
4.23	Rear lid: lubricating left and right multi-joint hinges	76
4.24	Dust and pollen filter: cleaning housing and renewing filter element	78
4.25	Poly V-belt: renewing	78
4.26	Poly V-belt: checking condition	78
4.27	Diesel fuel filter: draining	79
4.28	Diesel fuel filter: renewing	79
4.29	Diesel particulate filter: reading ash loading level	85
4.30	Diesel particulate filter: renewing	85



4.31	Interior and exterior body: inspecting for corrosion with doors and flaps open	86
4.32	Cooling system: checking frost protection and coolant level	87
4.33	Air filter: cleaning housing and renewing filter element	91
4.34	Multi-purpose additive for diesel fuel: adding	103
4.35	Multi-purpose additive for petrol fuel: adding	105
4.36	Engine cover panel -top-: removing and installing	106
4.37	Engine cover -bottom- (noise insulation): removing and installing	108
4.38	Engine oil level: checking	108
4.39	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	109
4.40	Engine oil: capacities and specifications	120
4.41	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	121
4.42	Road test: performing (driving behaviour, noises, air conditioner etc.)	121
4.43	Wheel securing bolts: tightening to specified torque	122
4.44	Tyre repair set: checking if bottle is damaged or used; checking shelf life of tyre sealant	123
4.45	Manual gearbox/final drive: checking oil level	124
4.46	Service interval display: resetting with diagnosis tester	124
4.47	Service interval display: recoding with diagnosis tester	124
4.48	Sunroof: checking function, cleaning and greasing guide rails	125
4.49	Sliding sunroof drains: checking for blockage, cleaning if necessary	125
4.50	Sliding sunroof seal: lubricate.	128
4.51	Wiper blades: checking park position, adjusting if necessary	128
4.52	Window wash/wipe system and headlight washer system: checking function and settings	130
4.53	Power assisted steering: checking fluid level	133
4.54	Headlight adjustment: checking gas discharge headlights without DLA	135
4.55	Headlight adjustment: checking gas discharge headlights with DLA	147
4.56	Headlight adjustment: checking fog lights	155
4.57	Track rod ends: checking clearance, firm seating and boots	157
4.58	Telematics system: activating and deactivating	157
4.59	Transportation level: deactivating	160
4.60	Door arrester: grease.	161
4.61	Underbody sealant: inspecting for damage to underbody sealant, underbody panels, routing of lines and plugs	162
4.62	Idler pulleys for poly V-belt: renewing (8-cylinder petrol engines)	162
4.63	Camshaft drive toothed belt: renewing (8-cylinder petrol engines)	162
4.64	Central display and control unit (CDCU): setting units of measurement, clock and date	162
4.65	Central display and control unit (CDCU): determining language for lettering and language version	164
4.66	Spark plugs: Renew	165
5	Exhaust emissions test	182
5.1	Exhaust emissions test for diesel engines	182
5.2	Exhaust emissions test for petrol engines	189
6	Glossary	192
7	---Change history---	195