



Contents

00 - Technical data	1
1 Brake allocation via PR No.	1
1.1 Front brakes	1
1.2 Rear brakes (disc brakes)	1
2 Technical data for brakes	2
2.1 Brake master cylinder and brake servo	2
2.2 Front brakes	2
2.3 Rear brakes	4
2.4 Evaluating the ceramic brake disc	5
3 Determining the degree of wear on the ceramic brake disc	9
3.1 Determining wear by checking the thickness of the brake disc	10
3.2 Determining wear by weighing the brake disc	11
3.3 Determining the wear at the wear indicators	12
4 Brake test	13
4.1 General	13
4.2 Test for vehicles with front-wheel drive	13
4.3 Test for vehicles with four-wheel drive	13
45 - Anti-lock brake system	14
1 General notes for anti-lock brake system (ABS)	14
2 Notes for repair work on anti-lock brake system	15
3 Connecting VAS 5051 and selecting functions	16
4 Electrical/electronic components and locations	18
5 Fault display via warning lamps	20
6 Assembly overview - hydraulic unit, brake servo/brake master cylinder	23
6.1 Removing and installing control unit and hydraulic unit	25
6.2 Removing and installing brake pressure sender G201	27
7 Removing and installing parts of ABS system on front and rear axle	29
7.1 Removing and installing parts of ABS system on front axle	29
7.2 Removing and installing parts of ABS system on rear axle	30
8 Removing and installing parts of ESP system	32
8.1 Removing and installing lateral acceleration sender G200 and yaw rate sender G202	32
8.2 Removing and installing steering angle sender G85	33
46 - Brakes - mechanism	34
1 Repairing front brakes	34
1.1 Assembly overview - front brakes FN -2	34
1.2 Removing and installing brake pads/linings	35
1.3 Removing and installing brake caliper	38
1.4 Assembly overview - front brake 2FNR 42 AL	40
1.5 Removing and installing brake pads/linings	41
1.6 Removing and installing brake caliper	44
1.7 Assembly overview - front brake, Brembo 18"	47
1.8 Removing and installing brake pads/linings	48
1.9 Removing and installing brake caliper	51
1.10 Assembly overview - ceramic front brake	53
1.11 Removing and installing brake pads, ceramic brake	54
1.12 Removing and installing brake caliper of ceramic brake	57
2 Repairing rear brakes (disc brakes)	60
2.1 Removing and installing brake pads/linings	61
2.2 Removing and installing brake caliper	64



2.3	Adjusting parking brake	65
3	Assembly overview - parking brake pedal	67
3.1	Removing and installing parking brake pedal	67
3.2	Removing and installing release handle	69
4	Brake cables	71
4.1	Removing and installing rear brake cables	71
4.2	Removing and installing front brake cable	73
4.3	Removing and installing release cable	74
5	Assembly overview - brake pedal (LHD)	77
5.1	Separating brake pedal from brake servo	77
5.2	Removing and installing brake pedal (left-hand drive vehicles)	79
5.3	Removing and installing brake light switch F and brake pedal switch F47	80
47 - Brakes - hydraulics		85
1	Repairing front brake calipers	85
1.1	Assembly overview - brake caliper HP2	85
1.2	Assembly overview - brake caliper 2FNR 42 AL	87
1.3	Assembly overview - brake caliper, Brembo 18"	91
1.4	Assembly overview - brake caliper of ceramic brake	94
2	Repairing rear brake calipers	98
2.1	Assembly overview - rear brake caliper	98
3	Pressurised leak test	102
4	Bleeding brake system	103
4.1	Bleeding (normal)	103
4.2	Subsequent bleeding	104
4.3	Changing brake fluid	104
5	Assembly overview - brake servo/brake master cylinder	105
5.1	Removing and installing potentiometer for brake servo diaphragm travel G420	106
5.2	Removing and installing ACC trip switch in brake servo, pressure detected F318	107
6	Brake servo vacuum supply	110
6.1	Overview of vacuum hoses	110
6.2	Assembly overview - vacuum pump for brakes V192	111
6.3	Removing and installing vacuum pump for brakes V192	112
6.4	Removing and installing brake servo pressure sensor G294	112
7	Brake master cylinder	113
7.1	Removing and installing brake master cylinder	113
8	Brake servo	117
8.1	Removing and installing brake servo	117
9	Repairing brake lines	121
9.1	Assembly overview - flanging tool	123
9.2	Work instructions	123