



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Fundamentals for batteries	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	1
1.4 Battery terminal connection	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and reconnecting battery	4
4.1 Disconnecting and reconnecting batteries, vehicles with two-battery concept	4
4.2 Disconnecting and reconnecting batteries, vehicles with electric power latching	8
5 Removing and installing battery	10
5.1 Removing and installing battery on right in luggage compartment	10
5.2 Removing and installing battery on left in luggage compartment	12
6 Battery isolation relay J7	17
6.1 Removing and installing battery isolation relay J7	17
7 Pyrotechnic battery isolator	19
7.1 Overview of fitting locations	19
7.2 Safety precautions when working on pyrotechnical battery isolator	20
7.3 Disposal of pyrotechnical battery isolation units	20
7.4 Removing and installing pyrotechnical battery isolator	20
8 Removing and installing battery monitor control unit J367	23
8.1 Removing and installing battery temperature sensor G331 on right in luggage compartment	24
9 Starter, vehicles with automatic gearbox	25
9.1 Checking starter B	25
9.2 Starter, vehicles with 3.2 l, 177 kW injection engine, automatic gearbox AL420-6Q	25
9.3 Starter, vehicles with 3.6 l, 206 kW injection engine, automatic gearbox AL420-6Q	28
9.4 Starter, vehicles with 4.2 l, 246 kW injection engine, automatic gearbox AL420-6Q	31
9.5 Starter, vehicles with 6.0 l, 331 kW injection engine, automatic gearbox 5HP24 QU	36
9.6 Starter, vehicles with 3.0 l, 176 kW TDI engine, automatic gearbox AL420-6Q	38
9.7 Starter, vehicles with 4.9 l, 230 kW TDI engine, automatic gearbox AL750-6A	40
10 Alternator	46
10.1 Characteristics of alternators	46
10.2 Securing B+ (battery positive) wire to alternator	47
10.3 Checking poly V-belt	47
10.4 Alternator, 3.2 l injection engine	47
10.5 Alternator, 3.6 l injection engine	51
10.6 Alternator, 4.2 l injection engine	55
10.7 Alternator, 6.0 l injection engine	59
10.8 Alternator, 3.0 l TDI engine	62
10.9 Alternator, 4.9 l TDI engine	66
10.10 Removing and installing poly V-belt pulley on alternator	72
10.11 Removing and installing poly V-belt pulley with freewheel from alternator, 4.9 l TDI engine	74
11 Cruise control system (CCS)	76
12 Adaptive cruise control (ACC)	77
12.1 Assembly overview - Automatic adaptive cruise control	77
12.2 Removing and installing automatic distance control unit	78
12.3 Calibrating adaptive cruise control sensor G550	80
12.4 Initialising adaptive cruise control	81



12.5	Removing and installing brake servo control unit J539	81
90	- Gauges, instruments	83
1	Dash panel insert	83
1.1	Renewing dash panel insert	83
1.2	Coding dash panel insert	83
1.3	Removing and installing dash panel insert	83
1.4	Description of back of dash panel insert	85
1.5	Pin assignment of connectors on dash panel insert	86
1.6	Warning lamp symbols in dash panel insert	86
2	Service interval display	88
2.1	Resetting service interval display	88
92	- Windscreen wash/wipe system	89
1	Windscreen wiper system	89
1.1	General description	89
1.2	Assembly overview - windscreen wiper system	89
1.3	Removing and installing windscreen wiper system	90
1.4	Adjusting wiper blade park position	98
1.5	Removing and installing joint-free wiper blades	99
1.6	Rain and light sensor G397	100
2	Windscreen washer system	103
2.1	Assembly overview - windscreen washer system	103
2.2	Removing and installing washer fluid reservoir	104
2.3	Removing and installing windscreen washer pump V5	106
2.4	Removing and installing windscreen washer fluid level sender G33	107
2.5	Removing and installing windscreen washer system spray jets	107
2.6	Checking spray jets for windscreen washer system	108
3	Headlight washer system	109
3.1	Assembly overview - headlight washer system	109
3.2	Removing and installing headlight washer system pump V11	111
3.3	Removing and installing spray jet pop-up cylinders	111
3.4	Removing and installing spray jet assembly	113
3.5	Checking and adjusting washer jets	113
3.6	Bleeding headlight washer system	114
4	Washer fluid line hose couplings	115
5	Hose repair	116
94	- Lights, bulbs, switches - exterior	117
1	Operation and safety notes for gas discharge bulbs	117
2	Headlight with gas discharge bulb	120
2.1	General description	120
2.2	Assembly overview, headlights with a gas discharge bulb	120
2.3	Removing and installing headlight	122
2.4	Adjusting headlight installation position	124
2.5	Renewing gas discharge headlight bulb	126
2.6	Removing and installing headlight range control motor	130
2.7	Removing and installing headlight range control unit	132
2.8	Removing and installing vehicle level sender	133
2.9	Coding control unit for headlight range control	133
2.10	Converting headlights for use when driving on the left or right	134
2.11	Adjusting headlights	137
3	Headlights with two gas discharge bulbs	138
3.1	General description	138
3.2	Assembly overview - Headlights with two gas discharge bulbs	138



3.3	Removing and installing headlight	140
3.4	Adjusting headlight installation position	142
3.5	Renewing bulbs in headlights with two gas discharge bulbs	143
3.6	Removing and installing headlight range control motor	148
3.7	Removing and installing headlight range control unit	149
3.8	Removing and installing main beam headlight range control unit	149
3.9	Removing and installing vehicle level sender	150
3.10	Coding control unit for headlight range control	151
3.11	Adjusting headlights	151
4	Headlights with gas discharge bulb and cornering light (VARILIS headlights), vehicles up to calendar week 22/2010 (model year ► 2011)	152
4.1	General description	152
4.2	Assembly overview - headlights with gas discharge bulbs and cornering lights	153
4.3	Removing and installing headlight	155
4.4	Adjusting headlight installation position	158
4.5	Renewing gas discharge bulbs and cornering light bulbs in headlights	158
4.6	Daytime running lights and side light control unit	163
4.7	Gas discharge bulb control unit	163
4.8	Power output module for headlight	164
4.9	Headlight range control unit J431	166
4.10	Headlight range control motor	166
4.11	Dynamic cornering light control motor	168
4.12	Swivel module position sensor	168
4.13	Headlight screen adjustment solenoid	169
4.14	Removing and installing vehicle level sender	169
4.15	LED module for daytime running light and side light	169
4.16	Adjusting headlights	170
5	Headlights with dynamic main beam control, vehicles up to calendar week 22/2010 (model year ► 2011)	171
5.1	General description	171
5.2	Removing and installing headlight	171
5.3	Assembly overview - gas discharge headlights with dynamic main beam regulation	174
5.4	Adjusting headlight installation position	175
5.5	Renewing gas discharge bulbs and cornering light bulbs in headlights	176
5.6	Daytime running lights and side light control unit	181
5.7	Gas discharge bulb control unit	181
5.8	Power output module for headlight	182
5.9	Headlight range control unit J431	184
5.10	Headlight range control motor	184
5.11	Dynamic cornering light control motor	186
5.12	Swivel module position sensor	186
5.13	Headlight screen adjustment solenoid	187
5.14	LED module for daytime running light and side light	187
5.15	Adjusting headlights	188
6	Headlights with gas discharge bulb, vehicles as of calendar week 22/2010 (model year 2011 ►)	189
6.1	General description	189
6.2	Assembly overview - headlight	190
6.3	Removing and installing headlight	192
6.4	Adjusting headlights	193
6.5	Adjusting headlight installation position	193
6.6	Removing and installing front turn signal bulb M5 / M7	193
6.7	Removing and installing headlight range control motor V48 / V49	194
6.8	Removing and installing gas discharge bulb L13 / L14	196
6.9	Removing and installing LED modules for daytime running light and side light L176 / L177	197



6.10	Removing and installing bulbs for static cornering light L148 / L149	198
6.11	Removing and installing control unit for daytime running light and side light J860 / J861	198
6.12	Removing and installing gas discharge bulb control unit J343 / J344	199
6.13	Removing and installing output module for headlight J667 / J668	200
6.14	Removing and installing turn signal control unit	201
6.15	Removing and installing control unit for cornering light and headlight range control J745	201
6.16	Removing and installing headlight screen adjustment solenoid	202
6.17	Removing and installing dynamic cornering light control motor V318 / V319	202
6.18	Removing and installing swivel module position sensor G474 / G475	202
6.19	Removing and installing control motor for VARILIS headlight V446 / V447	202
6.20	Removing and installing control motor sender for VARILIS headlight G695 / G696	202
7	Fog lights	203
7.1	Removing and installing fog light	203
7.2	Removing and installing fog light bulb	204
7.3	Adjusting fog lights	204
8	Front side marker light bulb	205
8.1	Removing and installing side marking light bulb	205
9	Turn signal repeater bulb and entry light in exterior mirror	206
9.1	Removing and installing turn signal repeater	206
9.2	Removing and installing entry light in exterior mirror	206
10	Tail light cluster with LED	208
10.1	Tail light (tail light cluster) with LEDs in side panel	208
10.2	Tail light (tail light cluster) in rear lid	210
10.3	Tail light (tail light cluster) gaps and shut lines	213
10.4	Checking tail light (tail light cluster) function	214
11	Number plate light	216
11.1	Number plate light X	216
11.2	Luminescent number plate	217
12	High-level brake lights (additional brake lights)	219
12.1	Removing and installing additional brake light	219
12.2	Removing and installing bulb carrier	219
13	Steering column switch	221
13.1	Assembly overview - steering column switch	221
13.2	Removing and installing steering column switch	223
13.3	Dismantling and assembling steering column switch	225
13.4	Pin assignment on steering column switch	227
13.5	Coding steering column electronics control unit J527	228
14	Entry and start authorisation	230
14.1	Emergency release	230
14.2	Entry and start authorisation switch E415	230
14.3	Entry and start authorisation button E408	232
14.4	Entry and start authorisation control unit J518	234
14.5	Assembly overview of entry and start authorisation aerials	236
14.6	Removing and installing entry and start authorisation aerials	238
14.7	Adapting aerial parameters for entry and start authorisation aerials	241
15	Parking aid (PDC)	243
15.1	General description	243
15.2	Assembly overview - parking aid	243
15.3	Parking aid control unit J446	245
15.4	Front parking aid senders	246
15.5	Rear parking aid senders	247
15.6	Front parking aid display	248
15.7	Rear parking aid display Y15	249



15.8	Parking aid warning buzzer	249
16	Lane change assist (Side Assist)	252
16.1	General description	252
16.2	Removing and installing lane change assist control unit with radar sensor	252
16.3	Removing and installing lane change assist warning lamps in exterior mirror	253
16.4	Calibrating lane change assist	254
16.5	Lane change assist control unit final control diagnosis	261
16.6	Coding lane change assist control unit	261
17	Reverse camera (Rear Assist)	262
17.1	General description	262
17.2	Assembly overview - reversing camera system	262
17.3	Removing and installing reversing camera	263
17.4	Reversing camera system control unit J772	264
17.5	Calibrating reversing camera system	265
18	Front camera for driver assist systems R242	270
18.1	General description	270
18.2	Removing and installing front camera for driver assist systems R242	270
18.3	Calibrating front camera for driver assist systems R242	271
18.4	Coding camera control unit J852	271
18.5	Removing and installing windscreen heater for lane departure warning	271
19	Tyre pressure monitor (TPM) from 2007 onwards	272
19.1	Tyre pressure monitor control unit J502	273
19.2	Tyre pressure sensors	274
19.3	Transmitter units in wheel housing	274
19.4	Tyre pressure monitor aerial R207	275
96	Lights, bulbs, switches - interior	276
1	Interior lights and switches	276
1.1	Rear left footwell light L106 or rear right footwell light L107	276
2	Lights and switches in dash panel	277
2.1	Light switch E1	277
2.2	Switches and instruments illumination regulator E20 and trip recorder zeroing switch E123	277
2.3	Rear roller blind switch E149 and parking aid button E266	278
2.4	Glove compartment light W6	279
2.5	Glove compartment light switch E26	280
2.6	Steering column adjustment switch E167	281
2.7	Front left footwell lighting bulb L151 or front right footwell light bulb L152	281
2.8	Radio controlled clock Y8	282
2.9	Light conductor for front left sill panel moulding ambient lighting W67 and light conductor for front right sill panel moulding ambient lighting W68	283
2.10	Light conductor for rear left sill panel moulding ambient lighting W69 and light conductor for rear right sill panel moulding ambient lighting W70	284
3	Lights and switches in front doors	287
3.1	Central switch for window regulators in driver door E189 , rear lid remote release button E233 and fuel tank flap release button E319	287
3.2	Front right window regulator switch E41	288
3.3	Front interior locking buttons for central locking system E308 and E309	288
3.4	Door opener lighting L108 and L109	290
3.5	Front door contact switch	291
3.6	Front left entry light W31 or front right entry light W32	291
3.7	Door warning lamps W30 and W36	292
4	Lights and switches in rear doors	294
4.1	Rear window regulator switches E52 and E54	294
4.2	Rear interior locking buttons for central locking system E310 and E311	294



4.3	Rear door opener lighting L110 and L111	296
4.4	Rear door contact switch	297
4.5	Rear entry lights W33 and W34	297
4.6	Rear door warning lamps W37 and W38	298
5	Lights and switches in luggage compartment	300
5.1	Luggage compartment lights W18 and W35	300
5.2	Luggage compartment light switch F5	301
5.3	Rear lid closing button, in rear lid E406	301
6	Lights and switches in roof trim	303
6.1	Front interior light W1	303
6.2	Front reading lights W19 and W13	305
6.3	Sunroof switch E8	306
6.4	Rear interior and reading lights	306
6.5	Rear interior light buttons E327 and E329	308
6.6	Garage door opener	308
6.7	Switch unit in roof module	309
7	Lights and switches in centre console	311
7.1	Mirror adjustment switch E43 with mirror adjustment change-over switch E48	311
7.2	Key operated switch to deactivate front passenger side airbag E224	311
7.3	Starter button E408	312
7.4	Switch unit for front seat heating/front seat ventilation with button for damping, ESP and level control in the centre console	312
7.5	Switch unit for memory and seat heating/seat ventilation for rear seats in the 4-seat version	313
7.6	Switch unit for adjustable rear seat, 4-seater	314
7.7	Switch unit for height-adjustment of lumbar support of rear seat, 5-seater	315
8	Cigarette lighter	316
8.1	Cigarette lighter U1	316
9	Horn	317
9.1	Treble tone horn H2	317
9.2	Bass tone horn H7	318
97 - Wiring		320
1	Vehicle diagnosis, testing and information systems	320
2	Fuse holder	321
2.1	Fuse holder under dash panel on left	321
2.2	Pre-fuse box in luggage compartment on left	321
2.3	Thermal fuse box on driver side	324
3	Relay carrier	326
3.1	Relay carrier in front right footwell	326
4	Electronics boxes	328
4.1	E-box on left in luggage compartment	328
4.2	E-box on right in plenum chamber	330
5	Control units	333
5.1	Onboard supply control unit	333
5.2	Roof electronics control unit	335
6	Wiring harness and connector repairs	336