



Contents

91 - Communication	1
1 Communication systems	1
1.1 General description	1
2 Removing and installing control unit for front display and information control panel	2
2.1 Removing and installing control unit for front display and information control panel	2
2.2 Removing and installing control unit for front display and information control panel	2
3 Control unit for front display and information control panel, vehicles ► 10.08	8
3.1 General notes	8
3.2 Fault finding	9
3.3 Overview of control unit for front display and information control panel, vehicles ► 10.08	9
3.4 Overview of multi-pin connectors of control unit for front display and information control panel, vehicles ► 10.08	12
3.5 Replacing the optical fibre conductor	16
3.6 Adapting components, communication system	27
4 Control unit for front display and information control panel, vehicles 11.08 ►	28
4.1 General notes	28
4.2 Overview of control unit for front display and information control panel, vehicles 11.08 ►	29
4.3 Overview of multi-pin connectors of control unit for front display and information control panel, vehicles 11.08 ►	31
4.4 Anti-theft coding	35
4.5 Removing and installing external Bluetooth module for navigation	37
4.6 Adapting components, communication system	38
5 Sound system amplifier	39
5.1 "Standard sound system" amplifier for vehicles ► 10.08	39
5.2 "Premium sound system" amplifier for vehicles ► 10.08	43
5.3 "Dynaudio sound system" amplifier for vehicles 11.08 ►	46
5.4 Removing and installing amplifier	47
6 TV system with analogue TV tuner or analogue television reception	54
6.1 Fault finding	54
6.2 Removing and installing TV tuner	54
6.3 Pin assignment of 54-pin connector for TV tuner	56
7 TV system with digital TV tuner for digital television (DVB-T)	58
7.1 General notes	58
7.2 Removing and installing the digital TV tuner	58
7.3 Programming the remote control for the digital TV tuner	60
7.4 Changing remote control batteries	61
7.5 Fuse for the digital TV tuner	61
8 TV system with hybrid tuner for analogue reception and digital television (DVB-T)	63
8.1 Fault finding	63
8.2 Removing and installing TV tuner	63
8.3 Pin assignment of 54-pin connector for TV tuner	65
9 Navigation system with CD drive control unit	67
9.1 General notes	67
9.2 Fault finding	67
9.3 Removing and installing navigation with CD drive control unit	67
9.4 Overview of navigation system with CD drive control unit	69
10 Multi-media system (Rear Seat DVD)	70
10.1 General notes	70
10.2 Overview of multi-media system	70
10.3 System component connection assignments	73



10.4	Relays and fuses for the multi-media system	74
10.5	Removing and installing multimedia DVD changer	75
10.6	Removing and installing the display unit control unit	77
10.7	Removing and installing multimedia control unit	77
10.8	Removing and installing multimedia display units	78
10.9	Removing and installing additional connections unit for video and audio	79
11	Multi-media system (Rear Seat DVD), models 2012 ►	81
11.1	General notes	81
11.2	Overview of multi-media system	81
11.3	Removing and installing multimedia system module in luggage compartment	84
11.4	Removing and installing multimedia system control unit J650	88
11.5	Removing and installing control unit for multimedia display units J744	89
11.6	Removing and installing DVD changer R162	91
11.7	Removing and installing battery monitoring control unit J367 and suppression filter C10	93
11.8	Removing and installing multi-media display units	93
11.9	Removing and installing additional connections unit for audio and video R176	95
11.10	Relays and fuses for the multi-media system	95
12	Telematics system (only for vehicles for USA and Canada)	97
12.1	General notes	97
12.2	Overview of telematics system	98
12.3	Removing and installing telematics operating unit	99
12.4	Removing and installing telematics control unit	100
12.5	Fault finding on telematics system	106
12.6	Coding telematics system	108
12.7	Deactivating transport mode	108
13	CD changer	109
13.1	CD changer, vehicles ►10.08	109
13.2	CD changer, vehicles 11.08 ►	111
14	Multimedia system control unit for vehicles 11.08 ►	114
14.1	General notes	114
14.2	Overview of multimedia system control unit	114
14.3	Removing and installing multimedia control unit	115
15	Connection for external audio sources	117
15.1	General notes	117
15.2	Removing and installing connection for external audio sources	117
15.3	Contact assignment on connection for external audio sources	118
16	Loudspeaker system	119
16.1	General description	119
16.2	Overview of loudspeaker system	119
16.3	Removing and installing front bass loudspeakers	120
16.4	Removing and installing front mid-bass loudspeakers	121
16.5	Removing and installing front mid-range loudspeakers	122
16.6	Removing and installing front treble loudspeakers	122
16.7	Removing and installing rear bass loudspeakers	123
16.8	Removing and installing rear mid-range loudspeakers	124
17	Aerial systems	126
17.1	General notes	126
17.2	Overview of aerial system for vehicles ► 10.08	126
17.3	Overview of aerial system for vehicles 11.08 ► in conjunction with radio navigation system "RNS 810"	128
17.4	Overview of aerial system in vehicles 11.08 ► in conjunction with radio system "RCD 810"	129
17.5	Overview of connections on aerial modules for vehicles 11.08 ►	130
17.6	Removing and installing aerial amplifier	131



17.7	Removing and installing aerial module for telephone and navigation	132
17.8	Removing and installing roof aerial	133
17.9	Renewal of aerial wiring	134
18	Telephone system	135
18.1	Telephone system for vehicles ► 10.2008	135
18.2	Telephone system for vehicles 11.2008 ►	146
19	Multifunction steering wheel up to 05.2010	149
19.1	General notes	149
19.2	Fault finding	149
19.3	Removing and installing steering wheel multifunction buttons	149
19.4	Removing and installing multifunction steering wheel control unit	151
19.5	Adapting multifunction steering wheel components	153
20	Multifunction steering wheel from 05.2010	154
20.1	General notes	154
20.2	Fault finding	154
20.3	Removing and installing steering wheel multifunction buttons	154
20.4	Removing and installing multifunction steering wheel control unit	156
20.5	Adapting multifunction steering wheel components	157
21	Operating and display unit, rear	158
21.1	General notes	158
21.2	Removing and installing touchpad control unit J929	158
21.3	Removing and installing display unit control unit J146	159
21.4	Removing and installing battery for touchscreen control	162
22	Notes on operating mobile telephones and two-way radios	164
22.1	General notes	164
22.2	Notes on performing repair work	165
22.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	166
22.4	Transmitting power and aerial fitting locations	167
23	Suppression measures	168
23.1	Suppression measures	168

