



## Contents

<b>68 - Interior equipment</b>	<b>1</b>
<b>1 Interior mirror</b>	<b>1</b>
1.1 Automatic anti-dazzle interior mirror	1
1.2 Tools	1
1.3 Removing and installing interior mirror	1
<b>2 Compartments, covers and trims</b>	<b>4</b>
2.1 Tools	4
2.2 Removing and installing centre console (4-seater)	4
2.3 Removing and installing centre console (5-seater)	14
2.4 Removing and installing front ashtray	20
2.5 Removing and installing centre console front storage compartment (4-seater)	22
2.6 Removing and installing centre console rear storage compartment (4-seater)	23
2.7 Removing and installing drinks holder	24
2.8 Removing and installing footwell cover (front passenger side)	25
2.9 Removing and installing glove compartment	26
2.10 Removing and installing footwell cover (driver side)	28
2.11 Removing and installing fuse holder cover (driver side)	30
2.12 Removing and installing covers on side of dash panel	33
2.13 Removing and installing sun visor	34
<b>3 Grab handles</b>	<b>36</b>
3.1 Removing and installing roof grab handles	36
<b>69 - Passenger protection</b>	<b>37</b>
<b>1 Seat belts</b>	<b>37</b>
1.1 Tools	37
1.2 Safety regulations for belt tensioners	37
1.3 Disposal of belt tensioner units	38
1.4 Removing and installing front seat belts with two inertia reels	38
1.5 Removing and installing front seat belt	42
1.6 Removing and installing belt height adjustment (electric)	44
1.7 Removing and installing belt height adjustment (mechanical)	45
1.8 Removing and installing front seat belt latch	46
1.9 Separating multi-part buckle tongue	48
1.10 Joining shoulder and lap belts	50
1.11 Removing and installing rear seat belts (4-seater)	55
1.12 Removing and installing rear outer seat belts (5-seater)	56
1.13 Removing and installing centre seat belt (5-seater)	57
1.14 Removing and installing rear belt latch (4-seater)	59
1.15 Removing and installing rear belt latch (5-seater)	60
<b>2 Inspecting seat belts</b>	<b>62</b>
2.1 Points to check	62
<b>3 Checking child seat anchors (ISOFIX) after an accident</b>	<b>66</b>
3.1 Points to check	66
<b>4 Child seat anchor (USA, Canada)</b>	<b>67</b>
4.1 Removing and installing child seat anchor	67
<b>5 Airbag</b>	<b>68</b>
5.1 Overview of locations: airbag systems	68
5.2 Safety precautions when working on airbag	68
5.3 Disposal of airbag units	69
5.4 Deactivating the airbag	69
5.5 Renewing airbag units following an accident	70
5.6 Removing and installing airbag control unit J234 , 2003► 2008	70



5.7	Removing and installing airbag control unit J234 , 2009▶	72
5.8	Removing and installing airbag unit on driver side, 2003▶ 2010	74
5.9	Removing and installing airbag unit on driver side, 2011▶	81
5.10	Removing and installing mounting plate for airbag unit on driver side, 2003▶2010	84
5.11	Removing and installing steering wheel	86
5.12	Removing and installing front passenger airbag unit	88
5.13	Removing and installing driver and front passenger side airbag	93
5.14	Removing and installing curtain airbag on driver and passenger side	94
5.15	Removing and installing rear side-airbag	96
5.16	Removing and installing seat occupied recognition system (USA)	100
5.17	Adapting components	106
<b>6</b>	<b>Crash sensors</b>	<b>107</b>
6.1	Fitting locations overview: crash and side crash sensors	107
6.2	Removing and installing front crash sensors	107
6.3	Removing and installing front side crash sensors on floor	110
6.4	Removing and installing rear floor side crash sensors	112
<b>70</b>	<b>Trim, insulation</b>	<b>116</b>
<b>1</b>	<b>Dash panel</b>	<b>116</b>
1.1	Removing and installing dash panel	116
<b>2</b>	<b>Door trims</b>	<b>128</b>
2.1	Tools	128
2.2	Removing and installing front door trim on driver side	128
2.3	Removing and installing front door trim on passenger side	131
2.4	Removing and installing rear door trim	134
2.5	Removing and installing ashtray in rear door	140
<b>3</b>	<b>Sun blinds</b>	<b>141</b>
3.1	Removing and installing side sun blind	141
<b>4</b>	<b>Pillar trims</b>	<b>148</b>
4.1	Tools	148
4.2	Removing and installing upper A-pillar trim	148
4.3	Removing and installing lower trim of A-pillar on front passenger side	150
4.4	Removing and installing lower trim of A-pillar on driver side	151
4.5	Removing and installing lower trim for A-pillar with illuminated lettering »Edition 6«	153
4.6	Removing and installing upper B-pillar trim	154
4.7	Removing and installing lower B-pillar trim	156
4.8	Removing and installing upper C-pillar trim	157
4.9	Removing and installing lower trim of C-pillar	158
4.10	Removing and installing wheel housing trim	160
<b>5</b>	<b>Rear shelf</b>	<b>162</b>
5.1	Removing and installing upper part of rear shelf	162
5.2	Removing and installing lower part of rear shelf	164
<b>6</b>	<b>Luggage compartment trims</b>	<b>167</b>
6.1	Tools	167
6.2	Removing and installing rear lock carrier cover	167
6.3	Removing and installing rain channel moulding	168
6.4	Removing and installing rear lid trim	169
6.5	Removing and installing right storage compartment	171
6.6	Removing and installing side panel trim for luggage compartment	172
6.7	Removing and installing rear bulkhead trim	174
<b>7</b>	<b>Roof trims</b>	<b>177</b>
7.1	Tools	177
7.2	Removing and installing moulded headliner (vehicle with sliding/tilting sunroof)	177
<b>72</b>	<b>Seat frames</b>	<b>182</b>



<b>1</b>	<b>Front seats</b>	<b>182</b>
1.1	Tools	182
1.2	Removing and installing front seat	183
1.3	Removing and installing seat trim	187
1.4	Removing and installing seat switch unit	189
1.5	Removing and installing seat control unit	190
1.6	Removing and installing seat longitudinal adjustment	192
1.7	Removing and installing drive motor for seat longitudinal adjustment	193
1.8	Removing and installing seat tilt angle adjustment	195
1.9	Removing and installing seat depth adjustment	196
1.10	Removing and installing seat height	197
1.11	Removing and installing seat backrest	199
1.12	Removing and installing lumbar support	201
1.13	Removing and installing backrest cover, 18 / 16-way seat	202
1.14	Removing and installing backrest cover, 12-way seat	204
1.15	Removing and installing head restraint for seat	205
<b>2</b>	<b>Rear seats</b>	<b>208</b>
2.1	Tools	208
2.2	Removing and installing rear seat cushion, 10-way seat	208
2.3	Removing and installing backrest, 10-way seat	209
2.4	Removing and installing seat frame, 10-way seat	212
2.5	Removing and installing control unit, 10-way seat	213
2.6	Removing and installing head restraint for rear seat	214
2.7	Removing and installing rear bench seat, 5-seater	215
2.8	Removing and installing rear seat backrest, 5-seater	218
<b>74</b>	<b>Seat - padding, covers</b>	<b>222</b>
<b>1</b>	<b>Front seat covers and padding</b>	<b>222</b>
1.1	Tools	222
1.2	Removing and installing front seat cushion cover and padding, 18-way seat	222
1.3	Removing and installing front seat backrest cover and padding, 18-way seat	224
<b>2</b>	<b>Rear seat covers and padding</b>	<b>227</b>
2.1	Tools	227
2.2	Removing and installing rear seat cover and padding, 10-way seat	227
2.3	Removing and installing rear seat backrest cover and padding, 10-way seat	231
2.4	Removing and installing centre armrest, 4-seater	237
2.5	Removing and installing rear bench seat cover and padding, 5-seater	238
2.6	Removing and installing rear bench seat backrest cover and padding, 5-seater	242
2.7	Removing and installing centre armrest, 5-seater	245
2.8	Removing and installing drinks holder in centre armrest, 5-seater	247
2.9	Removing and installing centre head restraint, 5-seater	250
2.10	Replacing rear seat heater elements	251
<b>76</b>	<b>Gas, water, electricity</b>	<b>253</b>
<b>1</b>	<b>Electrical components and units</b>	<b>253</b>
1.1	Removing and installing refrigerator (4-seater)	253
1.2	Removing and installing refrigerator (5-seater)	255

