



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Fitting locations of adaptive cruise control senders	1
1.3 Assembly overview - lock carrier, service position	2
1.4 Service position	4
1.5 Assembly overview - lock carrier with attachments	6
1.6 Removing and installing lock carrier with add-on parts	6
1.7 Assembly overview - lock carrier attaching parts	9
1.8 Installation instructions for longitudinal members	10
1.9 Installation instructions for vehicles with adaptive cruise control	10
1.10 Removing and installing ACC senders	11
2 Wing	13
2.1 Tools	13
2.2 Assembly overview - front wing	13
2.3 Removing and installing front wing	15
2.4 Front wing - bolting sequence	17
3 Noise insulation	18
3.1 Tools	18
3.2 Assembly overview - noise insulation in vehicles up to 05.2010	18
3.3 Assembly overview - noise insulation in vehicles up to 06.2010	19
55 - Bonnet, rear lid	20
1 Contact corrosion!	20
2 Bonnet	21
2.1 Tools	21
2.2 Assembly overview - bonnet of vehicles up to 05.2010	21
2.3 Assembly overview - bonnet of vehicles up to 06.2010	23
2.4 Removing gas strut	24
2.5 Service position for bonnet	24
2.6 Removing and installing insulation of vehicles up to 05.2010	25
2.7 Removing and installing insulation of vehicles up to 06.2010	25
3 Lock and release components of bonnet	28
3.1 Assembly overview - bonnet lock and release components of vehicles up to 05.2010	28
3.2 Assembly overview - bonnet lock and release components of vehicles up to 06.2010	29
3.3 Removing and installing bonnet lock	29
3.4 Adjusting bonnet and bonnet lock	33
3.5 Detaching Bowden cable	35
3.6 Removing and installing release lever	35
4 Rear lid	38
4.1 Tools	38
4.2 Assembly overview - aluminium hinge and hydraulic unit	39
4.3 Removing and installing hydraulic unit	40
4.4 Assembly overview - steel hinge	41
4.5 Removing gas strut	42
4.6 Releasing gas from gas strut	42
4.7 Adjusting rear lid	42
4.8 Basic adjustment of rear lid	42
4.9 Adjusting striker plate with lock cover removed	44
4.10 Adjusting striker plate with lock cover installed	44
4.11 Adjusting dampers	45
5 Lock parts with servo rear lid opener	46



5.1	Assembly overview - lock parts with servo rear lid opener	46
5.2	Removing and installing lock cylinder carrier	47
5.3	Removing and installing lid lock	48
6	Lock parts with basic rear lid opener	49
6.1	Assembly overview - lock parts with basic rear lid opener	49
6.2	Removing and installing lock cylinder carrier	50
6.3	Removing and installing lid lock	51
7	Tank flap unit	52
7.1	Tools	52
7.2	Removing and installing tank flap unit	52
57	Front doors, door components, central locking	54
1	Contact corrosion!	54
2	Front door	55
2.1	Tools	55
2.2	Assembly overview - front door	56
2.3	Removing and installing door	58
2.4	Adjusting door	59
2.5	Adjusting striker pin	59
2.6	Assembly overview - door handle and door lock	60
2.7	Removing and installing lock cylinder housing	61
2.8	Removing and installing door handle	63
2.9	Door handle with (Keyless Entry) cable routing	65
2.10	Removing and installing door lock	65
2.11	Assembly overview - door power latching motor (V 278)	69
2.12	Door seals	70
2.13	Removing and installing door inner seal	71
2.14	Removing and installing door outer seal	71
2.15	Door insulation	73
2.16	Removing and installing insulation	74
2.17	Adapting ignition keys to remote control	75
2.18	Removing and installing batteries for folding main key with remote control system	75
2.19	Assembly overview - batteries for main key (foldable) with remote control, vehicles from 01.2004	76
2.20	Removing and installing batteries for folding main key with remote control system, vehicles from 01.2004	77
2.21	Assembly overview - batteries for main key (foldable) with remote control, vehicles from 06.2010	78
2.22	Removing and installing batteries for folding main key with remote control system, vehicles from 06.2010	79
58	Rear doors, door components	81
1	Contact corrosion!	81
2	Rear door	82
2.1	Tools	82
2.2	Assembly overview - rear door	83
2.3	Removing and installing door	84
2.4	Adjusting door	85
2.5	Adjusting striker pin	86
2.6	Assembly overview - door handle and door lock	86
2.7	Removing and installing door handle	88
2.8	Door handle with (Keyless Entry) cable routing	90
2.9	Removing and installing door lock	91
2.10	Assembly overview - door power latching motor (V 278)	95
2.11	Door seals	96
2.12	Removing and installing door inner seal	97



2.13	Removing and installing door outer seal	97
2.14	Door insulation	99
2.15	Installing insulation	100
60	Sunroof	101
1	Sunroof with glass panel	101
1.1	Tools	101
1.2	Function	101
1.3	Assembly overview	102
1.4	Removing sliding/tilting sunroof glass panel	104
1.5	Installing sliding/tilting sunroof glass panel	104
1.6	Adjusting height of sliding/tilting sunroof glass panel	105
1.7	Checking parallel running of glass panel	106
1.8	Adjusting parallel running of glass panel	106
1.9	Renewing panel seal	107
1.10	Removing and installing wind deflector	107
1.11	Adjusting wind deflector	108
1.12	Removing and installing sliding headliner	108
1.13	Adjusting parallel running of sliding headliner	109
1.14	Removing and installing sliding/tilting sunroof drive	110
1.15	Adjusting drive for sliding/tilting sunroof (zero position)	111
1.16	Removing and installing drive for sliding headliner	112
1.17	Removing and installing wind deflector drive	113
1.18	Removing and installing sliding/tilting sunroof automatic preselector	114
1.19	Removing switches for sunroof roller blind	116
1.20	Removing and installing carrier unit	117
1.21	Operating without current	119
1.22	Cleaning water drain hoses	119
1.23	Adapting components of sliding/tilting sunroof	121
1.24	Coding sliding/tilting sunroof	122
2	Remove sliding/tilting sunroof with solar panel	123
2.1	Tools	123
2.2	Function	123
2.3	Assembly overview	124
2.4	Removing sliding/tilting sunroof solar panel	126
2.5	Installing sliding/tilting sunroof solar panel	126
2.6	Adjusting sliding/tilting sunroof solar panel height	127
2.7	Checking parallel running of solar panel	128
2.8	Adjusting parallel running of solar panel	128
2.9	Renewing panel seal	129
2.10	Removing and installing wind deflector	129
2.11	Adjusting wind deflector	130
2.12	Removing and installing solar panel trim	130
2.13	Removing and installing sliding/tilting sunroof drive	131
2.14	Adjusting drive for sliding/tilting sunroof (zero position)	132
2.15	Removing and installing wind deflector drive	132
2.16	Removing and installing sliding/tilting sunroof automatic preselector	134
2.17	Removing and installing DC-DC converter	135
2.18	Removing solar contact	135
2.19	Removing and installing carrier unit	136
2.20	Operating without current	138
2.21	Cleaning water drain hoses	138
2.22	Adapting components of sliding/tilting sunroof	140
2.23	Coding sliding/tilting sunroof	141
63	Bumpers	142



1	Front bumper cover of vehicles up to 05.2010	142
1.1	Repairing front bumper cover	142
1.2	Tools	142
1.3	Assembly overview - front bumper cover	142
1.4	Removing and installing front bumper cover	143
1.5	Front bumper cover add-on parts	146
1.6	Front bumper cover substructure parts	147
1.7	Installation notes for ACC sensor on right G259 / left -G 258-	148
1.8	Removing and installing adaptive cruise control sensor -ACC-	148
1.9	Removing and installing bumper cover insert	149
1.10	Assembling bumper cover insert	150
2	Front bumper cover of vehicles from 06.2010	152
2.1	Repairing front bumper cover	152
2.2	Tools	152
2.3	Assembly overview - front bumper cover	152
2.4	Removing and installing front bumper cover	153
2.5	Front bumper cover add-on parts	156
2.6	Front bumper cover substructure parts	157
3	Rear bumper cover	158
3.1	Repairing bumper cover	158
3.2	Tools	158
3.3	Assembly overview - rear bumper cover	158
3.4	Removing and installing rear bumper cover	160
3.5	Rear bumper cover add-on parts	162
3.6	Rear bumper cover substructure parts	163
3.7	Assembly overview - towing bracket	163
64 - Glazing		165
1	Flush bonded windows	165
1.1	Tools	165
1.2	Materials	167
1.3	Repairing windscreen	167
1.4	Assembly overview - windscreen	167
1.5	Removing and installing plenum chamber cover	169
1.6	Removing windscreen	174
1.7	Installing windscreen	175
1.8	Preparing windscreen with viewing window for chassis number for vehicles without chassis number	176
1.9	Assembly overview - rear window	176
1.10	Removing undamaged rear window	178
1.11	Installing rear window	179
1.12	Preparing a removed windscreen for glazing	179
1.13	Preparing new window for glazing	180
1.14	Preparing body flange for glazing	181
1.15	Installation instructions	181
1.16	Minimum curing period	182
1.17	Touching up paint damage	182
1.18	Cleaning off excess adhesive sealing material	182
2	Front door windows	184
2.1	Assembly overview - front door window	184
2.2	Removing and installing door window	185
2.3	Removing and installing electric window regulator	186
2.4	Removing and installing assembly carrier	187
2.5	Removing and installing window slot seal	192
2.6	Removing and installing trim	192



3	Rear door windows	194
3.1	Assembly overview - rear door window	194
3.2	Removing and installing door window	195
3.3	Removing and installing electric window regulator	196
3.4	Removing and installing assembly carrier	197
3.5	Removing and installing window channel	201
3.6	Removing and installing window slot seal	203
3.7	Removing and installing trim	203
66	- Exterior equipment	205
1	Removing and installing wheel housing liner	205
1.1	Front wheel housing liner	205
1.2	Rear wheel housing liner	206
2	Exterior mirror	207
2.1	Tools	207
2.2	Assembly overview - rear-view mirror	207
2.3	Removing and installing mirror glass	208
2.4	Removing and installing mirror housing	208
2.5	Removing and installing side turn signal repeaters	209
2.6	Removing and installing entry light	210
2.7	Removing and installing warning lamp for lane change assist	210
2.8	Assembly overview - rear-view mirror	211
2.9	Removing and installing rear-view mirror	212
2.10	Removing and installing cap	212
3	Radiator grille of vehicles up to 05.2010	214
3.1	Assembly overview - radiator grille	214
3.2	Removing and installing radiator grille	214
4	Radiator grille of vehicles from 06.2010	216
4.1	Assembly overview - radiator grille	216
4.2	Removing and installing radiator grille	217
4.3	Removing and installing VW emblem on vehicles without adaptive cruise control	219
4.4	Removing and installing VW emblem on vehicles with adaptive cruise control	222
5	Roof mouldings	225
5.1	Assembly overview - roof strip	225
5.2	Removing and installing securing clips for roof moulding	226
5.3	Assembly overview - drip channel	226
5.4	Assembly overview - water deflector	228
6	Protective strips	229
6.1	Assembly overview - protective moulding	229
6.2	Renewing protective side strips	230
6.3	Assembly overview - trim strips on wing and side panel	231
6.4	Renewing trim strip insert	231
6.5	Assembly overview - cover strips	232
7	Sill trim	233
7.1	Assembly overview - sill protective strip	233
7.2	Assembly overview - sill panel mouldings	234
7.3	Renewing sill panel moulding	235
8	Lettering	236
8.1	Tools	236
8.2	Installation instructions for lettering and emblems	236
8.3	Rear lettering - dimensions	236
8.4	Dimensions of Volkswagen R GmbH emblem	238

